


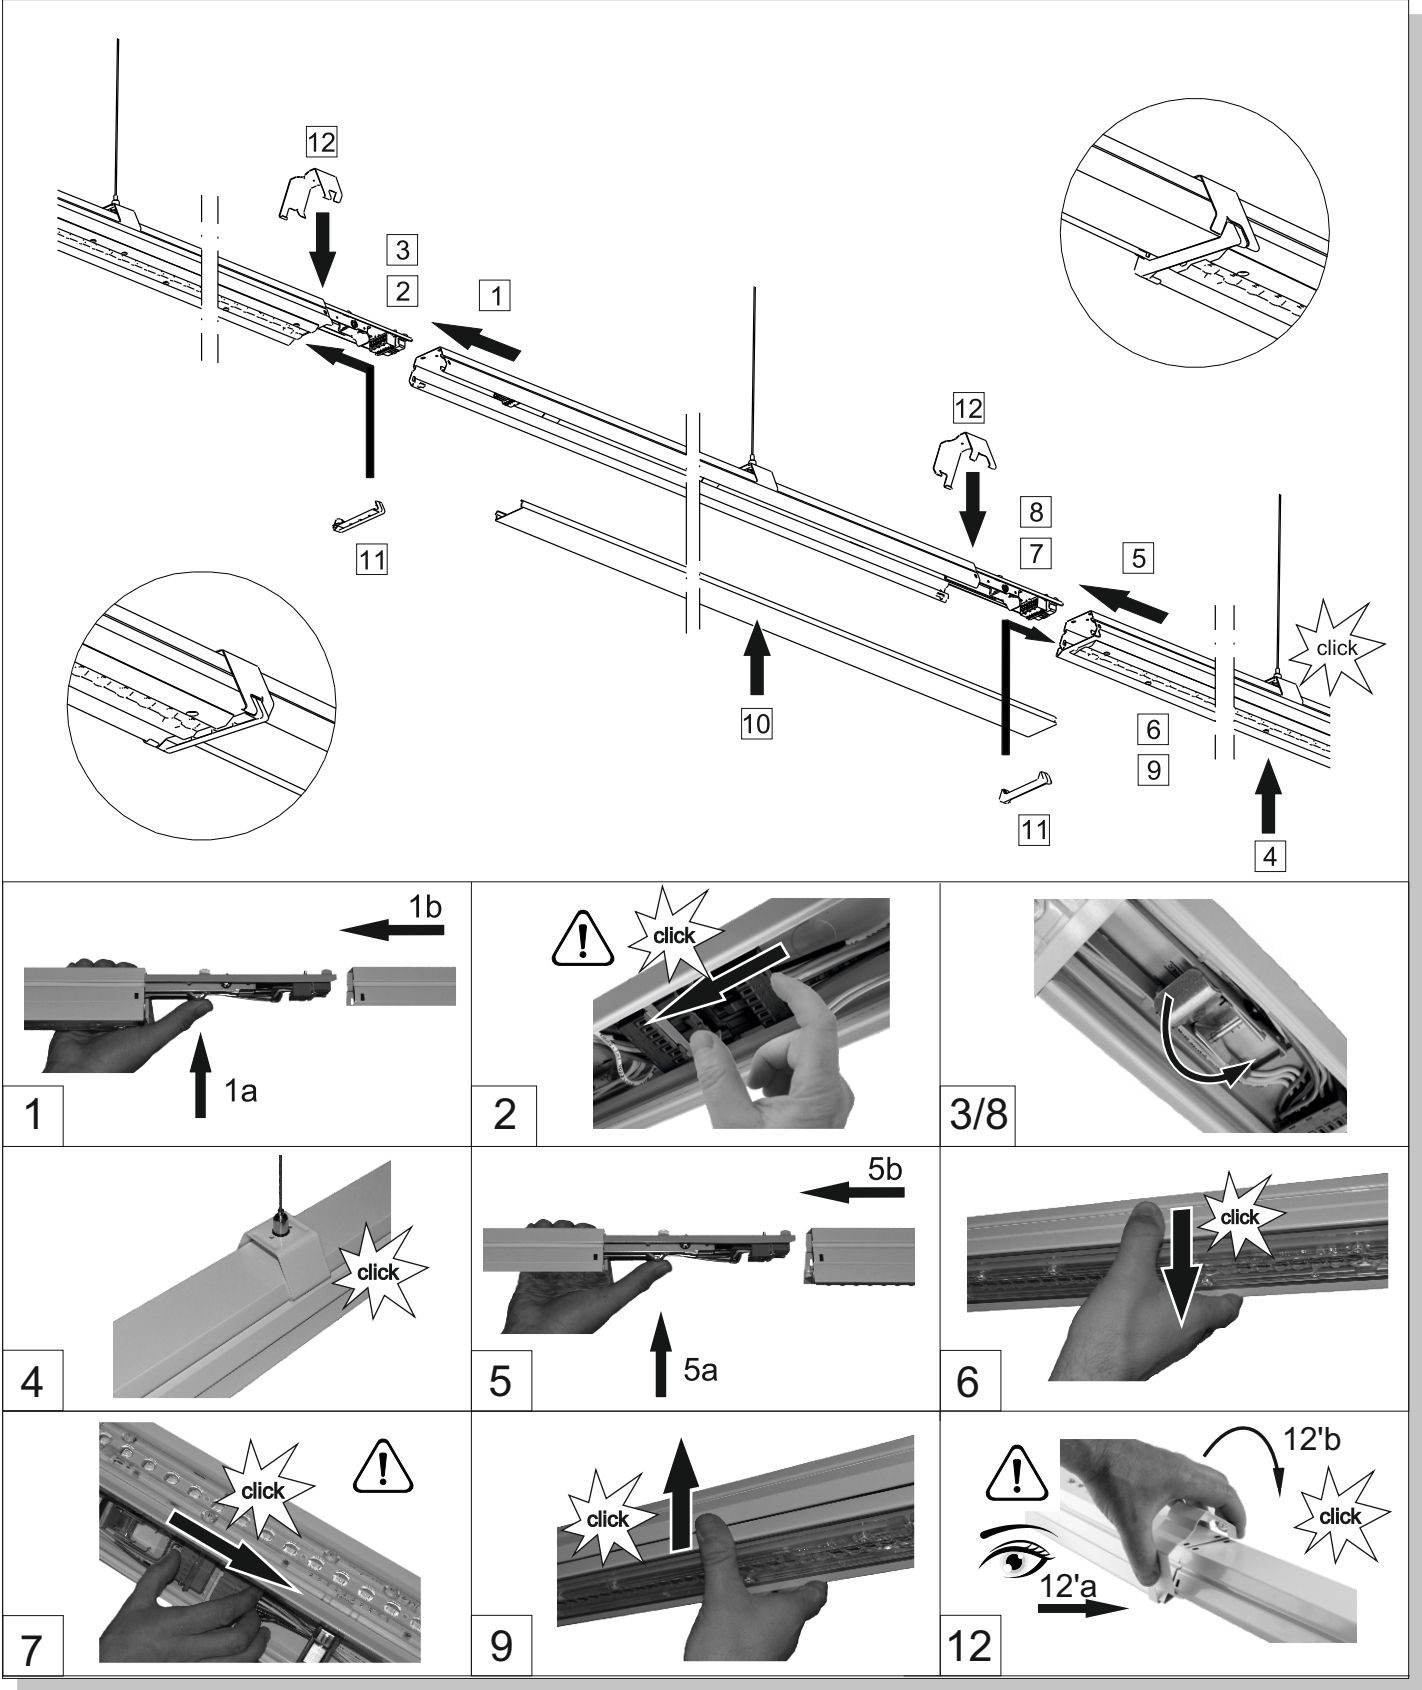

Coreline Trunking LL120X 1xPSD

Mounting instructions

Instructions de montage
Montageanleitung
Montage instruktic
Instruzioni di montaggio

Instrucciones de montaje
Instruções de montagem
Monteringsinstruktioner
Monteringsvejledning


Kokoonpano- ja kiinnitysohjeet
Montaj yönergesi
Szerelési utasítások
Instrukcja montażu

Návod k montáži
Návod k montáži

~220V...240V
50 Hz/60 Hz

CE

Prevent water from entering on or in the luminaire at installation and during use of the luminaire

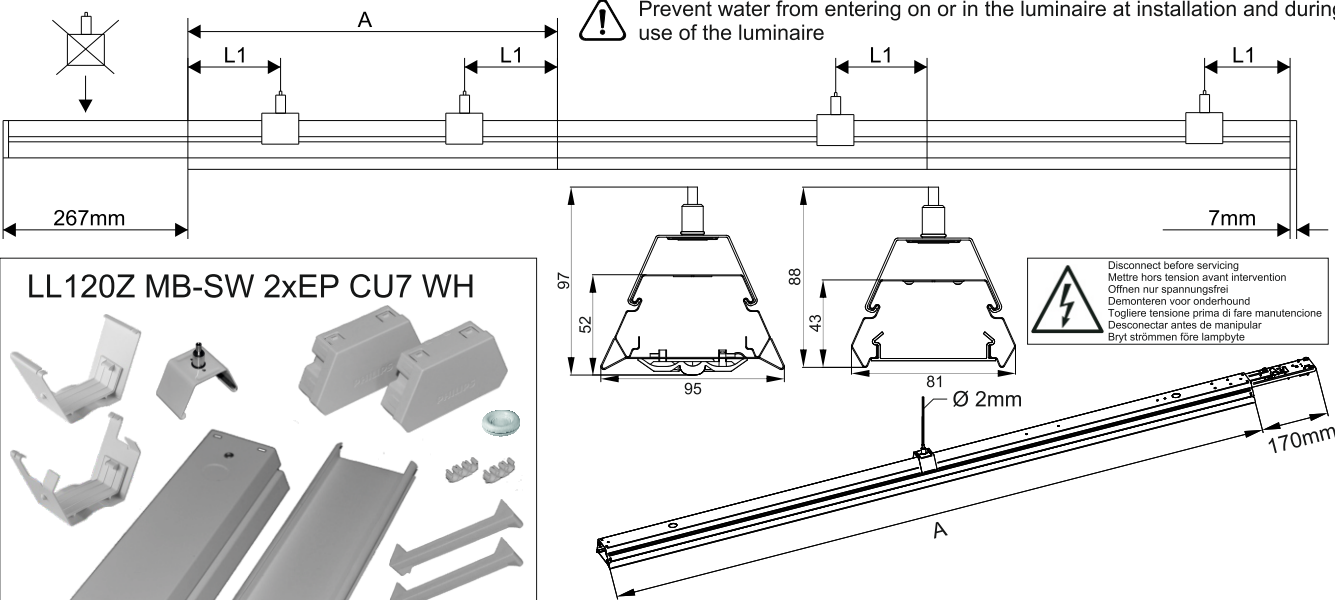

LL120Z MB-SW 2xEP CU7 WH

max 2,5 mm²


*Second connector is to supply power in the middle of line or second end.


Luminaire type	Max No. of luminaires on MCB (16A type-B)		Inrush Current Peak [A/μs]
	PSD	No driver + PSD	
LL120X	12	15	4,8/2300

$I_{L1max} = I_{L2max} = I_{L3max} = 16A$ (MCB B type)
Max current load of each phase line in luminaire.

AWARE! LET SHORTCUT DALI INTERFACE IF NOT USED

Luminaire type	SYSTEM FLUX	Wattage	Ta	A [m]	L1 [m]	kg max	
LL120X	LED90S/840	9000	64	-20°C to +35°C	3,45	0,50 - 0,80	7,5
	LED160S/840	16000	108	-20°C to +35°C			
LL120X O	LED84S/840	8400	64	-20°C to +35°C	3,45	0,50 - 0,80	7,5
	LED150S/840	15000	108	-20°C to +35°C			


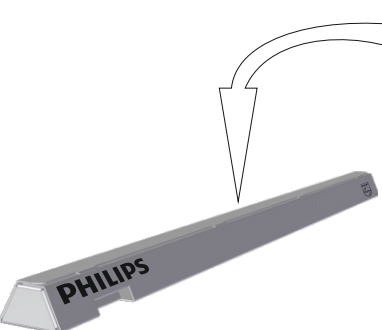


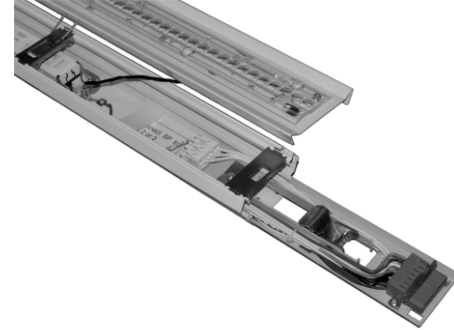

* LL120X - 2 pcs.

4427 102 21684
© 01/2019 Signify Holding. All rights reserved
Data subject to change without notice
Printed in Poland
www.philips.com/lighting

PHILIPS

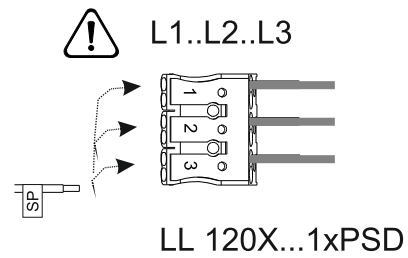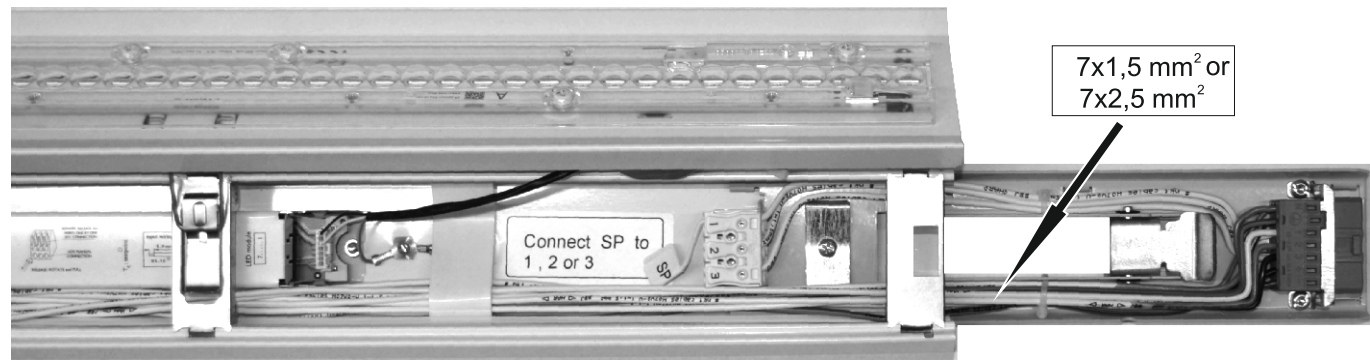

[SP] - Select phase (factory setting is L1)

