

# INSTALLATION INSTRUCTIONS

## SFRA LUMINAIRE TO RND/SQ POLE

**IMPORTANT: READ ALL INSTRUCTIONS BEFORE PERFORMING ANY WORK.  
BE SURE ALL POWER IS OFF PRIOR TO INSTALLING LUMINAIRES.**

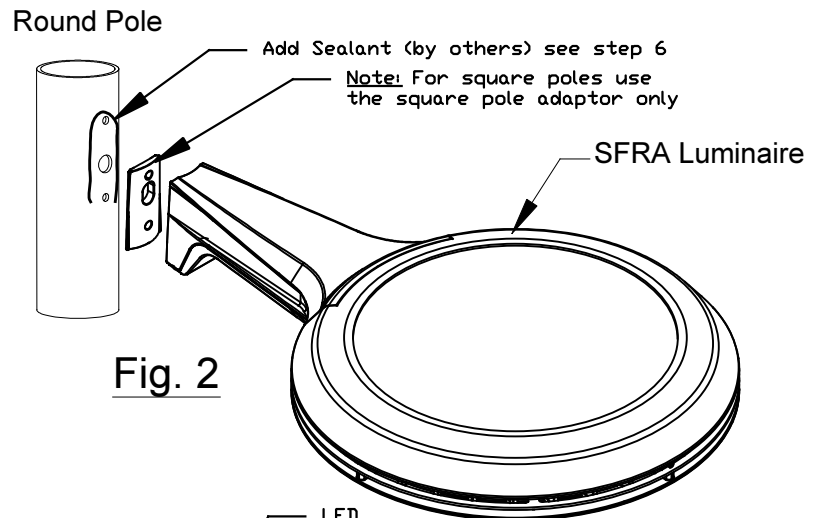
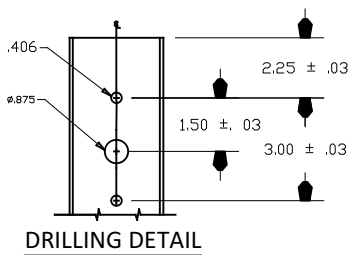


Fig. 2

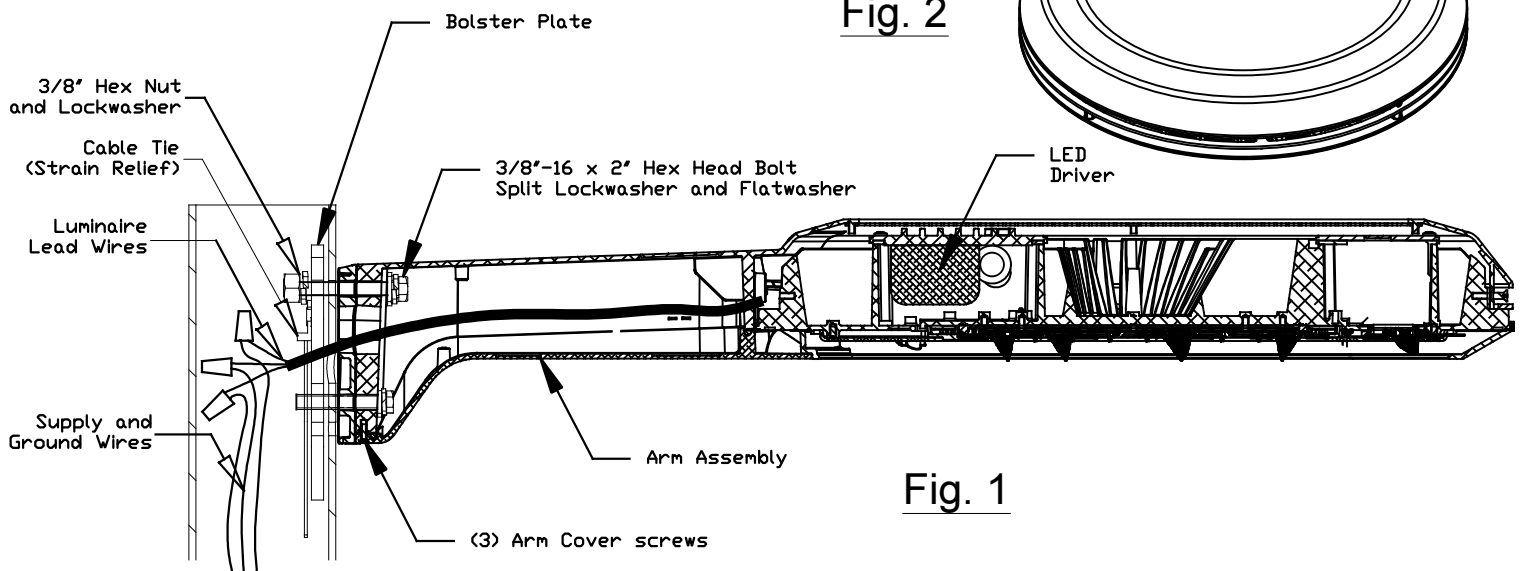


Fig. 1

1. Located on the bottom of the arm assembly, loosen (3) # 6-32 phillips screws using phillips head screw driver. Open arm cover. (See Fig. 1)
2. Insert the bolster plate into the inside of pole with tapped hole toward the base. Position luminaire so the top mounting hole is aligned with the top hole on the pole. Install Split lockwasher and flat washer to the 3/8-16 x 2" hex head bolt and bolt through the top mounting hole. Install split lockwasher and nut to the end of the top bolt.  
**NOTE: Square Poles:** Use square pole adaptor.
3. Thread 3/8-16 x 2" hex head bolt with lockwasher into the bottom tapped hole in the bolster plate. **Tighten the two bolts to 18 ft-lbs .**
4. Connect supply and ground wires to Luminaire lead wires. Make wire connections per NEC or applicable local codes.
5. Secure the supply wires with cable tie (strain relief) on the bolster plate and in the arm.
6. Apply bead of suitable weatherproof sealant along horizontal top, left and right edges of cast mounting arm , where it contacts the pole to prevent water entry. (See Fig. 2)
7. Install photo control if used.
8. Reinstall Arm Cover.
9. Install bird deterrent if applicable (See Fig. 3).
10. Energize Lu minaire to test installation.

# INSTALLATION INSTRUCTIONS

## SFRA LUMINAIRE TO RND/SQ POLE

**IMPORTANT: READ ALL INSTRUCTIONS BEFORE PERFORMING ANY WORK.  
BE SURE ALL POWER IS OFF PRIOR TO INSTALLING LUMINAIRES.**

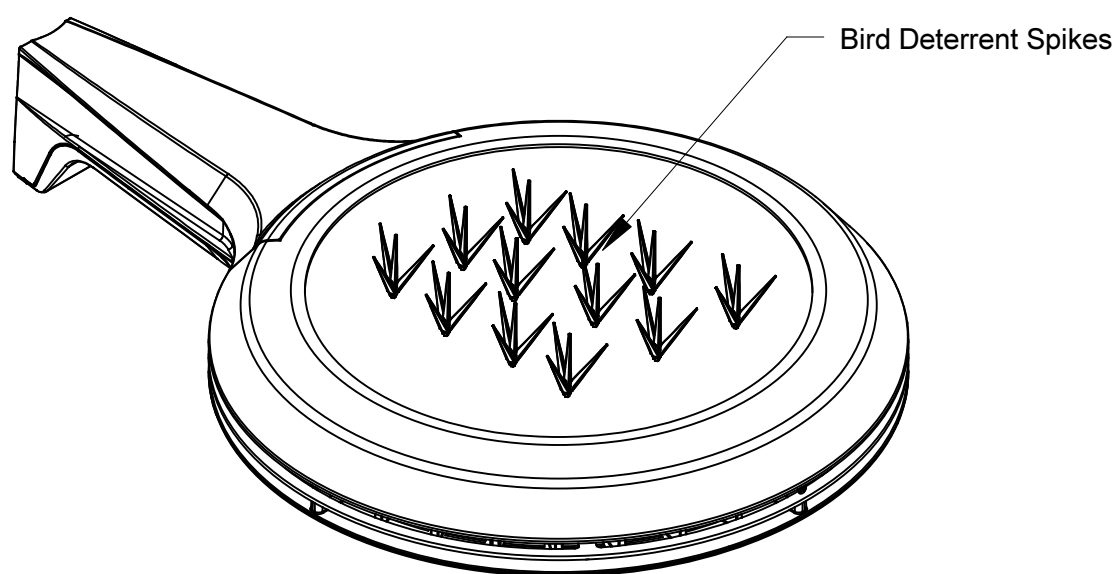


Fig. 3

