
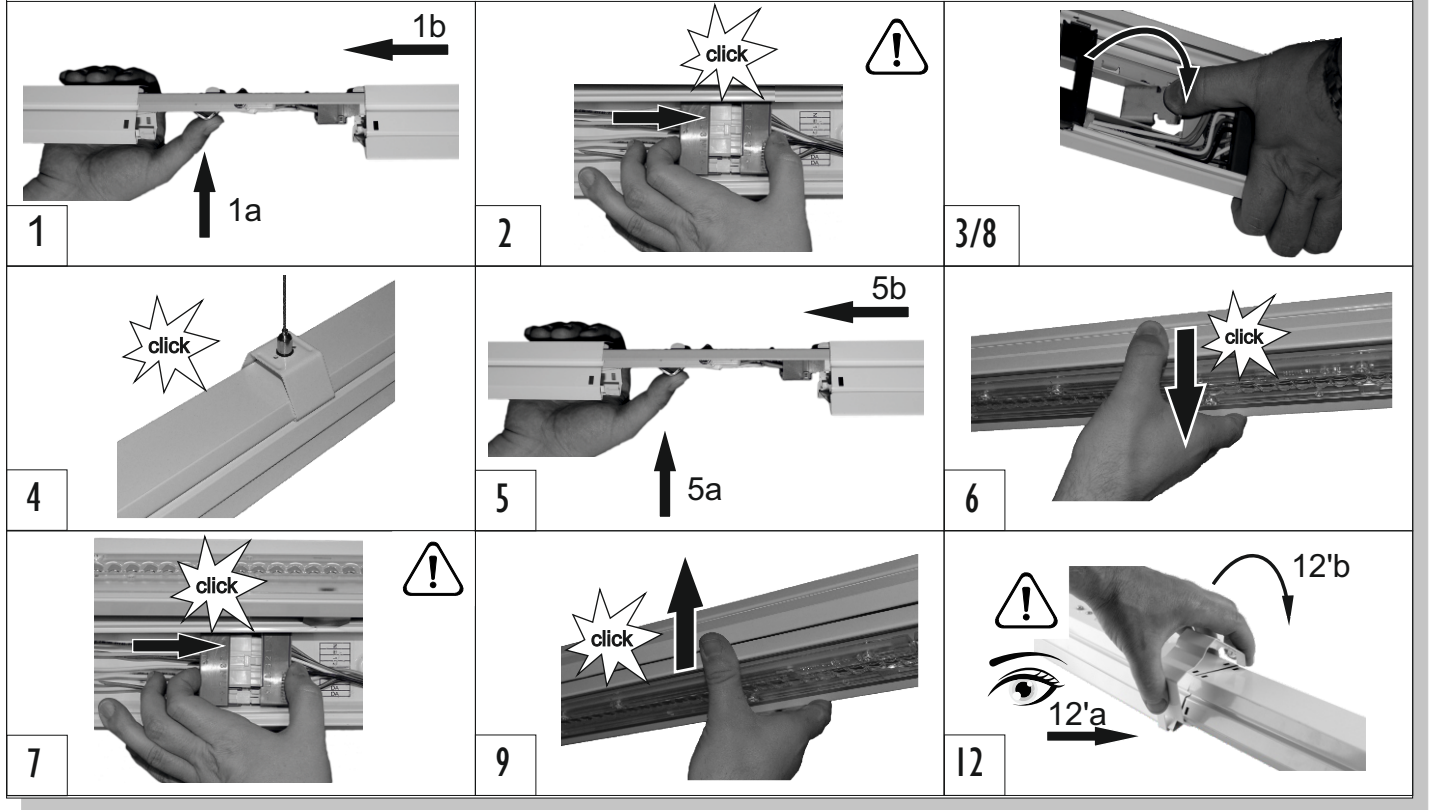


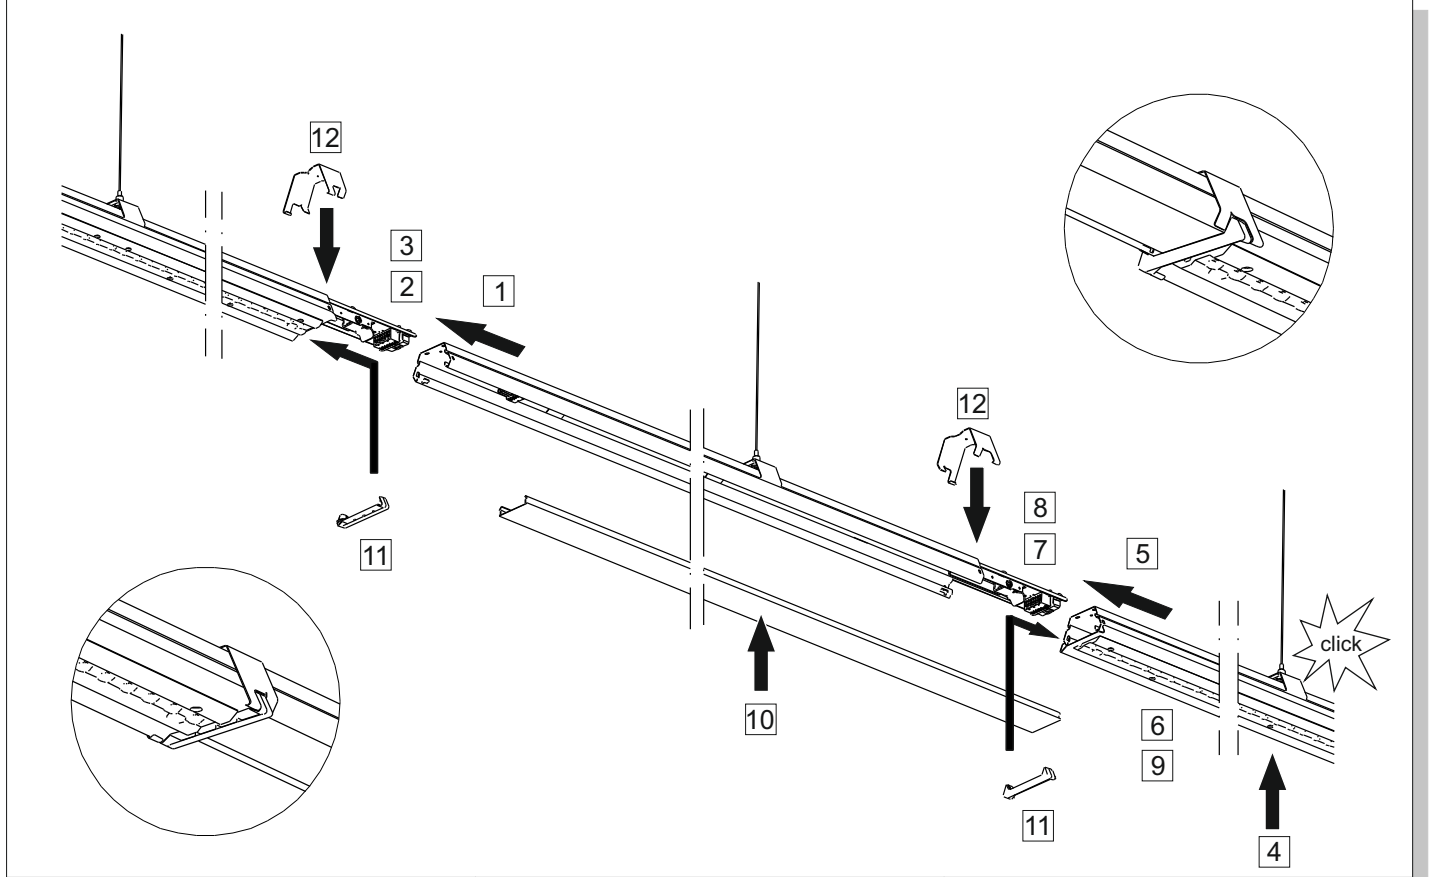

Coreline Trunking LL120X 9 Mounting instructions

Instructions de montage
Montageanleitung
Montage instructie
Istruzioni di montaggio



Instrucciones de montaje
Instruções de montagem
Monteringsinstruktioner
Monteringsvejledning

Kokoonpano- ja kiinnitysohjeet
Montaj yönergesi
Szerelési utasítások
Instrukcja montażu

Návod k montáži
Návod k montáži

~220V...240V
50 Hz/60 Hz

IP20

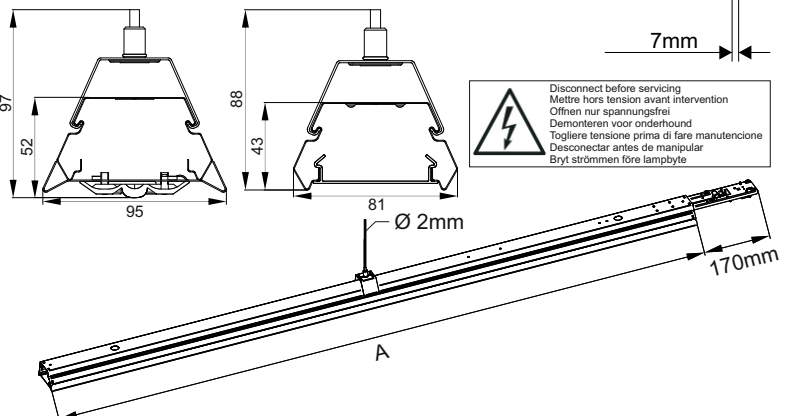
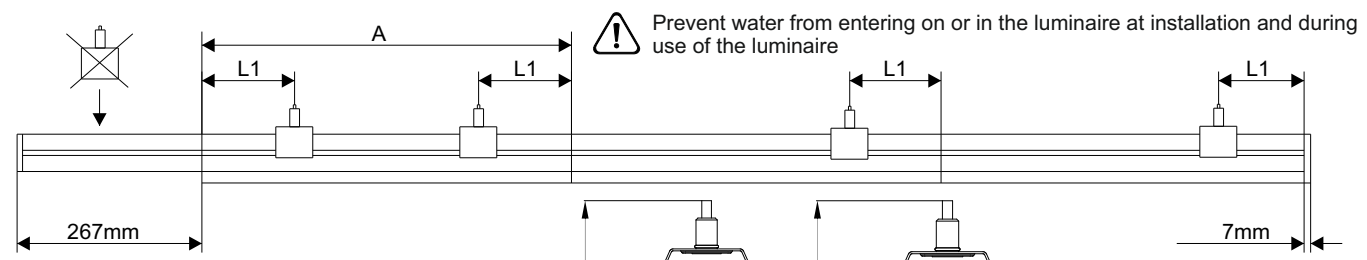


Luminaire type	Max No. of luminaires on MCB (16a type-B)			Inrush Current Peak [A/μs]	
	PSD	PSU	No driver + PSU or PSD	PSD	PSU
LL120X	12	12	15	22/2750	19/280
LL121X	24	24	30		




AWARE! LET SHORTCUT DALI INTERFACE IF NOT USED

Luminaire type		SYSTEM FLUX	Wattage	Ta	A [m]	L1 [m]	kg max
LL120X	LED90S/840/865	9000	64	-20°C to +35°C	3,45	0,50 - 0,80	7,5
	LED160S/840/865	16000	108	-20°C to +35°C			
	LED152S/830	15200	108	-20°C to +35°C			
LL121X	LED45S/840/865	4500	32	-20°C to +35°C	1,73	0,30 - 0,50	4,5
	LED80S/840/865	8000	54	-20°C to +35°C			
	LED76S/830	7600	54	-20°C to +35°C			



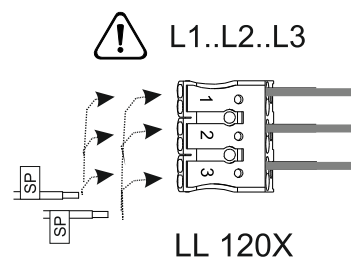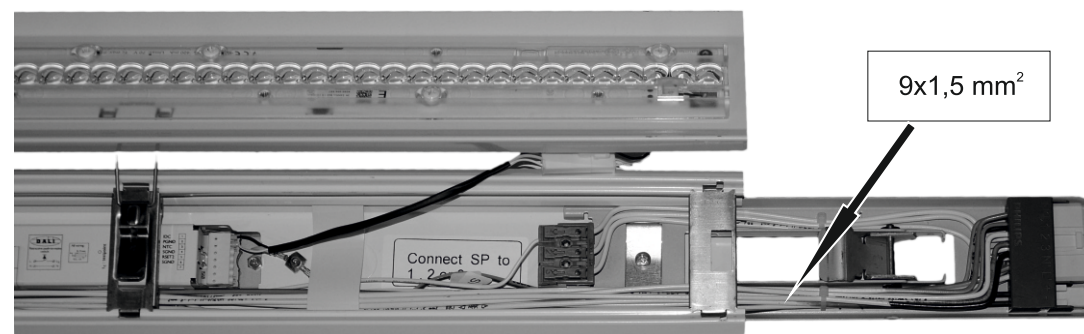

[SP] - Select phase (factory setting is L1)

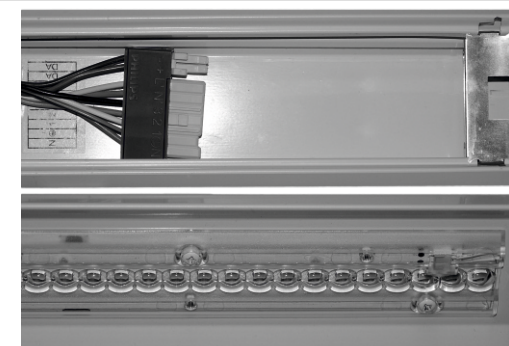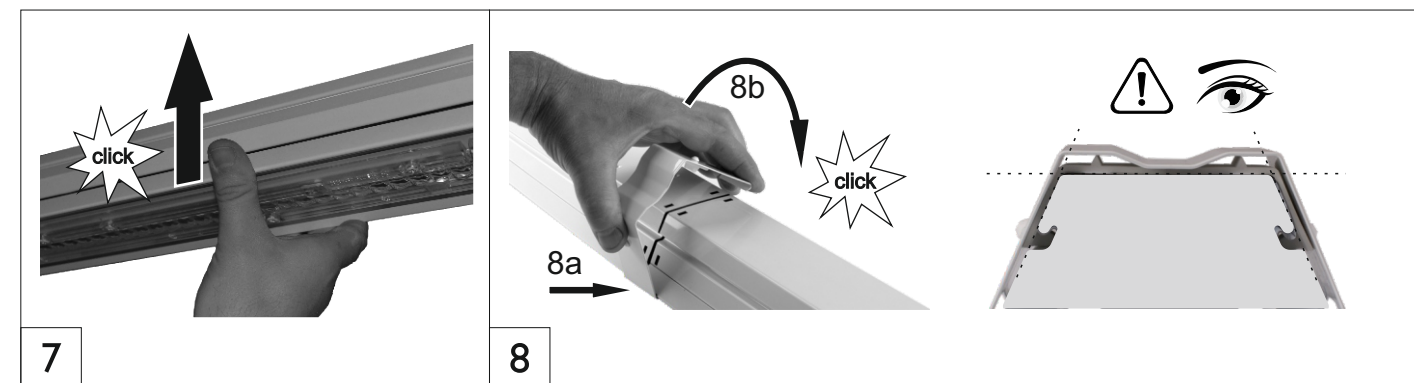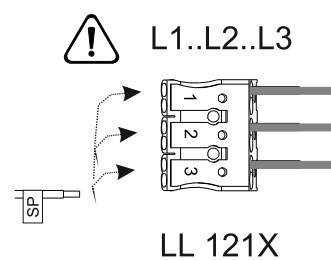

N	1	2	3	N	L	DA	DA
---	---	---	---	---	---	----	----

LL120/121X...PSD...9 WH
LL120/121X 9 WH BC
LL121X...PSD...9 EL3 WH

