

 
 
 




Dismantling Recommendation on Disposal at End of Life

•Composition Explanation –Ceiling Type A

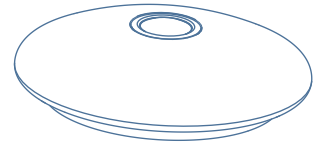

Plastic part	Electrical part	Metal part
Cover 	PCB 	Base 
Lens 	Driver PCB 	Sensor 
Other small plastic part: -Terminal block -Connector -Driver box -Others	Other small electrical part - Sensor PCB	Other small metal part -Screws

Dismantling

- Steps: refer to disassembly instruction
- Type: without permanent damage


Recommendation on disposal

- Plastic part :reuse and recycling
- Electrical part :incineration and disposal
- Metal part :recycling


Philips and the Philips shield Emblem are registered trademarks of Koninklijke Philips N.V

•The Steps to Remove the Components


1 Type A

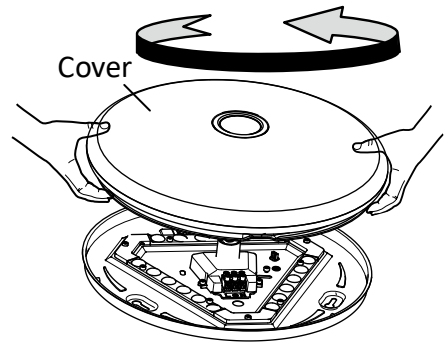


1 Type B

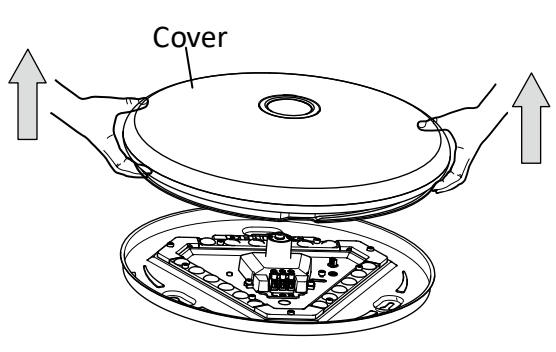

2

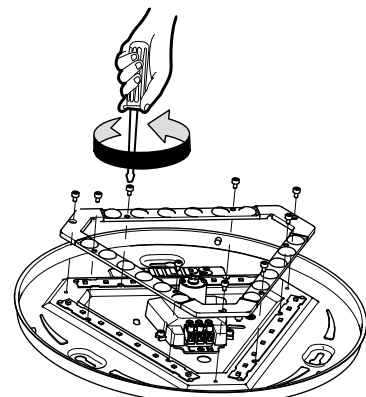

3

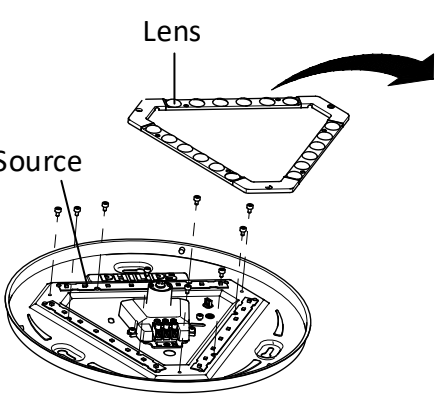

Philips and the Philips shield Emblem are registered trademarks of Koninklijke Philips N.V