

# PHILIPS

UID8460/10

Wireless switch, scene recall








## Installation Instructions

Instructions d'installation  
Instrucciones de instalación

Istruzioni per l'installazione  
Installatie-instructies

Installationsanweisungen  
インストール手順

安装指示书  
إرشادات التركيب

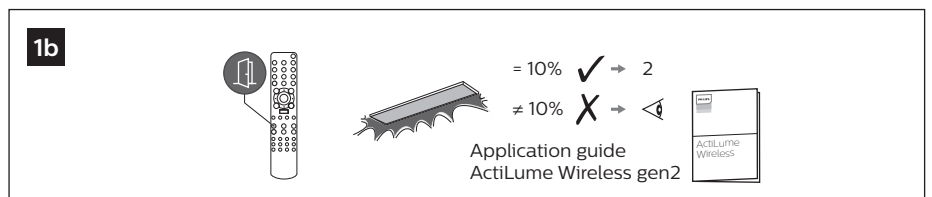
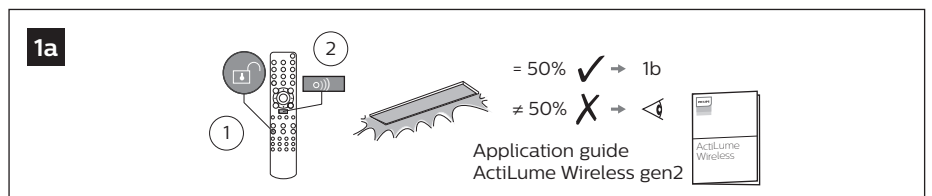
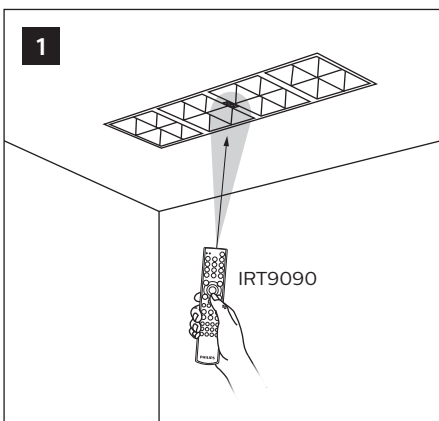
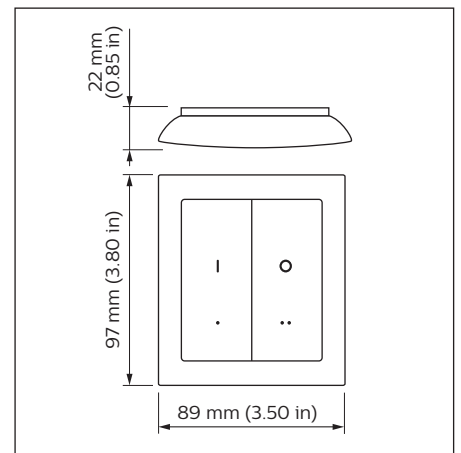
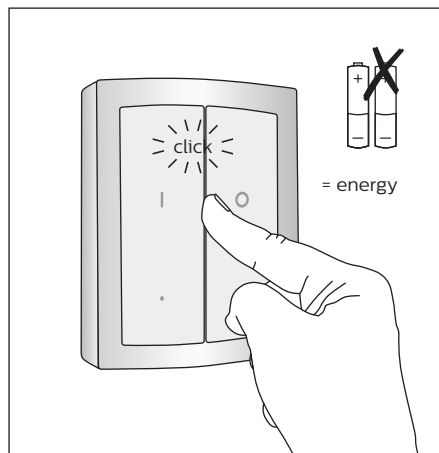


max  
45 °C  
min  
-5 °C


RH  
20 - 95%

kg  
0.100 kg


- 2**
- (EN) Select correct channel
  - (ES) Seleccionar el canal apropiado
  - (FR) Sélectionnez le canal approprié
  - (DE) Den richtigen Kanal wählen
  - (NL) Selecteer juiste kanaal
  - (IT) Selezionare il canale corretto
  - (PL) Wybierz prawy kanał

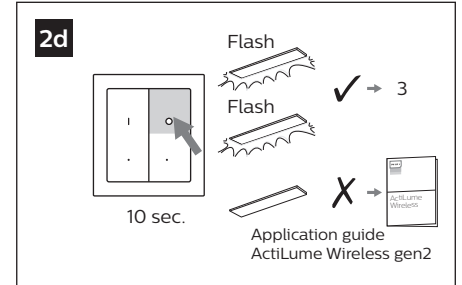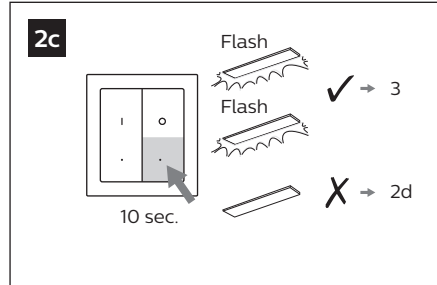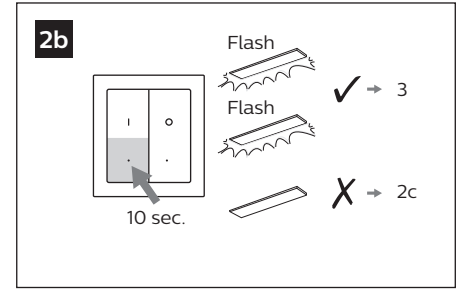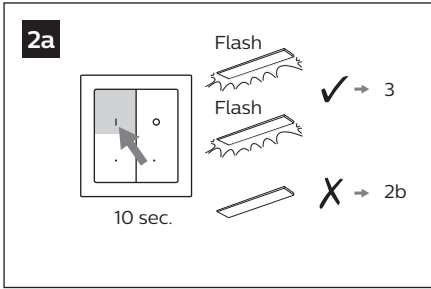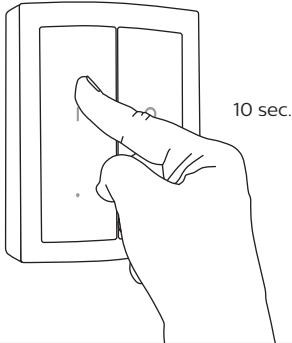


**3**

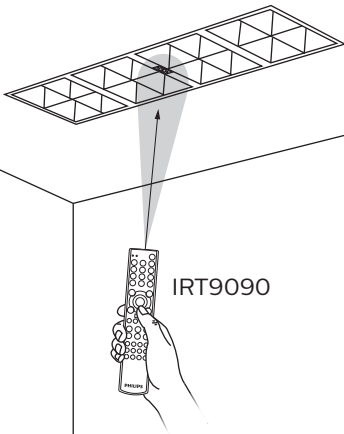


**3a**

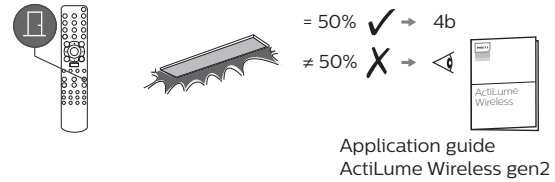


**3b**

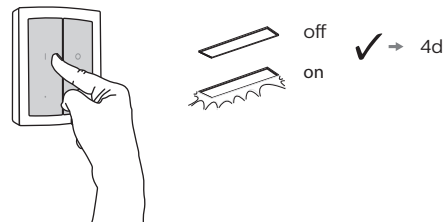

**3c**

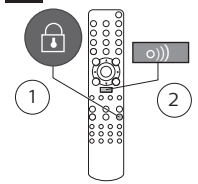

**4a**

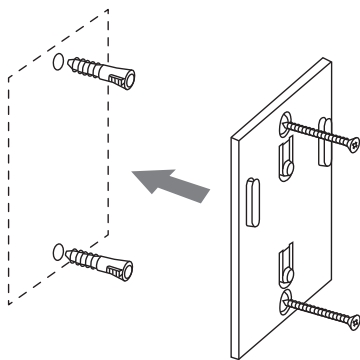

**4b**

