

**PHILIPS**

**hue** personal  
wireless  
lighting

## Dismantle Instructions

The PSU, Control unit and LED string(s) need to be disconnected before disposal.

Check the user manual for the disconnection of the components.

