philips hue

Warnings

Always make sure the luminaire is detached from the mains socket Always make sure the DC cable is detached from the power supply Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed		
а	Remove Mirror [5] from Lamp body [3]			
b	Unscrew 8pcs Screws [10] and remove Diffuser [9] from Lamp body [3]	screwdriver		
С	Unscrew 3pcs Screws [13] and remove Junction box cover [6] from Junction box [7]			
d	Unscrew 2pcs Screws [14] and remove Hue Connect [2] from Junction box [7]	screwdriver		
е	Remove Driver [1] from Junction box [7]			
f	Remove LED strip [8] from Lamp body [3]			

*

#	COMPONENT			
1	Driver			
2	Hue Connect	1		
3	Lamp body			
4	Silicone ring			
5	Mirror			
6	Junction box cover			
7	Junction box			
8	LED strip			
9	Diffuser			
10	Screw			
11	Water proof plug			
12	Terminal block			
13	Screw			
14	Screw			

FOR LIGHT SOURCE-LED STRIP REMOVAL PLEASE SEE DOCUMENT 442295215544_L2 Removal and Test Instuction Flex LED Strip

				Ū
	(12)-			
	(12) (2) (14)			
13—		5		1
4				
		<u>n</u>	2	

(3)

STA		DESCRIPTION 929003056801 Adore Hue wall lamp white 1x27W 24	
NAME Li Ba			LOCAL PART ID
CHECKED)	DATE 2021-09-02

