


PHILIPS
hue

Warnings

Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Unscrew the screws [3].	CROSSHEAD SCREWDRIVER PZ1
b	Unscrew the screws [12]. Pull the tube [7] and frame [9] out of the base [6] and foot [10].	TORXHEAD SCREW DRIVER T20
c	Unplug the flat wire from the light source [1].	-
d	Remove endcap [11] and pull the diffuser [8] out of the tube [7] and remove the light source [1]	-
e	Unplug the cable from Hue connect [2] and release Hue connect [2] from snap in frame [9]	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
f	Unscrew the screw [4] and release Control gear [5].	TORXHEAD SCREW DRIVER T10
g	Loosen the wires from the cordset [13] and the Control gear [5]. Pull the cordset out of the frame [9].	

#	COMPONENT	QTY	SKU	Color	Country
1	Light Source	1	915005871601	Aluminium	EU
2	Hue connect	1			
3	Screws	2			
4	Screw	1			
5	Control gear - PSU	1			
6	Base	3			
7	Tube	1			
8	Diffuser	1			
9	Frame	1			
10	Foot	2			
11	Endcap	1			
12	Screws	5			
13	Cordset	1			

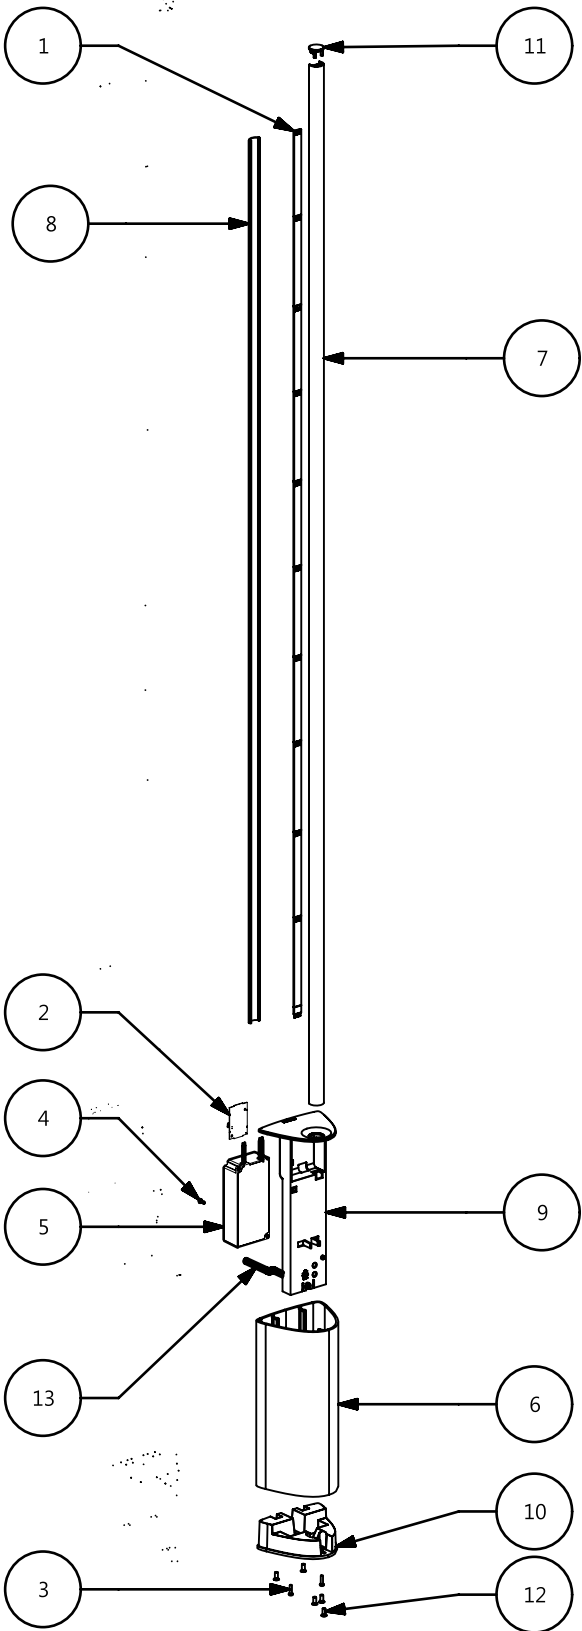

STATUS		DESCRIPTION Signe Floor			DESIGN ID		01	2022-07-20
					DOC 12NC			
					915005871601			
NAME	Ir Pi	LOCAL PART ID			SH. 1	SH. 511-1		A3-L
	CHECKED	DATE 2022-07-20						