



SKU	Color	Country
915005197501	Stainless steel	EU

#	COMPONENT	QTY
1	DIFFUSER	1
2	SCREW	2
3	SCREW	1
4	INNER DIFFUSER	1
5	LIGHT SOURCE - LED MODULE	1
6	SCREW	1
7	CONTROL GEAR - PSU	1
8	BASE	1
9	SCREW	2
10	CLAMPER	1
11	SCREW	1
12	TERMINAL BLOCK	1
13	SCREW	2
14	CLOSED END CONNECTOR	1
15	CONTROL GEAR - SENSOR	1
16	SCREW	2
17	BRACKET	1

Warnings

Always make sure the luminaire is detached from the mains socket
 Always make sure the DC cable is detached from the power supply
 Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	REMOVE DIFFUSER (1) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER
b	REMOVE TERMINAL BLOCK (12) BY UNSCREWING THE SCREW (11)	CROSS HEAD SCREW DRIVER
c	REMOVE WIRE OF THE CONTROL GEAR - PSU (7) AND WIRES OF THE CONTROL GEAR - SENSOR (14) FROM THE TERMINAL BLOCK (12) BY UNSCREWING WIRES FROM THE TERMINAL BLOCK (12)	FLAT HEAD SCREW DRIVER
d	REMOVE THE CLOSED END CONNECTOR (14)	PINCER
e	REMOVE THE CONTROL GEAR - SENSOR (15) FROM THE BRACKET (17) BY UNSCREWING THE SCREWS (16)	CROSS HEAD SCREW DRIVER
f	REMOVE BRACKET (17) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER
g	REMOVE CLAMPER (10) BY UNSCREWING THE SCREWS (9)	CROSS HEAD SCREW DRIVER
h	REMOVE INNER DIFFUSER (4) BY UNSCREWING THE SCREW (3)	CROSS HEAD SCREW DRIVER
i	REMOVE WIRES OF THE CONTROL GEAR - PSU (7) FROM THE LIGHT SOURCE - LED MODULE (5)	SOLDER IRON
j	REMOVE THE CONTROL GEAR - PSU (7) FROM THE BASE BY UNSCREWING THE SCREWS (6)	CROSS HEAD SCREW DRIVER

STATUS	DESCRIPTION	DESIGN ID
2021-04-12	Herb IR wall lantern inox 1x6W 230V	DOC 12NC
NAME WH	LOCAL PART ID	SH. 1
CHECKED	DATE	SH. A3-P