



Warnings

Always make sure the luminaire is detached from the mains socket
 Always make sure the DC cable is detached from the power supply
 Staring at the operating light source may cause eye injury



#	SLR Description	Tools needed
a	Place the Hue Go Sideways and use a rubber hammer to remove the diffuser from the housing	Rubber Hammer
b	Unscrew the 3 screws	Torx Screw driver
c	Pull out the flat wire and remove the light source from the housing	-

#	COMPONENT	QTY
1	Diffuser	1
2	Screw	3
3	Light Source LED Module	1
4	Housing	1

SKU	Country
915005821901	EU
915005822001	UK
915005822101	NAM
915005822201	China
915005822301	India
915005822401	JP/TW/LATAM
915005822501	ANZ
915005822601	GM/ASEAN/RUS

STATUS		DESCRIPTION		DESIGN ID	01	2021-01-08
		Hue Go V2 Disassembly Instruction		DOC 12NC	442295215751	
NAME	Ma Vr	LOCAL PART ID	SH. 1	SH. 511	A3-P	
CHECKED		DATE	2021-01-08	CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding		