
## **PHILIPS**

## hue

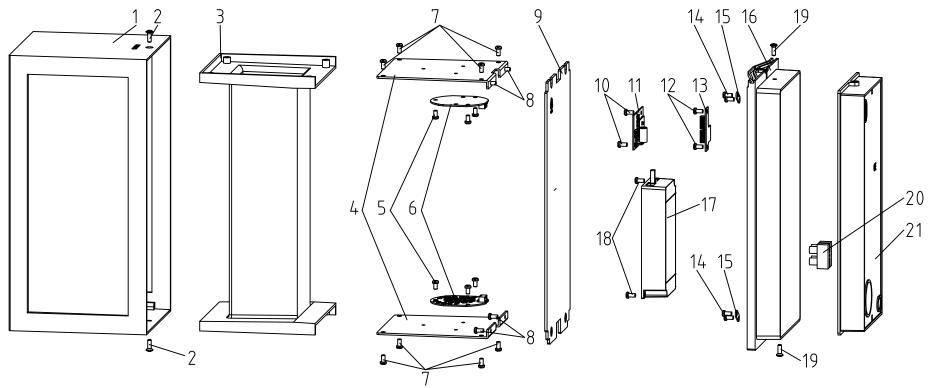

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	COMPONENT	QTY	
1	COVER	1	
2	SCREW	2	
3	DIFFUSER	1	
4	HEATSINK	2	
5	SCREW	6	
6	LIGHT SOURCE - LED MODULE	2	
7	SCREW	8	
8	SCREW	4	
9	PLATE	1	
10	SCREW	2	
11	LIGHT SOURCE - HUE CONNECT	1	
12	SCREW	2	
13	SPLITTER	1	
14	SCREW	4	
15	CLAMPER	2	
16	BASE	1	
17	CONTROL GEAR - PSU	1	
18	SCREW	2	
19	SCREW	2	
20	TERMINAL BLOCK	1	
21	WALL PLATE	1	

#	Disassemble/dismantle steps	Tools needed
а	REMOVE COVER (1) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER
b	REMOVE DIFFUSER (3) BY UNSCREWING THE SCREWS (7)	CROSS HEAD SCREW DRIVER
С	REMOVE PLATE (9) BY UNSCREWING THE SCREWS (8)	CROSS HEAD SCREW DRIVER
d	REMOVE LIGHT SOURCE - LED MODULE (6) FROM HEATSINK (4) BY UNSCREWING THE SCREWS (7)	CROSS HEAD SCREW DRIVER
е	REMOVE WALL PLATE (21) BY UNSCREWING THE SCREWS (19)	CROSS HEAD SCREW DRIVER
f	REMOVE TERMINAL BLOCK (20) FROM THE WALL PLATE (21)	-
g	REMOVE WIRE OF THE CONTROL GEAR - PSU (17) FROM TERMINAL BLOCK (20) BY UNSCREWING THE TERMINAL BLOCK (20)	FLAT HEAD SCREW DRIVER
h	REMOVE SPLITTER (13) FROM THE BASE (16) BY UNSCREWING THE SCREWS (12)	CROSS HEAD SCREW DRIVER
i	REMOVE LIGHT SOURCE - HUE CONNECT FROM THE BASE (16) BY UNSCREWING THE SCREWS (10)	CROSS HEAD SCREW DRIVER
j	REMOVE CONTROL GEAR - PSU (17) FROM THE BASE (16) BY UNSCREWING THE SCREWS (18)	CROSS HEAD SCREW DRIVER
k	REMOVE THE WIRE OF THE CONTROL GEAR - PSU (17) FROM LIGHT SOURCE - HUE CONNECT(11)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065

SKU	Color	Country
915005730801	BLACK	EU
915005730601	BLACK	EU

STA	TUS		ue WACA EU large wall lantern		DESIGN ID  DOC 12NC			
2021-04-12		inipress ric	de WACA LO Wall lantem bia	aun Z		DOC 12NC		
NAME WH			LOCAL PART ID		SH. 1	SH.		A3-P
CHECKED			DATE					