




**Warnings**

Always make sure the luminaire is detached from the mains socket  
Always make sure the DC cable is detached from the power supply  
Staring at the operating light source may cause eye injury

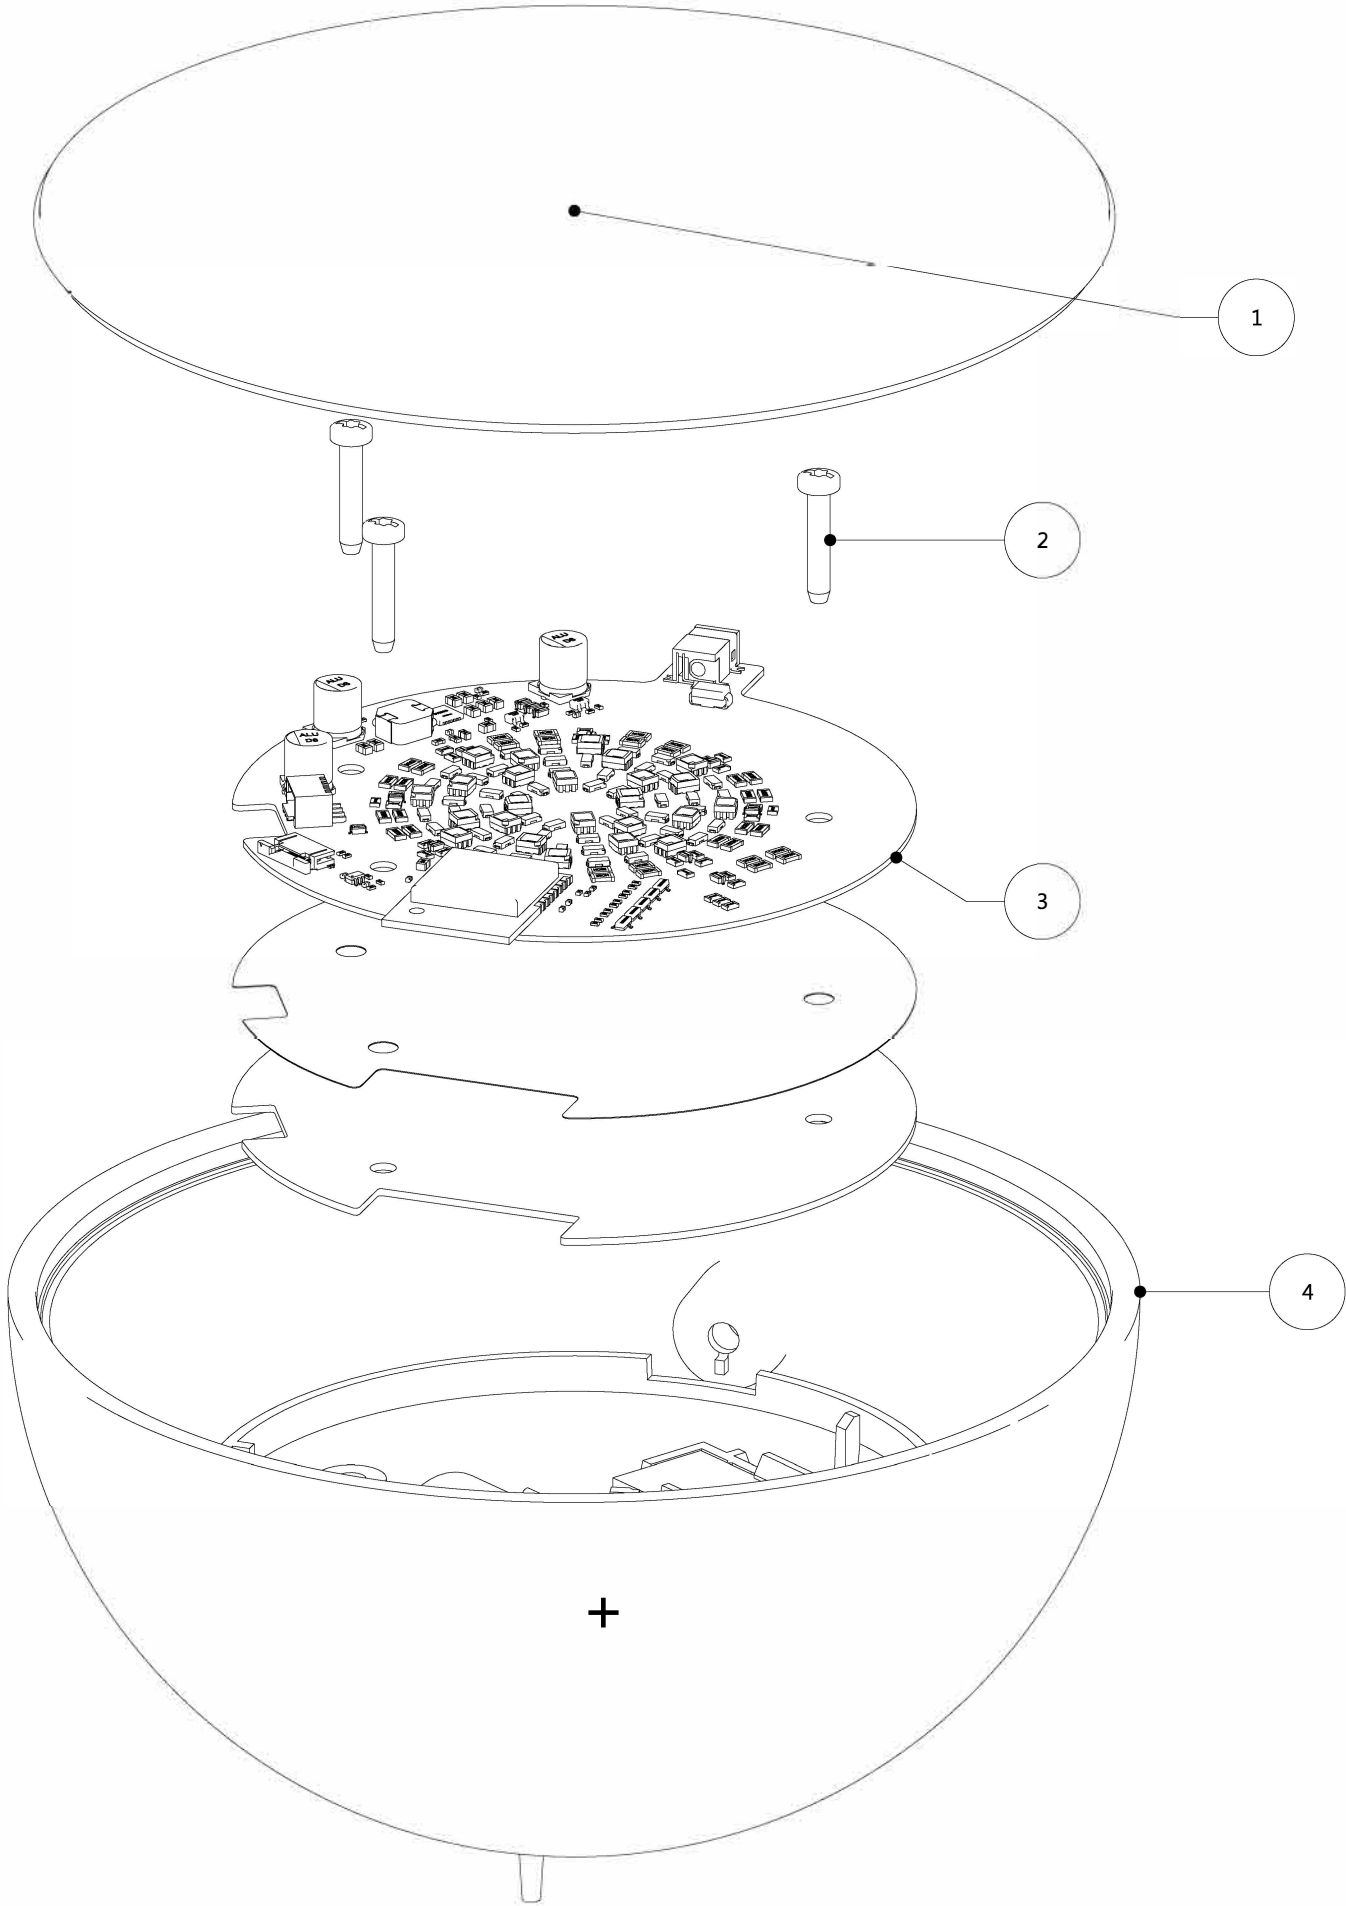

| # | SLR Description                                                                           | Tools needed      |
|---|-------------------------------------------------------------------------------------------|-------------------|
| a | Place the Hue Go Sideways and use a rubber hammer to remove the diffuser from the housing | Rubber Hammer     |
| b | Unscrew the 3 screws                                                                      | Torx Screw driver |
| c | Pull out the flat wire and remove the light source from the housing                       | -                 |

| # | COMPONENT               | QTY |
|---|-------------------------|-----|
| 1 | Diffuser                | 1   |
| 2 | Screw                   | 3   |
| 3 | Light Source LED Module | 1   |
| 4 | Housing                 | 1   |

| SKU          | Country      |
|--------------|--------------|
| 915005821901 | EU           |
| 915005822001 | UK           |
| 915005822101 | NAM          |
| 915005822201 | China        |
| 915005822301 | India        |
| 915005822401 | JP/TW/LATAM  |
| 915005822501 | ANZ          |
| 915005822601 | GM/ASEAN/RUS |

| STATUS |         | DESCRIPTION                       |            | DESIGN ID    |  | 01 | 2021-01-08 |
|--------|---------|-----------------------------------|------------|--------------|--|----|------------|
|        |         | Hue Go V2 Disassembly Instruction |            | DOC 12NC     |  |    |            |
|        |         |                                   |            | 442295215751 |  |    |            |
| NAME   | Ma Vr   | LOCAL PART ID                     | SH. 1      | SH. 511      |  |    | A3-P       |
|        | CHECKED | DATE                              | 2021-01-08 |              |  |    |            |