	1	2 3	4	5	6
	PHILIPS		9 - 6		
	PHILIPS				
A			/		
	hue		/		
					_
					- 25 - 24 -
-					
					\sim / /
					\supset / / \prec
B	\smile				
	\sim				
	$\left(\begin{array}{c}19\end{array}\right)\left(\begin{array}{c}17\end{array}\right)$				
	$\bigcirc \bigcirc$				
		R			
	\bigcirc			\sim 1 $^{\circ}$ \sim	
	\sim				
C				∽ ^/∖	
	\bigcirc		\frown		
	8		\smile \		
-	8				
	Warnings				
	Always make sure the luminaire	e is detached from the mains socket is detached from the power supply	16		
D	Always make sure the luminaire	is detached from the power supply	16		
D	Always make sure the luminaire Always make sure the DC cable	is detached from the power supply	Tools needed		
D	Always make sure the luminaire Always make sure the DC cable Staring at the operating light so	is detached from the power supply burce may cause eye injury	16 16 Tools needed FLATHEAD SCREWDRIVER	• • • •	
D	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) 	is detached from the power supply ource may cause eye injury ENTLY LIFTING THEM OUT	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ	00	
D	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (2) 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ		
D	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (1) TAKE A SIDE BRACKET (3) UN 	is detached from the power supply ource may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - -		
	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) C DISCONECT TERMINAL BLOCK (1) TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ		
	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (2) TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP REMOVE COVER (23) AND SL 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - - TORXHEAD SCREW DRIVER T10		
	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) G UNSCREW BOTH SCREWS (2) G DISCONECT TERMINAL BLOCK (1) G TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP REMOVE COVER (23) AND SL UNSCREW BOTH TUBES (21) 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH		
 D	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (1) TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP REMOVE COVER (23) AND SI UNSCREW BOTH TUBES (21) REMOVE COVER (15) BY UNS 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - - TORXHEAD SCREW DRIVER T10		
 D	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) C UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (2) TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP REMOVE COVER (23) AND SL UNSCREW BOTH TUBES (21) REMOVE COVER (15) BY UNS SLIDE OUT DIFFUSER (6) 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH		
E	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so Disassembly Instructions REMOVE BOTH COVERS (1) (2) UNSCREW BOTH SCREWS (2) DISCONECT TERMINAL BLOCK (2) TAKE A SIDE BRACKET (3) UN REMOVE MARKED END CAP REMOVE COVER (23) AND SI UNSCREW BOTH TUBES (21) REMOVE COVER (15) BY UNS SLIDE OUT DIFFUSER (6) SLIDE OUT REFLECTOR (7) 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH		
	 Always make sure the luminaine Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) C b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) d TAKE A SIDE BRACKET (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) LES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ		
E	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) G b UNSCREW BOTH SCREWS (2) G c DISCONECT TERMINAL BLOCK (3) d TAKE A SIDE BRACKET (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB I REMOVE LIGHT SOURCE-LED STRIPS (9) AC 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) LES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STR	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ IP SEE INSTRUCTION	SKU	Color Country
	 Always make sure the luminaine Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) G b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) c DISCONECT TERMINAL BLOCK (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB REMOVE LIGHT SOURCE-LED STRIPS (9) AC m REMOVE THE COVER (8) BY TILTING IT 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) LES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ IP SEE INSTRUCTION	SKU 91500592880	Color Country 1 WHITE EU/UK
	 Always make sure the luminaine Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) C b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) c DISCONECT TERMINAL BLOCK (3) d TAKE A SIDE BRACKET (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB I REMOVE LIGHT SOURCE-LED STRIPS (9) AC m REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR - 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) LES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STR FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXT	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SEE INSTRUCTION S	SKU	Color Country 1 WHITE EU/UK
	 Always make sure the luminaine Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) (2) b UNSCREW BOTH COVERS (1) (2) c DISCONECT TERMINAL BLOCK (2) c DISCONECT TERMINAL BLOCK (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB I REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR - o UNPLUG CONNECTION CABLE 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) EES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STR FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXT HUE CONNECT (11) FROM THE COVER (8)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SEE INSTRUCTION S	SKU 91500592880 91500592870	Color Country 1 WHITE EU/UK 1 BLACK EU/UK
E	 Always make sure the luminaire Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) G b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) c DISCONECT TERMINAL BLOCK (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB REMOVE LIGHT SOURCE-LED STRIPS (9) AC m REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR - o UNPLUG CONNECTION CABLE 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) ES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STR FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXT HUE CONNECT (11) FROM THE COVER (8) (13) AND POWER WIRES FROM CONTROL GEAR - HUE CONNECT (1 EWING SCREW (17) FROM NUT (18)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SOCKET INSTRUCTION S 1) WAGO TOOL #2065	SKU 91500592880 91500592870	Color Country 1 WHITE EU/UK
E	 Always make sure the luminaine Always make sure the DC cable Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) G b UNSCREW BOTH COVERS (1) G c DISCONECT TERMINAL BLOCK (2) c DISCONECT TERMINAL BLOCK (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNSG i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB I REMOVE LIGHT SOURCE-LED STRIPS (9) AG m REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR - o UNPLUG CONNECTION CABLE p DETACH WIRE (19) BY UNSCE 	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) ES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STR FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXT HUE CONNECT (11) FROM THE COVER (8) (13) AND POWER WIRES FROM CONTROL GEAR - HUE CONNECT (1 EWING SCREW (17) FROM NUT (18)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SEE INSTRUCTION S 1) WAGO TOOL #2065 ALLEN KEY, PINCER	SKU 91500592880 91500592870 STATUS	Color Country 1 WHITE EU/UK 1 BLACK EU/UK
 E 	Always make sure the luminainer Always make sure the DC cables Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) C b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) d TAKE A SIDE BRACKET (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB l REMOVE LIGHT SOURCE-LED STRIPS (9) AC m REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR -0 UNPLUG CONNECTION CABLE P p DETACH WIRE (19) BY UNSCE r CUT OUT MAIN WIRES OF CC s REMOVE COVERS (25) BY RO	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) ES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STF FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXIT HUE CONNECT (11) FROM THE COVER (8) (13) AND POWER WIRES FROM CONTROL GEAR - HUE CONNECT (1 EWING SCREW (17) FROM NUT (18) DNTROL GEAR PSU (5) U (5) BY UNSCREWING BOTH SCREWS (4) TATING THEM AND PULLING OUT FROM TUBES (21)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SOCKET WRENCH SOCKET WRENCH SOCKET WRENCH VAGO TOOL #2065 ALLEN KEY, PINCER CUTTING PLIERS	SKU 91500592880 91500592870 STATUS CL	Color Country 1 WHITE EU/UK 1 BLACK EU/UK ISSCRIPTION Entris Hue special form 4.7W white/b
 E 	Always make sure the luminainer Always make sure the DC cables Staring at the operating light so # Disassembly Instructions a REMOVE BOTH COVERS (1) (2) b UNSCREW BOTH SCREWS (2) c DISCONECT TERMINAL BLOCK (2) d TAKE A SIDE BRACKET (3) UN e REMOVE MARKED END CAP f REMOVE COVER (23) AND SL g UNSCREW BOTH TUBES (21) h REMOVE COVER (15) BY UNS i SLIDE OUT DIFFUSER (6) j SLIDE OUT REFLECTOR (7) k UNPLUG CONNECTION CAB I REMOVE LIGHT SOURCE-LED STRIPS (9) AC m REMOVE THE COVER (8) BY TILTING IT n SLIDE OUT CONTROL GEAR - o UNPLUG CONNECTION CABLE p DETACH WIRE (19) BY UNSCE r CUT OUT MAIN WIRES OF CO s REMOVE CONTROL GEAR PS	is detached from the power supply burce may cause eye injury ENTLY LIFTING THEM OUT 14) SILDING IT OUT AT THE SAME TIME PUSHING SAFETY LEVER ON HOOKING IT FROM END CAPS (10) BY UNSCREWING BOTH SCREWS (12) IDE OUT COVER (22) BY UNSCREWING NUTS (20) CREWING BOTH SCREWS (16) ES (13) FROM BOTH LIGHT SOURCE-LED STRIPS (9) CORDING INSTRUCTION 442295215544_L2 REMOVAL AND TEST INSTRUCTION FLEX LED STF FORWARD WHILE SQUEEZING IT WITH YOUR FINGER BETWEEN THE CABLE EXIT HUE CONNECT (11) FROM THE COVER (8) (13) AND POWER WIRES FROM CONTROL GEAR - HUE CONNECT (1 EWING SCREW (17) FROM NUT (18) DNTROL GEAR PSU (5) U (5) BY UNSCREWING BOTH SCREWS (4) TATING THEM AND PULLING OUT FROM TUBES (21)	FLATHEAD SCREWDRIVER CROSSHEAD SCREWDRIVER PZ T - TORXHEAD SCREW DRIVER T10 SOCKET WRENCH CROSSHEAD SCREWDRIVER PZ SOCKET WRENCH SOCKET WRENCH SOCKET WRENCH VAGO TOOL #2065 ALLEN KEY, PINCER CUTTING PLIERS	SKU 91500592880 91500592870 STATUS	Color Country 1 WHITE EU/UK 1 BLACK EU/UK

7		8			
#		17			
#			QTY		
_	COVER		2		
2	SCREW		2		A
3	BRACKET		1		
4	SCREW		2		
5	CONTROL G	EAR - PSU	1		
6	DIFFUSER		1		_
7	REFLECTOR		1		
8	COVER		1		
9	LIGHT SOUR	CE - LED STRIP	2		
10	END CAP		1		
11	CONTROL G	EAR - HUE CONNECT	1		В
12	SCREW		2		
13	CONNECTIO	N CABLE	1		
14	TERMINAL B	LOCK	1		
15	COVER		1		
16	SCREW		1		
17	SCREW		1		
18	NUT		1		
19	WIRE		1		
20	NUT		2		
21	TUBE		2		$ _{c}$
22	COVER		2		
23	COVER		1		
24	GU 10 BULB		4		
25	COVER		4		

D

Ε

	DESIGN ID		03	2021-08-04	
2	⊢——	 		ļ.	Ь
sassembly instruction	DOC 12NC		n		
·····	-				
sн. 1			14	A3-L	
7			8	P	•