


PHILIPS
hue

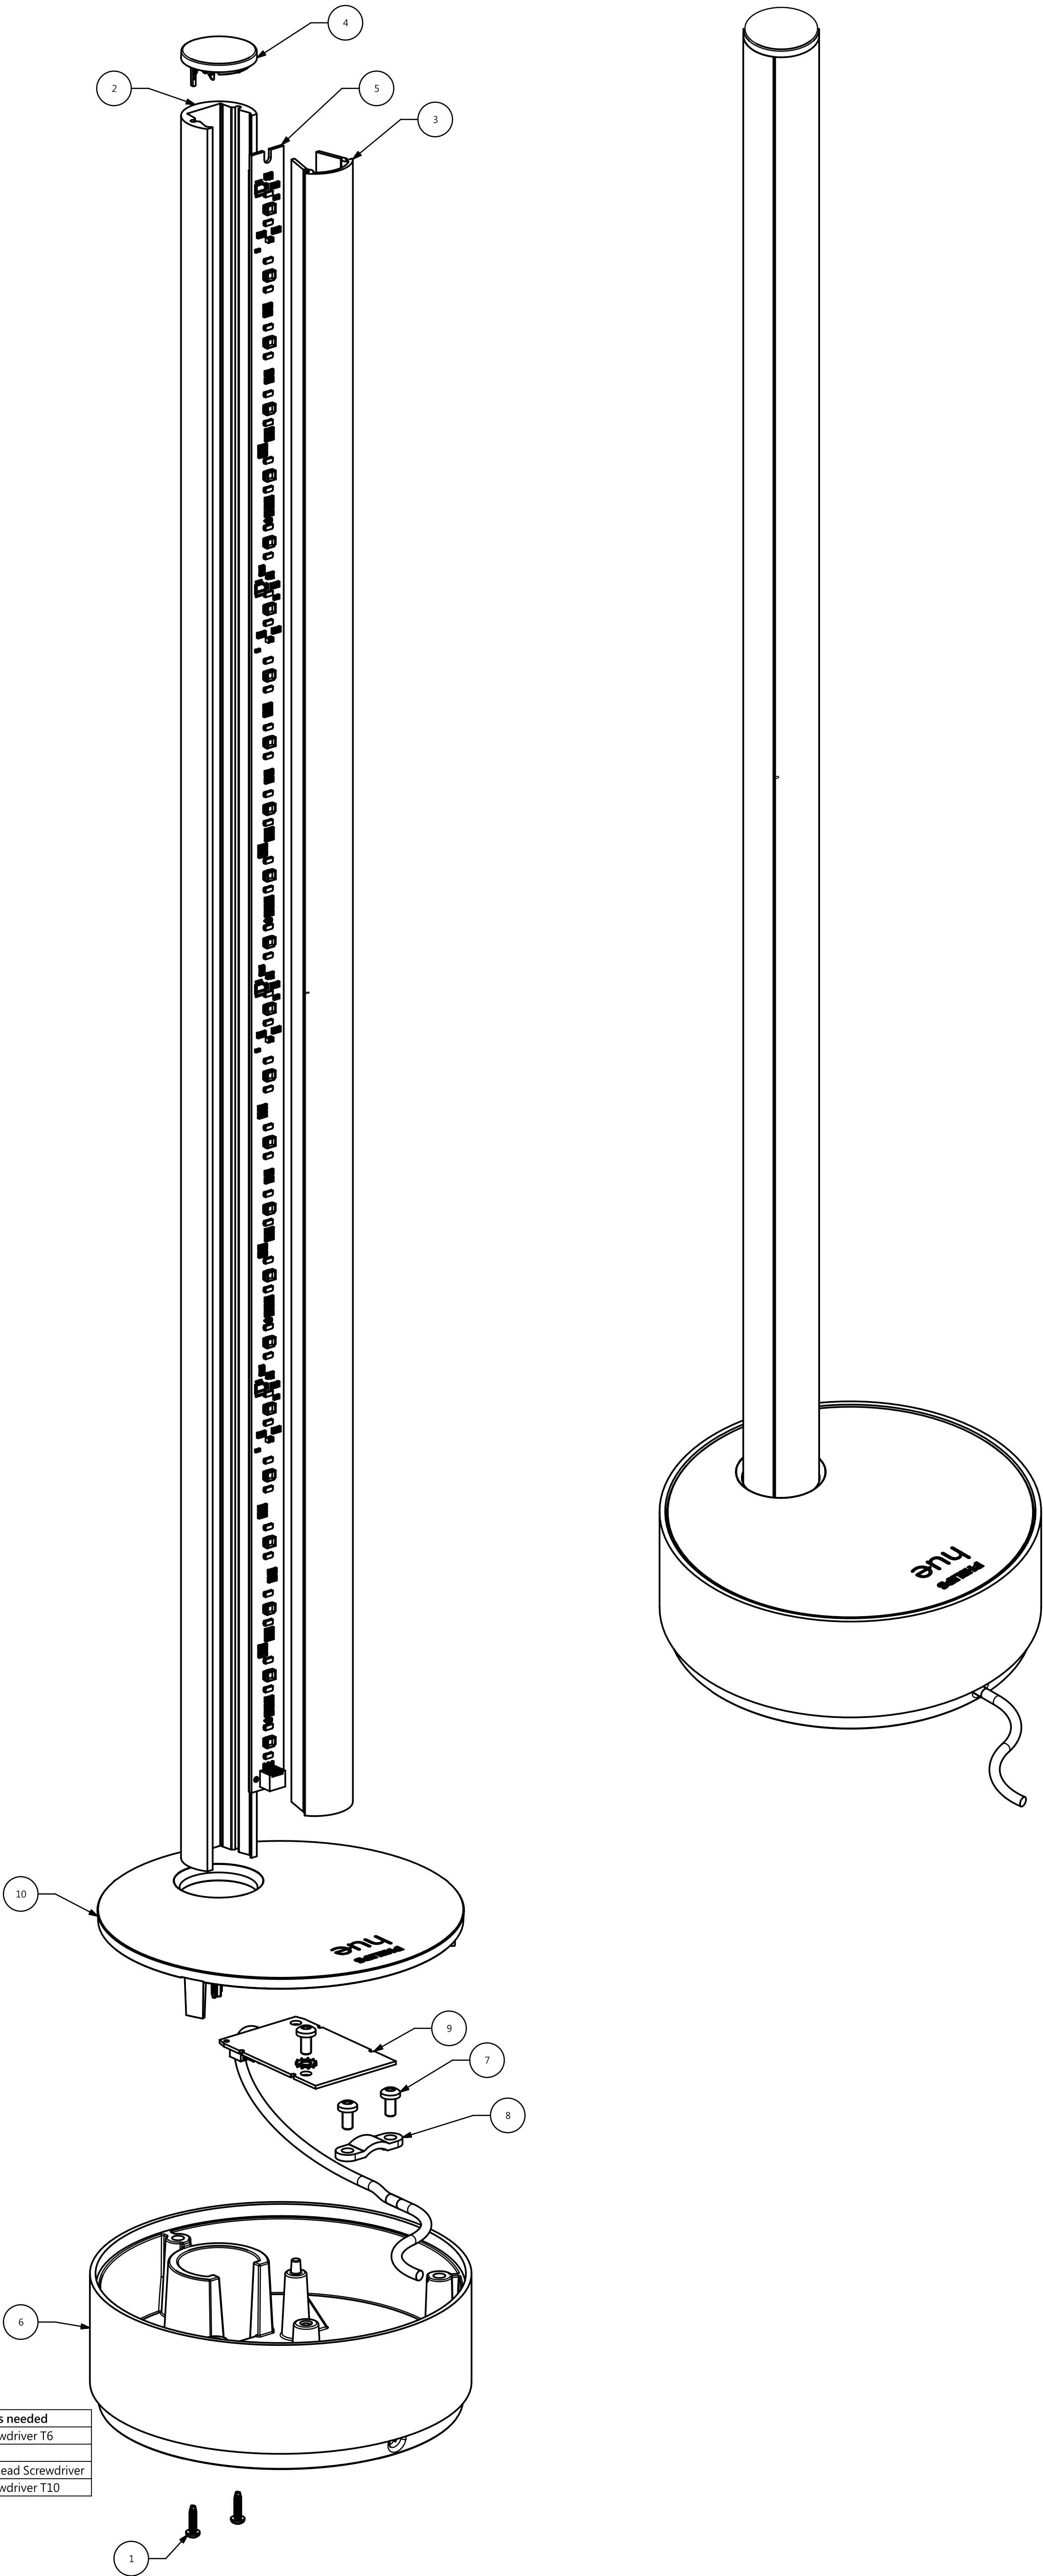

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassembly instruction	Tools needed
a	Unscrew the 2 screws [1]. Pull the tube [2] out of the base [6] and unplug the flat wire from the light source [5]	Screwdriver T6
b	Pull the diffuser [3] out of the tube [2] and remove the light source* [5]	-
c	Insert a flat-head screwdriver into the gap between the base [6] and the top cover [10] gently pry and remove the top cover [10]	Flathead Screwdriver
d	Unscrew the 2 screws [7] of the cable clamp [8] and 1 screw of the Hue Connect [9]	Screwdriver T10

#	COMPONENT	QTY	SKU	Color	Country
1	M2X8 screw	2	915005986901	White	EU/UK
2	Tube	1	915005987001	Black	EU/UK
3	Diffuser	1	915005987301	White	NAM
4	End Cap	1	915005987401	Black	NAM
5	Light Source	1			
6	Base	1			
7	M3X6 Screw	3			
8	Cable Clamp	1			
9	Hue Connect	1			
10	Top cover	1			

*

FOR LIGHT SOURCE-LED STRIP REMOVAL PLEASE SEE DOCUMENT
"200604 - Instruction LED Strip Removal Procedure"

STATUS		DESCRIPTION		DESIGN ID	
				01 2023-11-13	
				DOC 12NC 442295722282	
NAME	Ma Vi	LOCAL PART ID	SH. 1	SH.	A1-P
CHECKED		DATE	2023-11-13	PROPERTY OF: © 2020 Signify Holding	