


PHILIPS
hue

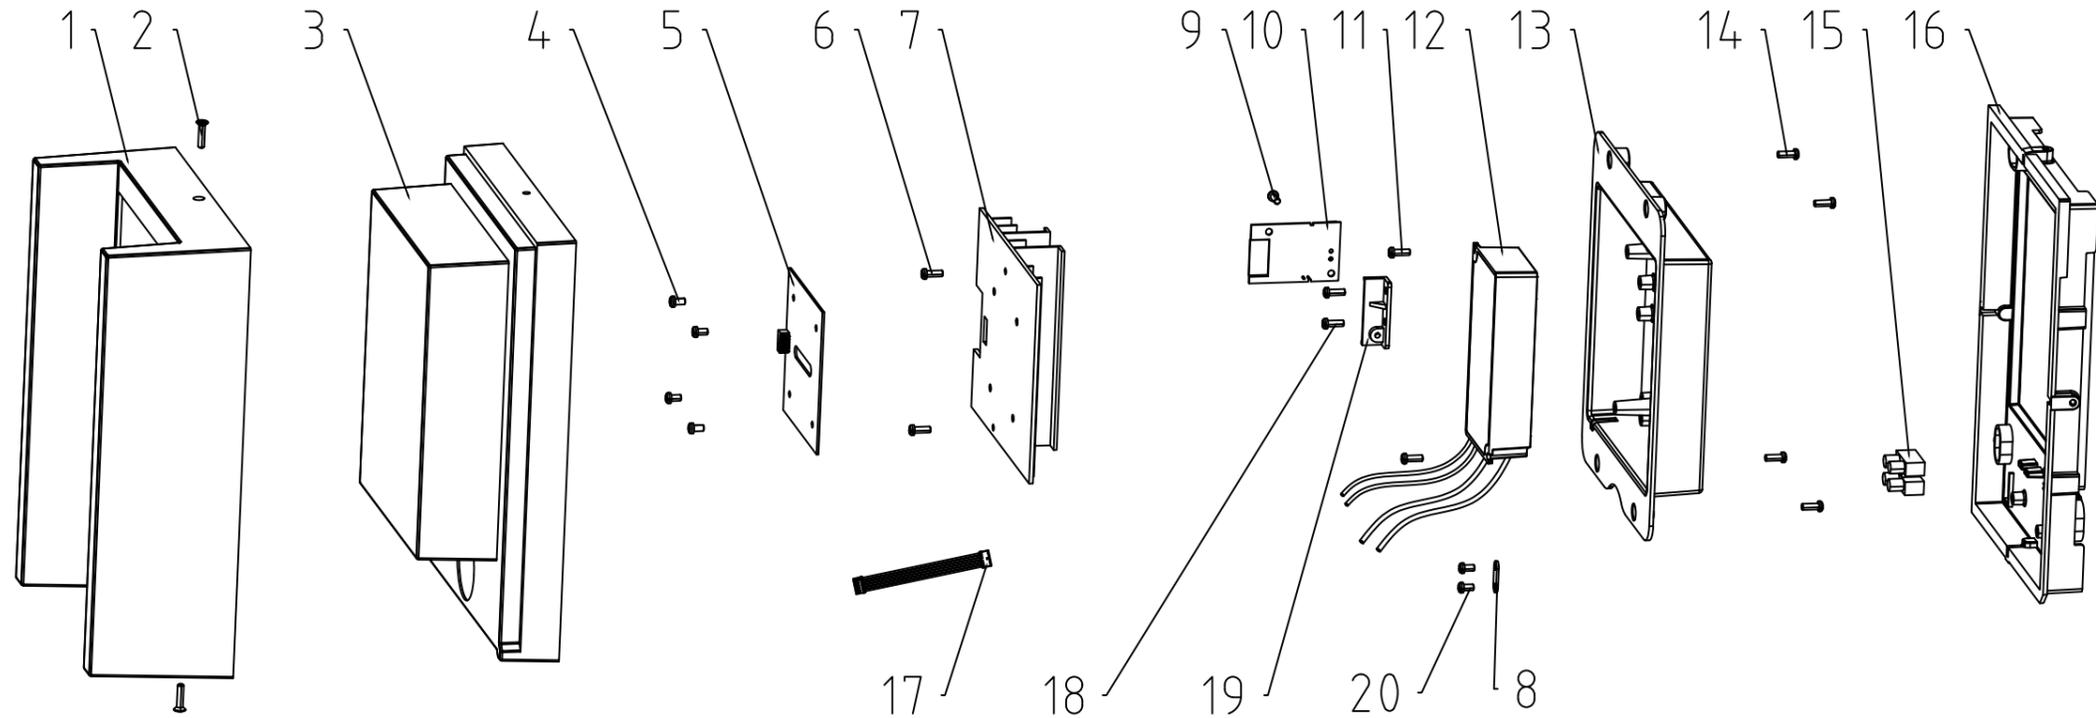

#	COMPONENT	QTY
1	OUTER COVER	1
2	SCREW	2
3	DIFFUSER	1
4	SCREW	4
5	LIGHT SOURCE - LED MODULE	1
6	SCREW	2
7	HEAT SINK	1
8	CLAMPER	1
9	SCREW	1
10	LIGHT SOURCE - HUE CONNECT	1
11	SCREW	2
12	CONTROL GEAR - PSU	1
13	COVER	1
14	SCREW	4
15	TERMINAL BLOCK	1
16	BASE	1
17	FLAT CABLE	1
18	SCREW	2
19	BRACKET	1
20	SCREW	2

Warnings

Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	REMOVE OUTER COVER (1) AND BASE (16) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER
b	REMOVE WIRES OF THE CONTROL GEAR - PSU (12) FROM THE TERMINAL BLOCK (15) BY UNSCREWING THE TERMINAL BLOCK	FLAT HEAD SCREW DRIVER
c	REMOVE THE DIFFUSER (3) BY UNSCREWING THE SCREWS (14)	CROSS HEAD SCREW DRIVER
d	REMOVE FLAT CABLE (17) FROM THE LIGHT SOURCE - LED MODULE (5)	-
e	REMOVE THE LIGHT SOURCE - LED MODULE (5) BY UNSCREWING THE SCREWS (4)	CROSS HEAD SCREW DRIVER
f	REMOVE HEAT SINK (7) BY UNSCREWING THE SCREWS (6)	CROSS HEAD SCREW DRIVER
g	REMOVE BRACKET (19) FROM THE COVER (13) UNSCREW THE SCREWS (18)	CROSS HEAD SCREW DRIVER
h	REMOVE FLAT CABLE (17) FROM THE LIGHT SOURCE - HUE CONNECT (10)	-
i	REMOVE WIRES OF THE CONTROL GEAR - PSU (12) FROM THE LIGHT SOURCE - HUE CONNECT (10)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
j	REMOVE LIGHT SOURCE - HUE CONNECT (10) BY UNSCREWING THE SCREW (9)	CROSS HEAD SCREW DRIVER
k	REMOVE CLAMPER (8) BY UNSCREWING THE SCREWS (20)	CROSS HEAD SCREW DRIVER
l	REMOVE CONTROL GEAR - PSU (12) BY UNSCREWING THE SCREWS (11)	CROSS HEAD SCREW DRIVER

SKU	Color	Country
915005733101	BLACK	EU

STATUS	DESCRIPTION	DESIGN ID
2021-04-12	Fuzo Hue White EU wall lantern black 1x	DOC 12NC
NAME JZ	LOCAL PART ID	SH. 1
CHECKED	DATE	SH.
		A3-P