


PHILIPS  
hue

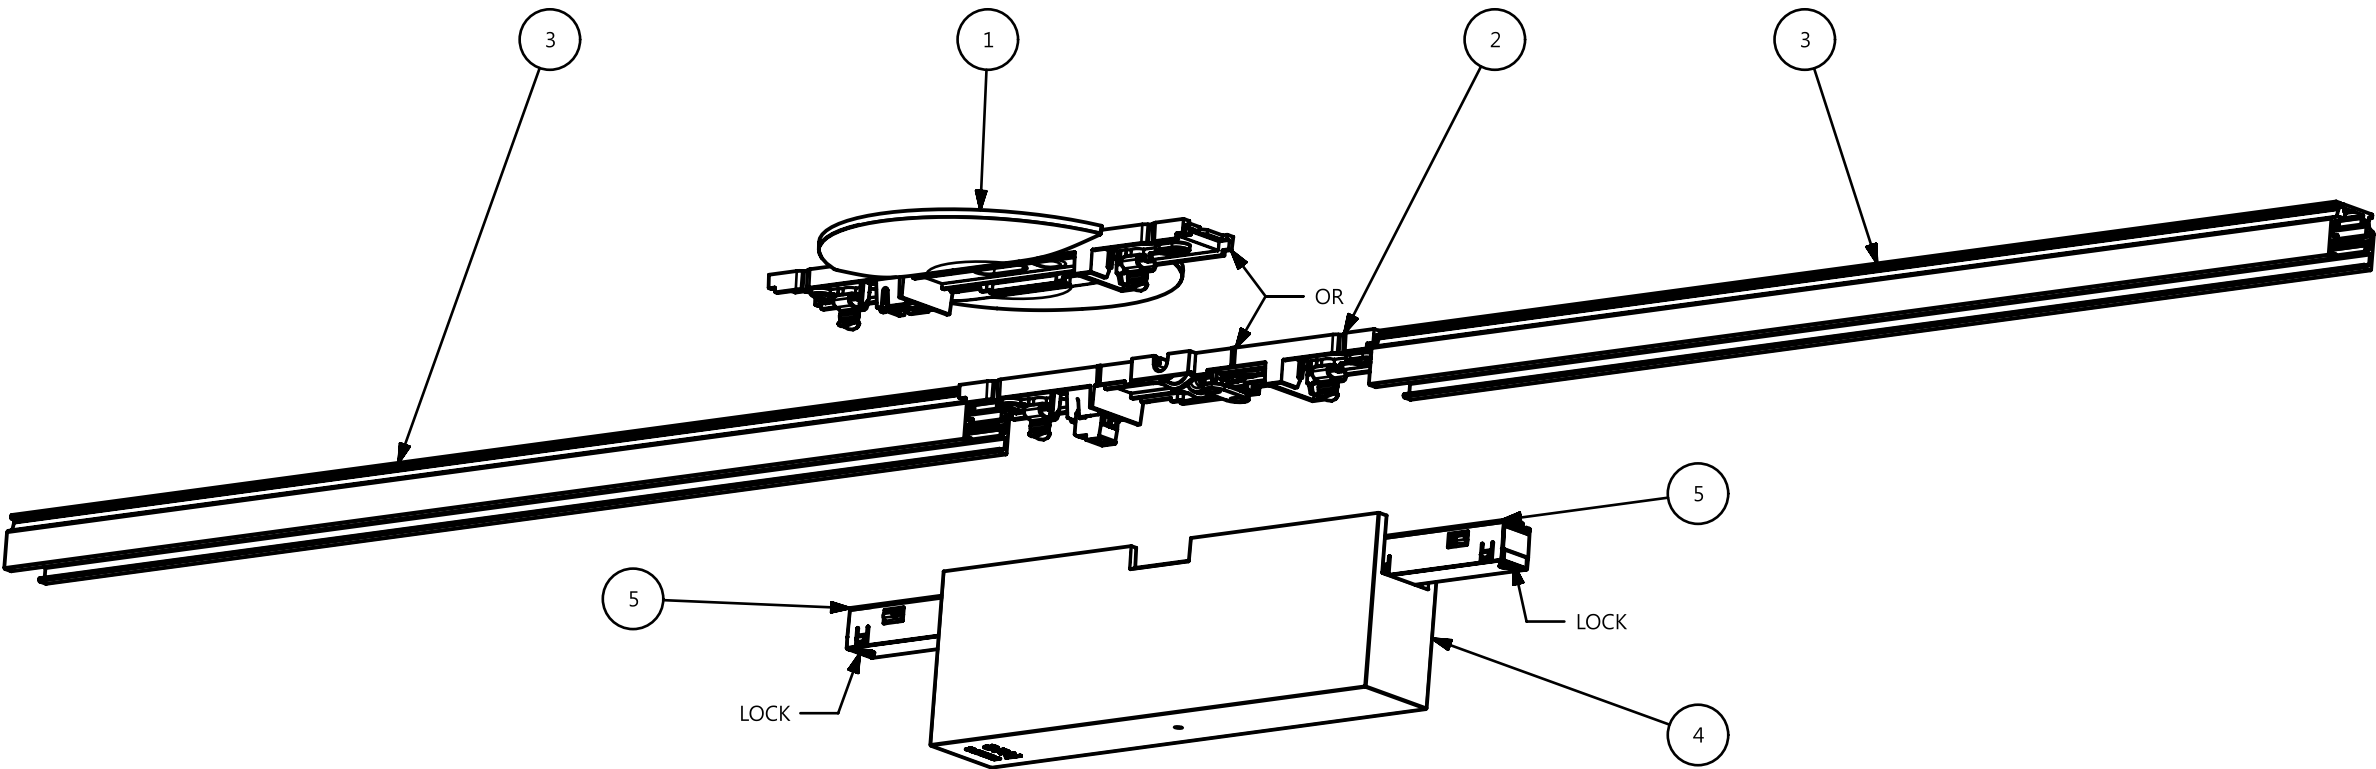

| # | Disassemble/dismantle steps                                 | Tools needed |
|---|-------------------------------------------------------------|--------------|
| a | Unlock the lock(s) of the connector(s)                      | -            |
| b | Remove the PSU (4) by pulling it of the bracket (1) or (2). | -            |

| # | COMPONENT | QTY    |
|---|-----------|--------|
| 1 | Bracket   | 1      |
| 2 | Bracket   | 1      |
| 3 | Rail      | 1 or 2 |
| 4 | PSU       | 1      |
| 5 | Connector | 1 or 2 |

| SKU          | Color | Country |
|--------------|-------|---------|
| 929003114101 | Black | EU/UK   |
| 929003114201 | White | EU/UK   |
| 929003522901 | Black | EU/UK   |
| 929003523001 | White | EU/UK   |

|        |                                            |               |              |           |            |
|--------|--------------------------------------------|---------------|--------------|-----------|------------|
| STATUS | DESCRIPTION<br>Hue Perifo PSU 100W ceiling |               | DESIGN ID 01 |           | 2021-07-30 |
|        |                                            |               | DOC 12NC     |           |            |
|        |                                            |               | 929003114101 |           |            |
| NAME   | He Go                                      | LOCAL PART ID | SH. 1        | SH. 511-1 | A3-L       |
|        | CHECKED                                    | DATE          | 2021-07-30   |           |            |