


PHILIPS

Maxos fusion

LL500E Gen2

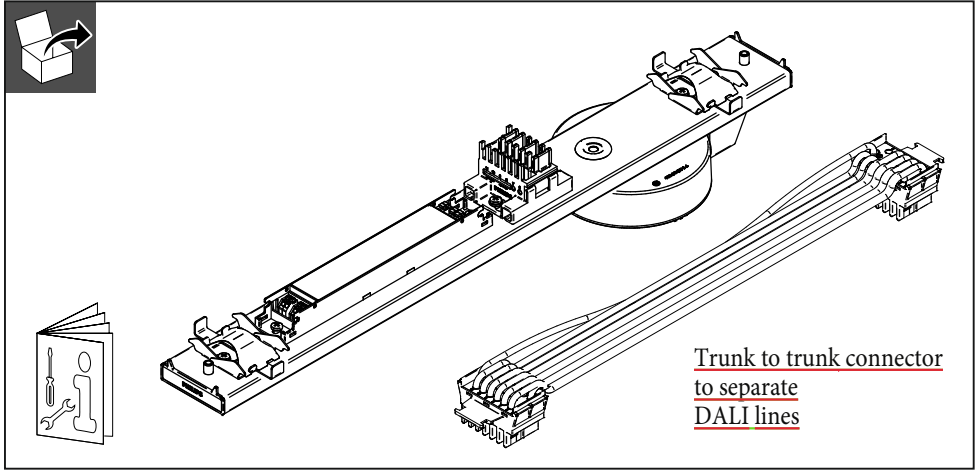

50Hz
60Hz

220V
240V



LEDs



Max.
35 °C
Min.
-20 °C

IP20
LL500T

IK02




  LL500E H4 SR2DALI Gen2




kg
0,92

FRONT SIDE

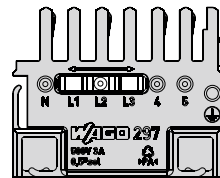


BACK SIDE

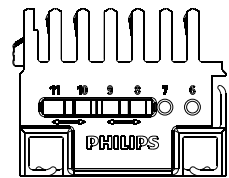

PE N	FRONT SIDE					BACK SIDE						Trunk Compatibility		
	L1	L2	L3	4	5	6	7	8	9	10	11	LL...T 7...	LL...T 9...	LL...T 13...
LL500E H4 SR2DALI Gen2				DA+	DA-							✓	✓	✓




- IMPORTANT INFORMATION - READ BEFORE INSTALLATION


- for use with panels with DIA drivers only. DON'T USE with PSD, SRD and SIA drivers (high risk of DAMAGE)
- **use trunk to trunk connector supplied with the sensor unit to separate DALI lines between two trunks to separate a group of 1 sensor + max. 20 drivers from another group along the light line**
- use max. 20 panels per one DALI line segment
- do not connect more than one sensor unit to one DALI line segment
- do not connect more than one emergency light unit to one DALI line segment
- do not connect any external power sources to DALI
- max 25 m distance (line-of-sight) between sensor units

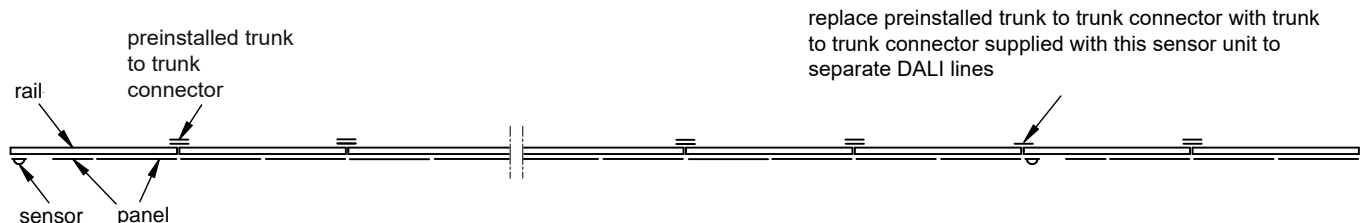


442710484352

2024-07-29
© Signify Holding
All rights reserved

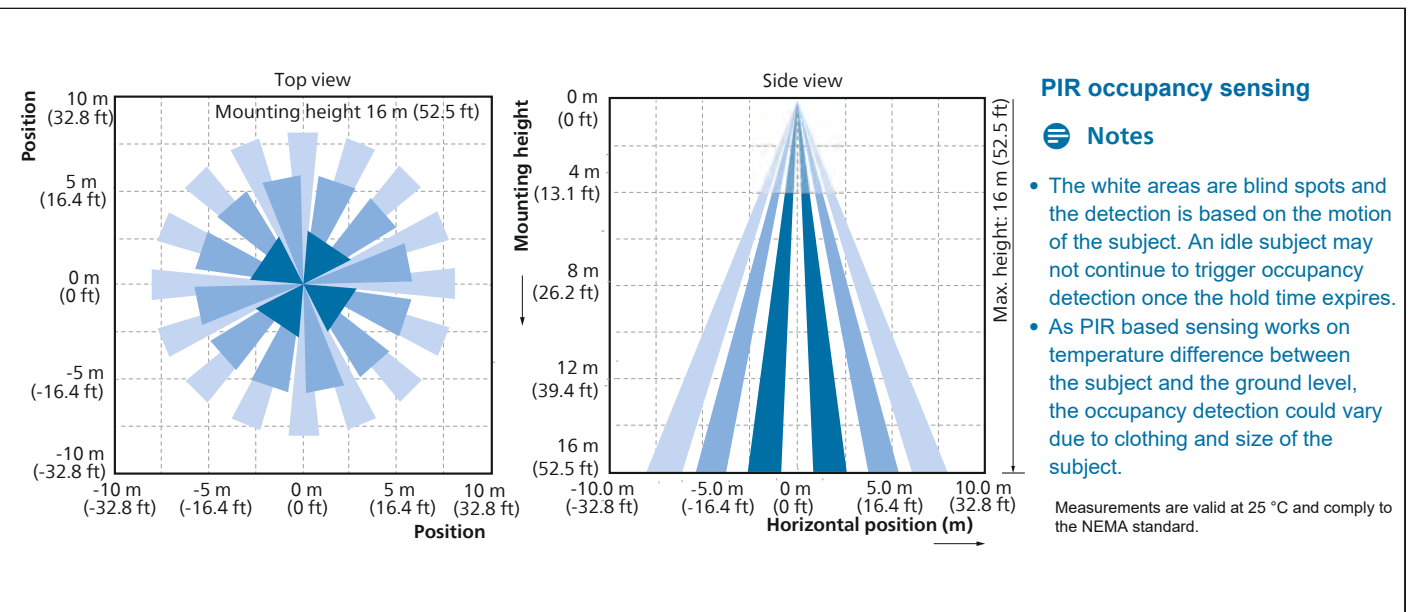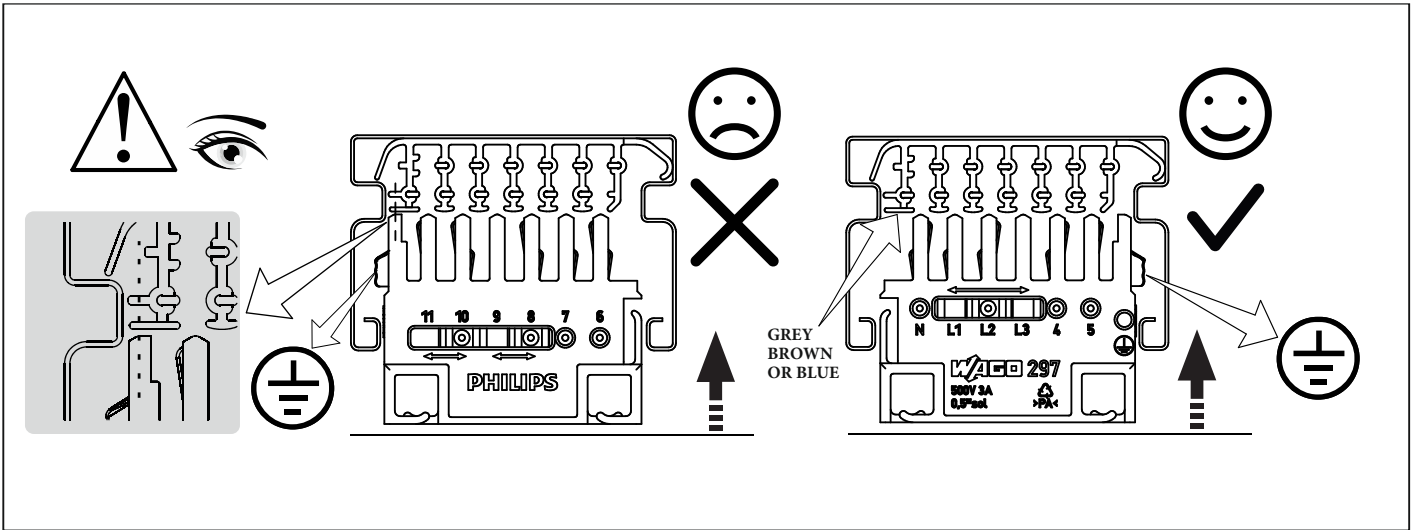
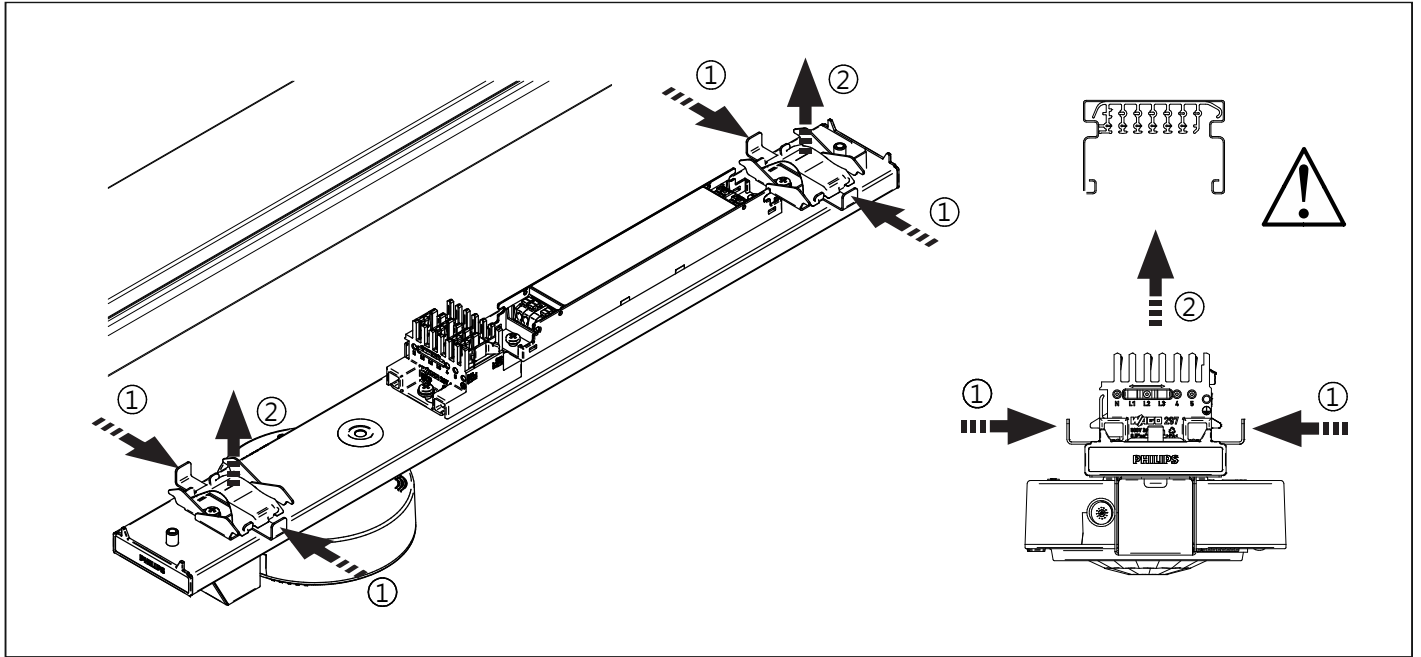


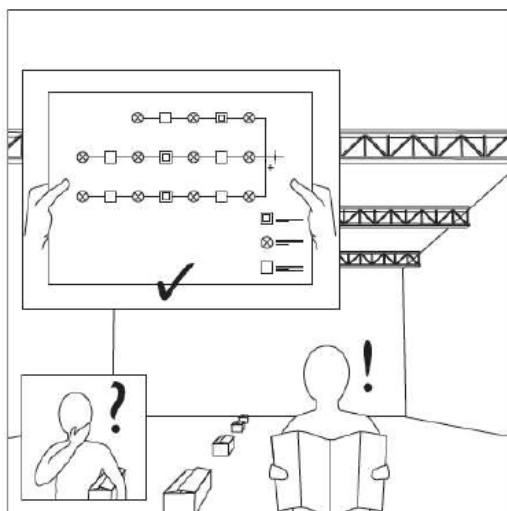

You must have a lighting plan, if you install the warehouse system.

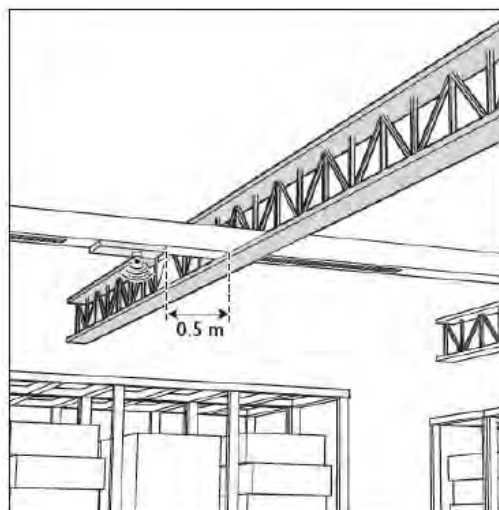

Do not install the warehouse system control unit close to steel or concrete constructions.

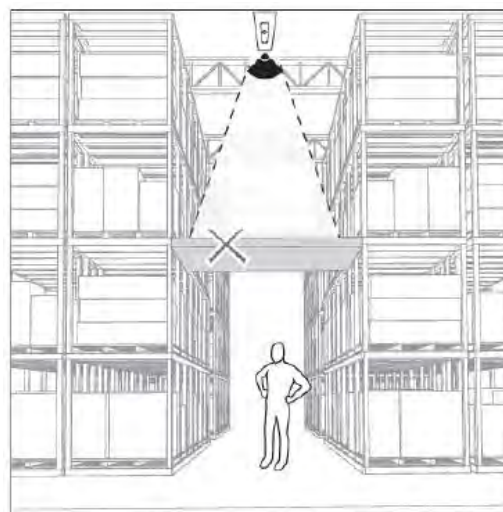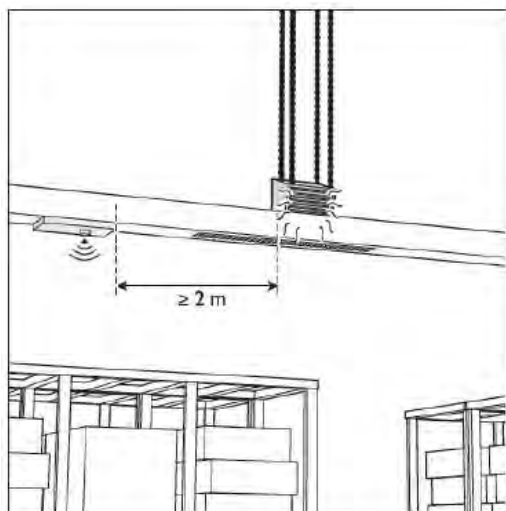

Do not block the view of the warehouse system sensor.