

	#	Disassembly Instruction							Tools needed	
Q	а	Unscrew the Screws [1]. Pull the tube [2] out of the base [3] and unplug the flat wire from the light source.							Screwdriver T6	
	b	Pull the diffuser [4] out of the tube [2] and remove the light source* [5]							-	
	с	Unscrew the 3 screws [6] and remove the foot [7] from the base [3]							Screwdriver T20	
	d	Unscrew [10] the Hue Connect [8] and Control gear [9]. Loosen the wires from the Hue Connect							Screwdriver T10 / Wago	
	e	Loosen the wires from the cordset [11] and the Control gear [9]. Pull the cordset out of the frame [12] and foot [7]							-	
	—									
	#	COMPO	DNENT	QTY	SKL	J	Color	Country	/	
	1	Screws		2	915	5005987101	White	EU		
R	2	Tube		1	915	5005987201	Black	EU		
	3	Base		1	915	005987501	White	NAM		
	4	Diffuse	Diffuser		915	005987601	Black	NAM		
	5	Light Source Screws		1	915	5005987701	White	UK		
	6			3	915	005987801	Black	UK		
	7	Foot	Foot		929	003103601	Black	AUNZ		
	8	Hue Co	nnect	1						
	9	Control gear		1						
	10	Screws		2	*					
	11	Cordset		1	FOR LIGHT SOURCE-LED STRIP REMOVAL PLEASE SEE DOCUMENT					
	12	Frame		1	"200604 - Instruction LED Strip Removal Procedure"					
L	1								4	F
			2				3		4	5