



**Warnings**

Always make sure the luminaire is detached from the mains socket  
 Always make sure the DC cable is detached from the power supply  
 Staring at the operating light source may cause eye injury

#	SLR Description	Tools needed
a	Rotate the front window [1] by hand counter clockwise until it unsnaps. Lift the front window up to remove it from the Base [7]	-
b	Remove the Diffuser [2] and Cover Foil [3] by hand. The diffuser is slightly clamped in the reflector [5]	-
c	Unscrew the 3 screws [4] and remove the reflector [5]	Torxhead Screw driver T10
d	Unplug the flat wire from the light source [6] and remove the light source from the Base [7]	-
e	Unscrew the screw [11]. Pull the foot [10] loose from the Base [7]	Allen Key
f	Pull the cable [12] out of the Hue Connect [8].	-
g	Remove the Cable [12] and Hue Connect [8]	-

#	COMPONENT	QTY
1	Front Window	1
2	Diffuser	1
3	Cover Foil	1
4	Screws	3
5	Reflector	1
6	Light Source LED Module	1
7	Base	1
8	Control gear Hue Connect	1
9	Screw	1
10	Foot	1
11	Screw	1
12	Cable	1

SKU	Color	Country
929002375901	White	EU/UK
929002376001	Black	EU/UK
929002376501	White	NAM
929002376601	Black	NAM

STATUS	DESCRIPTION	DESIGN ID	01 2021-01-29
	Hue Bloom Gen4 Disassembly Instruction	DOC 12NC	442295201180
NAME	Ma Vr	LOCAL PART ID	SH. 1
CHECKED	DATE	2021-01-29	SH. 511
			A2-P
CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding			