
PHILIPS
hue

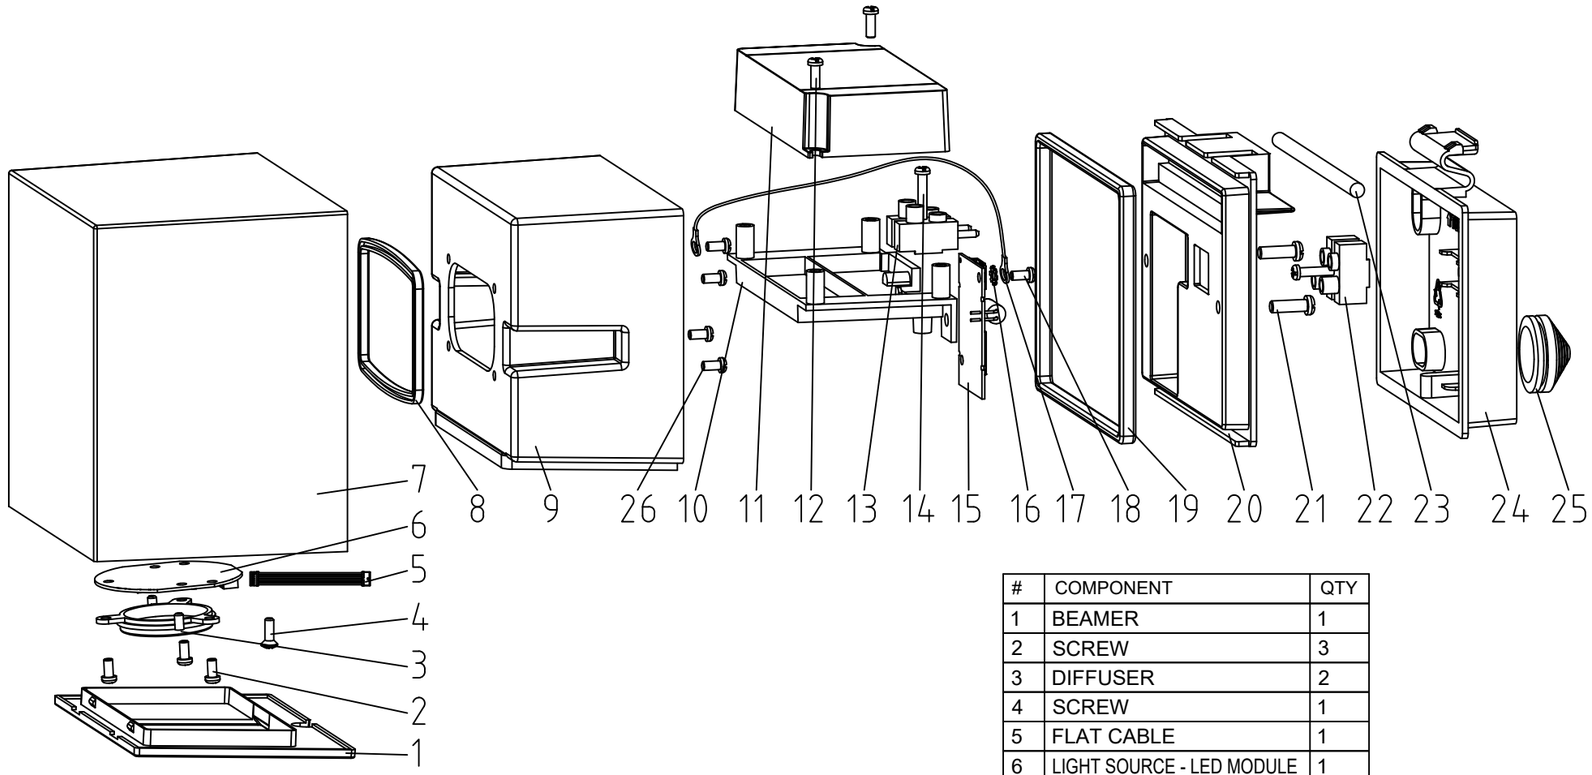

#	COMPONENT	QTY
1	BEAMER	1
2	SCREW	3
3	DIFFUSER	2
4	SCREW	1
5	FLAT CABLE	1
6	LIGHT SOURCE - LED MODULE	1
7	BODY	1
8	GASKET	1
9	LENS	1
10	BRACKET	1
11	CONTROL GEAR - PSU	1
12	SCREW	2
13	TERMINAL BLOCK	1
14	SCREW	2
15	LIGHT SOURCE - HUE CONNECT	1
16	WASHER	1
17	WIRE	1
18	SCREW	1
19	GASKET	1
20	COVER PLATE	1
21	SCREW	2
22	TERMINAL BLOCK	1
23	GASKET	1
24	WALL PLATE	1
25	GROMET	1
26	SCREW	4

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	REMOVE THE BEAMER (1)	-
b	REMOVE WALL PLATE (24) BY UNSCREWING THE SCREW (4)	CROSS HEAD SCREW DRIVER
c	REMOVE COVER PLATE (20) BY UNSCREWING THE SCREWS (21)	CROSS HEAD SCREW DRIVER
d	REMOVE FLAT CABLE (5) FROM THE LIGHT SOURCE - HUE CONNECT (15)	-
e	REMOVE WIRES OF THE CONTROL GEAR - PSU (11) FROM THE LIGHT SOURCE - HUE CONNECT (15)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
f	REMOVE LIGHT SOURCE - HUE CONNECT (15) BY UNSCREWING THE SCREW (18)	CROSS HEAD SCREW DRIVER
g	SLIDE BRACKET (10) OUT FROM THE LENS (9)	-
h	REMOVE CONTROL GEAR - PSU (11) FROM BRACKET (10) BY UNSCREWING THE SCREWS (12)	CROSS HEAD SCREW DRIVER
i	UNSCREW WIRES OF CONTROL GEAR - PSU (11) FROM THE TERMINAL BLOCK (13)	FLAT HEAD SCREW DRIVER
j	REMOVE LENS (9) BY UNSCREWING THE SCREWS (26)	CROSS HEAD SCREW DRIVER
k	REMOVE FLAT CABLE (5) FROM THE LIGHT SOURCE - LED MODULE (6)	-
l	REMOVE LIGHT SOURCE - LED MODULE (6) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER

SKU	Color	Country
929003553001	BLACK	EU

STATUS	DESCRIPTION	DESIGN ID	
2022-08-16	Hue Resonate Wall down EU	DOC 12NC	
NAME Wi Hu	LOCAL PART ID	SH. 1	SH. A3-P
CHECKED	DATE	PROPERTY OF: © 2020 Signify Holding	