PHILIPS

hue

signify

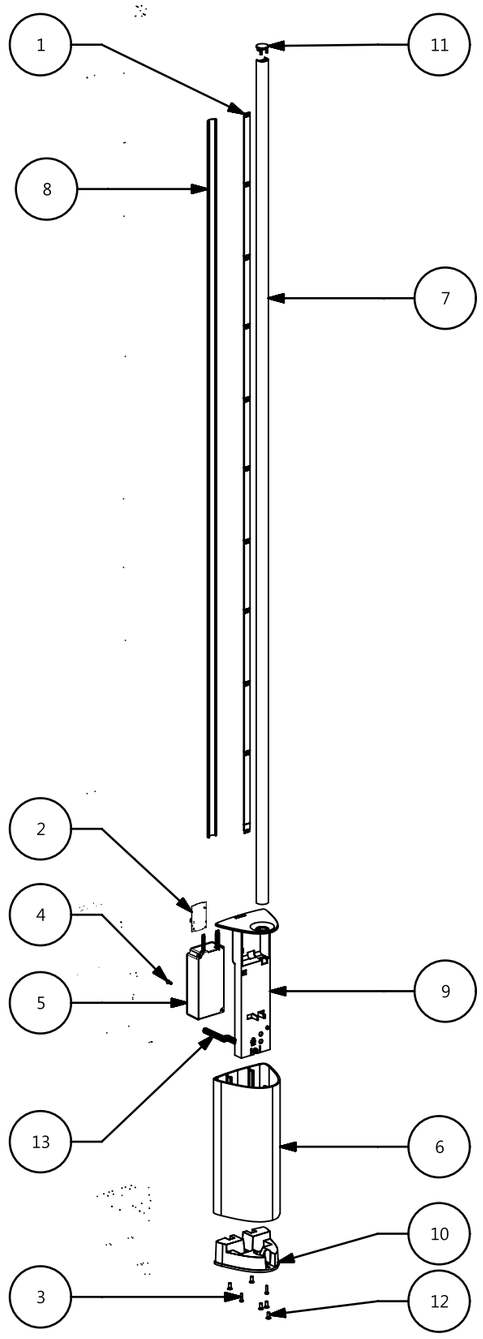

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Unscrew the screws [3].	CROSSHEAD SCREWDRIVER PZ1
b	Unscrew the screws [12]. Pull the tube [7] and frame [9] out of the base [6] and foot [10].	TORXHEAD SCREW DRIVER T20
c	Unplug the flat wire from the light source [1].	-
d	Remove endcap [11] and pull the diffuser [8] out of the tube [7] and remove the light source [1]	-
e	Unplug the cable from Hue connect [2] and release Hue connect [2] from snap in frame [9]	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
f	Unscrew the screw [4] and release Control gear [5].	TORXHEAD SCREW DRIVER T10
g	Loosen the wires from the cordset [13] and the Control gear [5]. Pull the cordset out of the frame [9].	

#	COMPONENT	QTY
1	Light Source	1
2	Hue connect	1
3	Screws	2
4	Screw	1
5	Control gear - PSU	1
6	Base	3
7	Tube	1
8	Diffuser	1
9	Frame	1
10	Foot	2
11	Endcap	1
12	Screws	5
13	Cordset	1

SKU	Color	Country
915005871601	Aluminium	EU

STATUS	DESCRIPTION	DESIGN ID	01	2022-07-20
	Signe Floor	DOC 12NC	915005871601	
NAME Ir Pi	LOCAL PART ID	SH. 1	SH. 511-1	A3-L
CHECKED	DATE 2022-07-20			