
PHILIPS


hue

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Remove wires out of the terminal blocks (4)	FLATHEAD SCREWDRIVER
b	Remove the deco part (1) by turning it counterclockwise.	-
c	Remove the glass (2).	-
d	Remove the deco ring (3).	-
e	Remove flat cable from the LIGHT SOURCE - LED STRIP [12] and LIGHT SOURCE - HUE CONNECT [7]	-
f	Remove the CONTROL GEAR – PSU (5) from the heat sink (9) by unscrewing nuts (6).	SOCKET WRENCH
g	Remove the LIGHT SOURCE - HUE CONNECT (7) from the heat sink (9) by unscrewing screws (8)	TORXHEAD SCREW DRIVER T10
h	Remove low voltage wires of the cable of LIGHT SOURCE - HUE CONNECT (7)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
i	Remove HEAT SINK (9) by unscrewing nuts (10).	SOCKET WRENCH
j	Remove light strip (12) acc. to instruction: 442295215544_L2 Removal and Test Instruction Flex LED strip	See instruction.

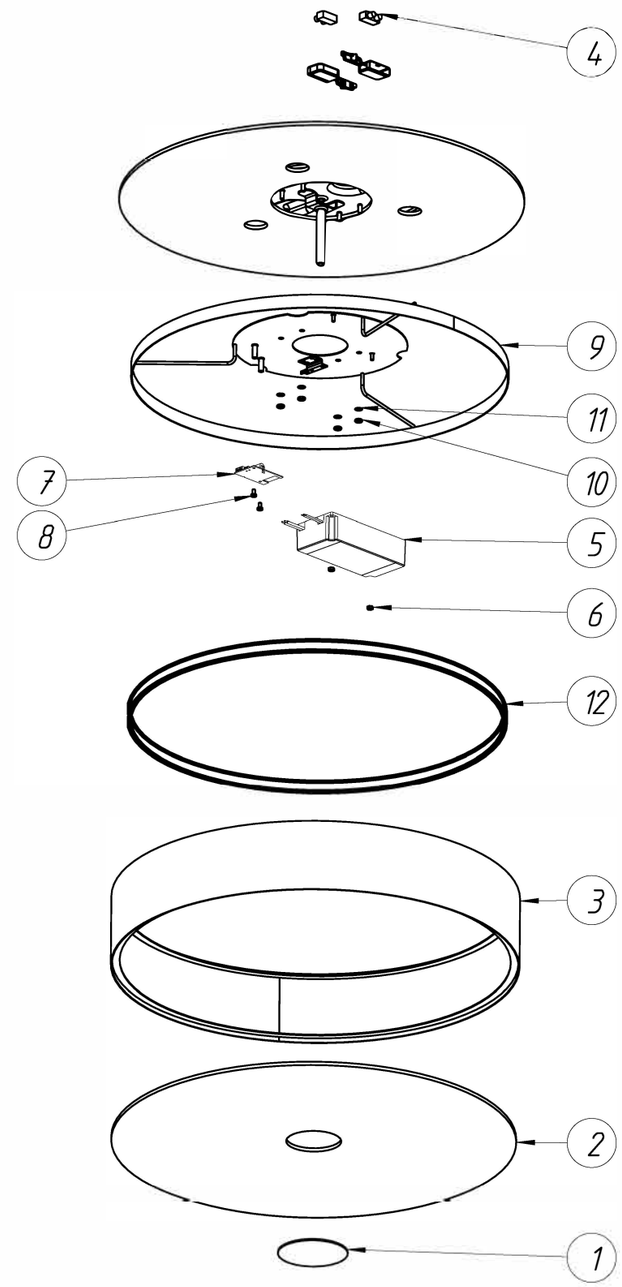

- A specific Wago tool #2065 can be ordered separately for wire insertion and release tool:

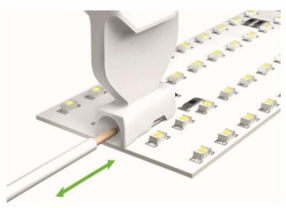




SKU	Color	Country
929003054601	WHITE	EU
929003054701	BLACK	EU

#	COMPONENT	QTY
1	DECO PART	1
2	GLASS	1
3	DECO RING	1
4	TERMINAL BLOCK	2
5	CONTROL GEAR - PSU	1
6	NUT	2
7	LIGHT SOURCE - HUE CONNECT	1
8	SCREW	2
9	HEAT SINK	1
10	NUT	4
11	WASHER	4
12	LIGHT SOURCE - LED STRIP	1

STATUS	DESCRIPTION: Fair ceiling Disassembly instructions		DESIGN ID 01	2021-07-23
NAME He Go	LOCAL PART ID	SH. 2		A3-L
CHECKED	DATE 2021-07-23			

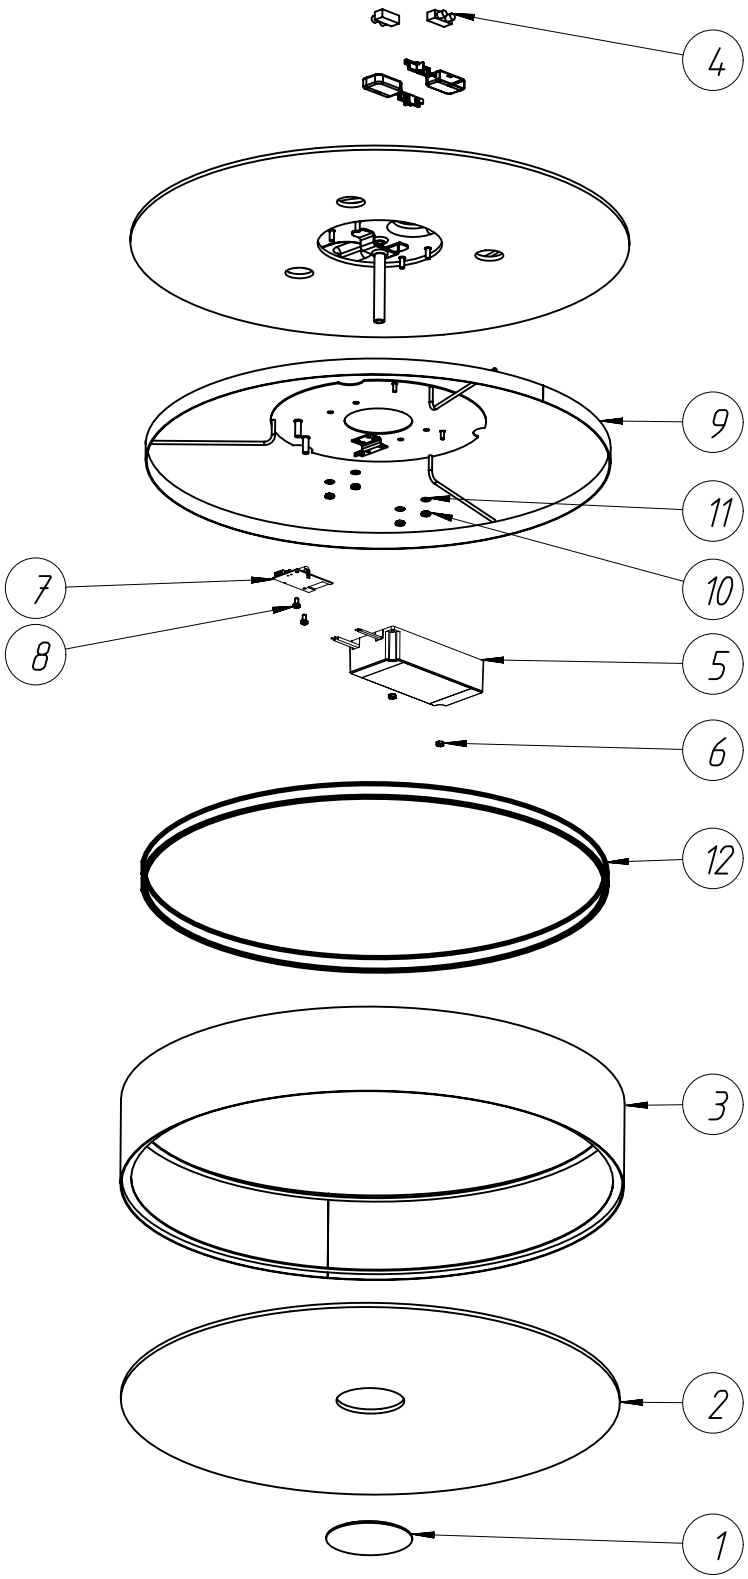
4
9
11
10
7
8
5
6
12
3
2
1