


INSTALLATION INSTRUCTIONS

SlenderForm Round Arm WALL CANOPY (RECESSED J-BOX OR CONDUIT STUB OUT)

**IMPORTANT: READ ALL INSTRUCTIONS BEFORE PERFORMING ANY WORK.
BE SURE ALL POWER IS OFF PRIOR TO INSTALLING LUMINAIRES.**

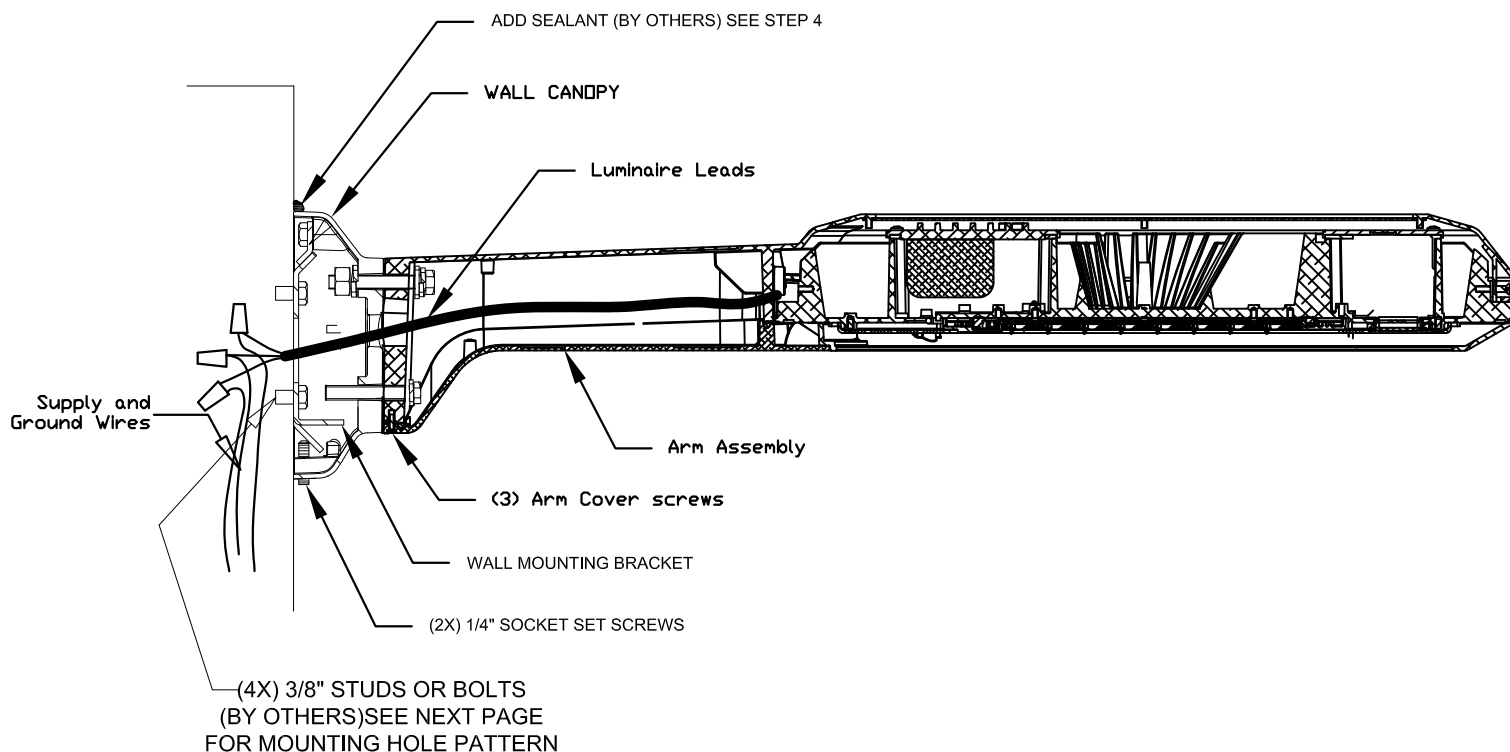


1. Place Wall Mounting Bracket over splice box (or conduit stub out) and secure to wall with 3/8" studs or bolts (By Others). See mounting hole pattern for bolt location.
2. Pull Supply and Ground Wires so they extend approximately 10" from Wall Mounting Bracket.
3. Loosen (3X) #6-32 Philips screws and remove Arm Cover.
4. Apply bead of suitable weatherproof sealant along horizontal top, vertical left and right edges of the Wall Canopy where it contacts the wall to prevent water entry.
5. Feed Supply and Ground Wires through back of Wall Canopy into Luminaire.
6. Engage Hanger Bracket to the top angled flap of the Wall Mounting Bracket and allow Wall Canopy to rest against the wall.
Tighten (2X) 1/4" Socket Set Screws using 1/8" allen wrench.

INSTALLATION INSTRUCTIONS

SlenderForm Round Arm WALL CANOPY (RECESSED J-BOX OR CONDUIT STUB OUT)

7. Make electrical connections and place splices and excess wire in j-box.
8. Install photocontrol if used.
9. Reinstall Arm cover and secure with (3X) #6-32 screws.

NOTE: WALL MOUNTING BRACKET IS SECURED TO WALL WITH 3/8" STUDS OR BOLTS (BY OTHERS). STRUCTURAL MEMBERS MUST BE PRESENT IN WALL TO ACCEPT BOLTS.

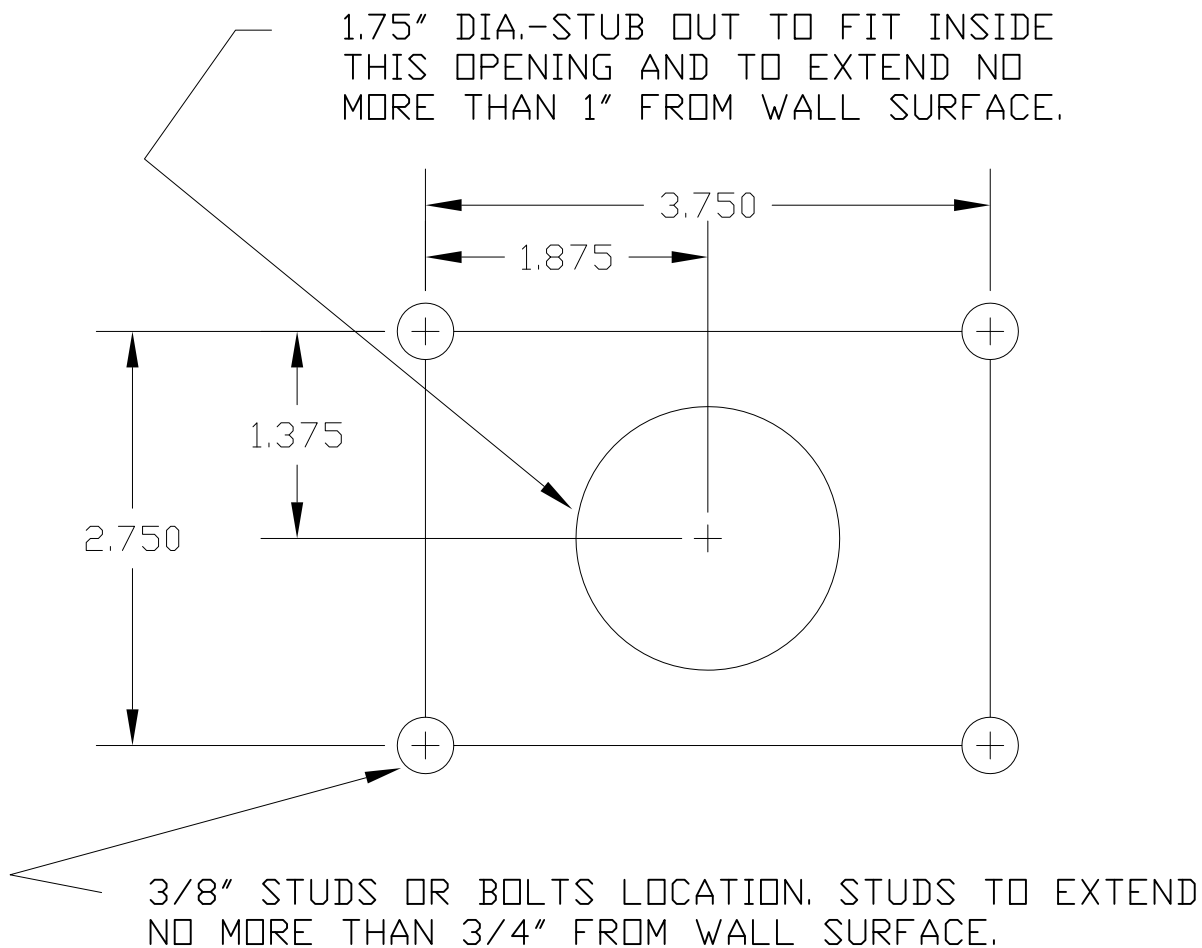

MOUNTING HOLE PATTERN