
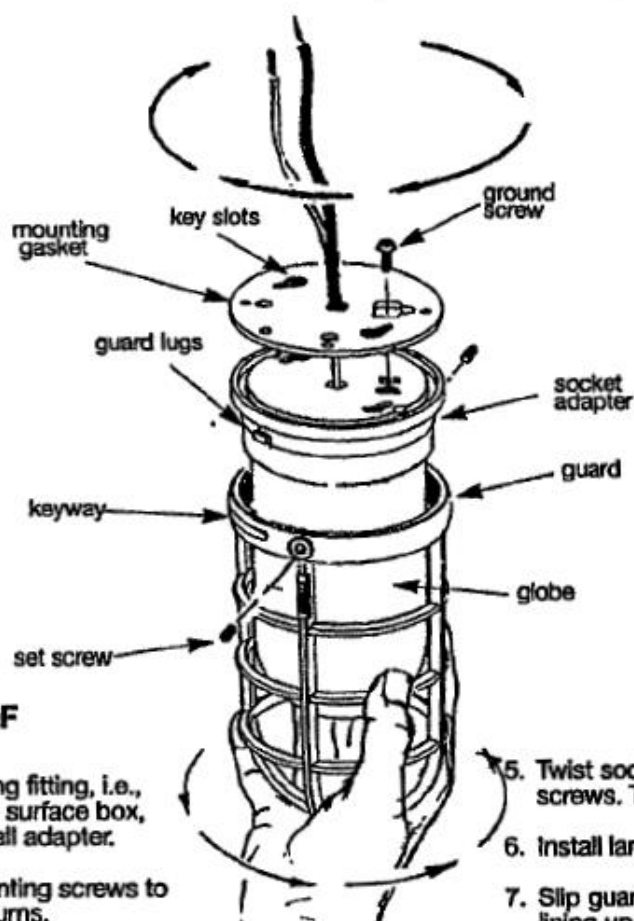


Mounting Instructions for roughlyte™ vaportight fixtures

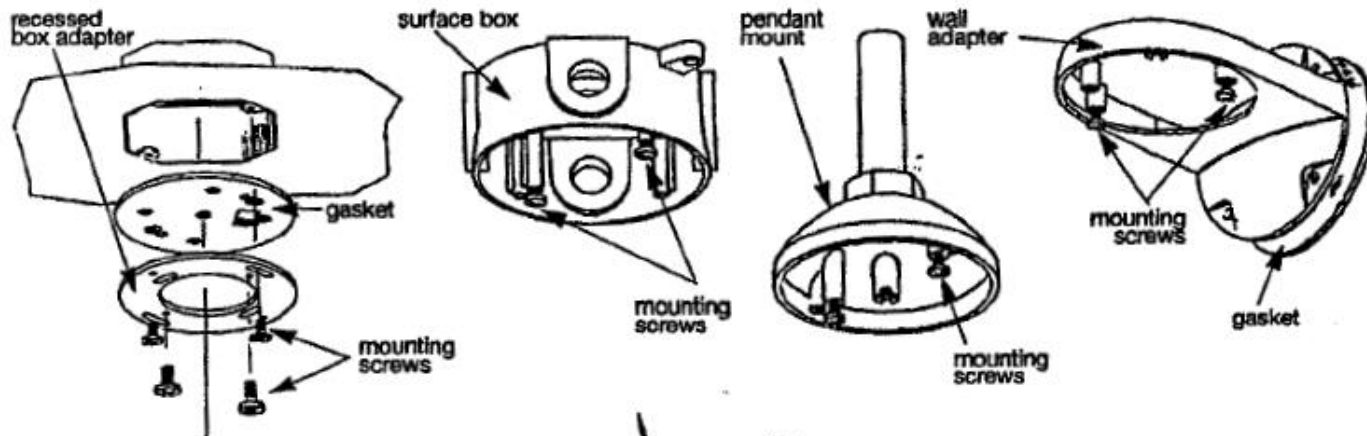

WITH POWER OFF

1. Install desired mounting fitting, i.e., recessed box adapter, surface box, pendant adapter or wall adapter.
2. Install (supplied) mounting screws to desired fitting a few turns.
3. Slip mounting gasket over socket adapter leads and line up mounting key slots. Insure that ground screw opening is lined up with grounding pads.
4. Connect supply leads to socket leads per NEC. Connect supply ground wire to grounding pads with screw supplied.
5. Twist socket adapter up over mounting screws. Tighten mounting screws.
6. Install lamp and globe.
7. Slip guard (optional) up and over globe, lining up keyways in guard with guard lugs on socket adapter. Turn clockwise until tight. Install set screws and tighten.