

These instructions detail special on-site requirements for installation of TruGroove recessed micro drywall fixtures in Chicago Plenum applications. This instructions must be used in conjunction with supplied TruGroove recessed micro drywall installation instructions. Read all supplied installation instructions before installing fixtures in drywall ceiling.

The steps shown below are to be performed with fixtures suspended just below the ceiling cutout approximately 12 to 18 inches below drywall ceiling level.




Complete power connections at wire cover. (connectors and flexible conduit by contractor) and insert inside housing as shown.



Align wire cover mounting hole with hole in housing.

Gently push down and secure wire cover with supplied view. At non-power locations use wire cover and supplied 7/8" plug. NOTE: Wire cover has factory supplied gasket, no tape required for this step.

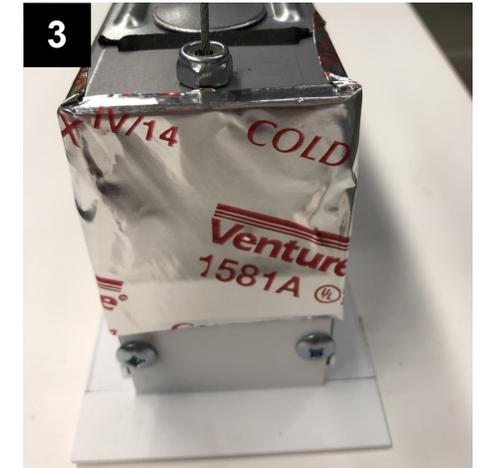

Suspend fixture as per the standard TruGroove recessed micro drywall installation instructions.

If lowering of the fixture is needed, the release key can be accessed from the inside.

! ATTENTION: Install in accordance with national and local building and electrical codes.

Page 1

These instructions detail special on-site requirements for installation of TruGroove recessed micro drywall fixtures in Chicago Plenum applications. This instructions must be used in conjunction with supplied TruGroove recessed micro drywall installation instructions. Read all supplied installation instructions before installing fixtures in drywall ceiling.



Use a flat head driver or needle nose plier to snap off the safety cover on the joiner bracket access.

This only needs to be done on ends that require joining.



The housing should look as above image on joining ends. Ensure that the broken off sheet metal should not fall into the fixture.




Attach and secure joiner brackets as per supplied TruGroove recessed micro drywall installation instructions. Using supplied tape, seal joint gaps on all sides as shown above.

These instructions detail special on-site requirements for installation of TruGroove recessed micro t-grid fixtures in Chicago Plenum applications. This instructions must be used in conjunction with supplied TruGroove recessed micro t-grid installation instructions. Read all supplied installation instructions before installing fixtures in ceiling.



There are four locations per fixture for Chicago guy-wire bracket.

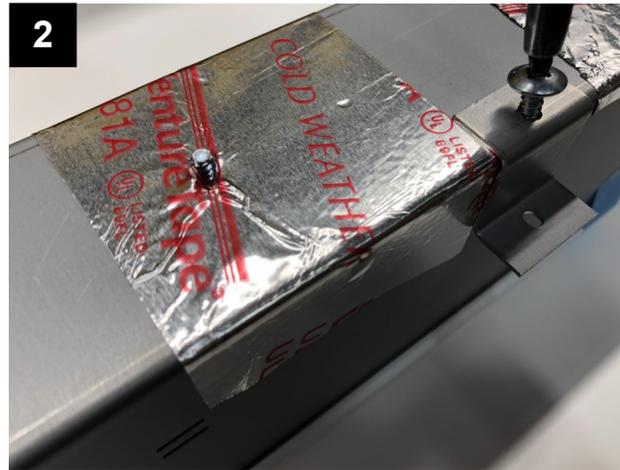

Secure bracket using supplied screw at each location.



Complete power connections. Or at non-power locations use wire cover and supplied 7/8" plug (shown in image above).

! ATTENTION: Install in accordance with national and local building and electrical codes.

Page 3

These instructions detail special on-site requirements for installation of TruGroove recessed micro t-grid fixtures in Chicago Plenum applications. This instructions must be used in conjunction with supplied TruGroove recessed micro t-grid installation instructions. Read all supplied installation instructions before installing fixtures in ceiling.



Align wire cover mounting hole with hole in housing.

Gently push down and secure wire cover with supplied view. At non-power locations use wire cover and supplied 7/8" plug. NOTE: Wire cover has factory supplied gasket, no tape required for this step.



Install grid brackets at required height as described per supplied TruGroove recessed micro T-Grid installation instructions. NOTE: 4 bracket required per fixture.




Use a flat head driver or needle nose plier to snap off the safety cover on the joiner bracket access.

This only needs to be done on ends that require joining.

! ATTENTION: Install in accordance with national and local building and electrical codes.

Page 4


These instructions detail special on-site requirements for installation of TruGroove recessed micro t-grid fixtures in Chicago Plenum applications. This instructions must be used in conjunction with supplied TruGroove recessed micro t-grid installation instructions. Read all supplied installation instructions before installing fixtures in ceiling.

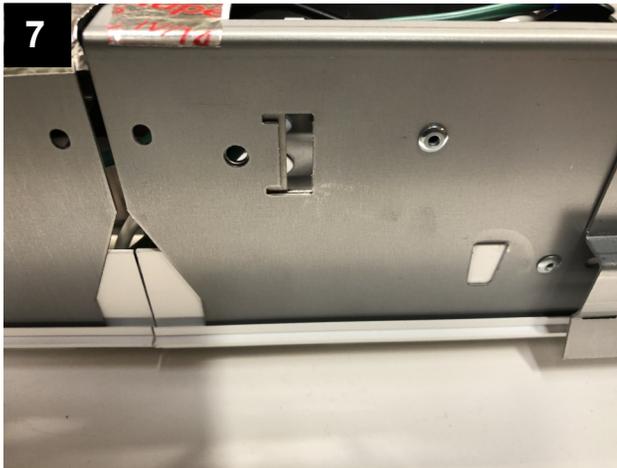

The housing should look as above image on joining ends. Ensure that the broken off sheet metal should not fall into the fixture.



Attach and secure joiner brackets as per supplied TruGroove recessed micro drywall installation instructions.

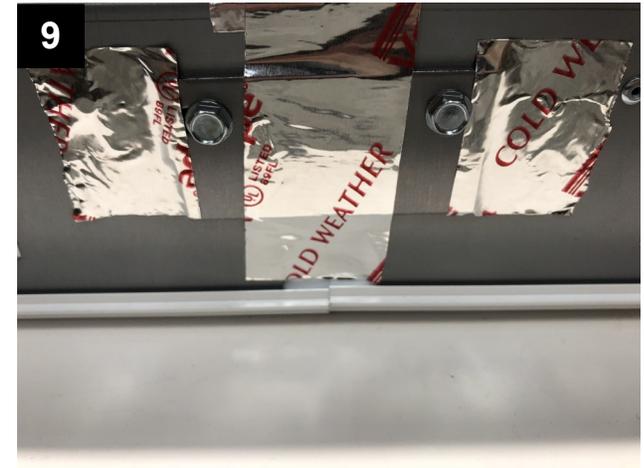

Using supplied tape, seal joint gaps on all sides as shown above.