

by (Signify


Signify North America Corporation 200 Franklin Square Drive Somerset, NJ 08873 Telephone 855-486-2216 Signify Canada Ltd. 281 Hillmount Road, Markham, ON, Canada L6C 2S3 Telephone 800-668-9008

INSTALLATION INSTRUCTIONS: SL-42

Safety, Warnings and Suggestions

- ¹ Care should be taken not to Position fixtures in locations where bare skin can come into contact with the Potentially high temperatures on the lens.
- ² Avoid installing fixtures in locations where water collects and stands for prolonged periods.
- ³ Make sure that electrical power is disconnected before any work is performed.
- ⁴ A// gaskets and sealing surfaces must be kept clean during installation.
- 5 *Installing* the fixture a few inches above the grade can reduce potential problems that can be caused by water and mud etc. collecting on the lens.
- ⁶ All wiring and installation should meet local, state and national electrical codes.
- 7 This will help prevent wire connector corrosion due to water penetration from the conduit.
- 8 Install correct lamp type and wattage.
- 9 If condensation, built up during installation, is visible on the lens it is recommended that the fixture be turned on before the lens ring is fully secured for approximately 30 minutes. This should allow the condensation to be exhausted.

Note: due to the SL-42's shallow profile it must be anchored to rebar, (connect to three anchor points provided on fixture housing) or held in place with a 21 lbs. min. weight, to keep it from floating out of the concrete during installation.

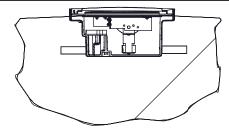

SL-42 in Soil

Mount Fixture as high above grade as pos sible to prevent debris and water standing on fixture surface.


Create an isolation barrier around the fixture to prevent rocks and foliage from interfering with light output.

Add drainage media below and around fix ture to prevent standing water.


- 1. Prepare the site with adequate exacavation to install fixtures 1. Drainage media below fixture will enhance installation 23.
- 2. Remove lens ring and lens with gasket, 4 reflector assembly and "D" shaped splice box cover plate and gasket.
- 3. Connect conduit to the 3/4" NPT openings in the splice compartment at the bottom of the fixture, using the appropriate thread sealing compound. Tighten up to 50 ft-lbs. max.
- 4. Position the fixture so it is flush on the concrete or above the landscape grade ₅ and orient the fixture with regards to architectural requirements to obtain the appropriate accent.

Warning: Reflector rotates ±45° so fixture position is critical. Splice box must be positioned 180° from area to be illuminated. For concrete, pour installations, replace lens ring, lens and gasket with provided debris cover, gasket and screws. After concrete stes reinstall lens ring, lens, and aasket.

- 5. Make power and ground connections by using provided waterproof wire nuts. t is recommended that RTV Silicone or other re-enterable water sealing compound be used to seal the conduit entry points 7.
- 6. Reinstall "D" shaped splice box cover and gasket ensuring that all four (4) screws are securely tightened. 4 Reinstall reflector assembly, install lamp 8 and make aiming adjustments.
- 7. Install lens ring and lens with gasket 4. IMPORTANT! A CRISS CROSS PATTERN IS REQUIRED TO ENSURE A GOOD COMPRESSION SEAL IS MADE. If this is not accomplished the fixture could leak and be damaged. Tighten socket head cap screws gradually using multiple tightening steps to 50 in/lbs.

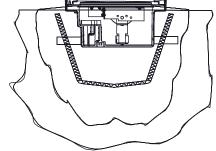


SL-42 In Soil With Concrete Base and Trim Ring

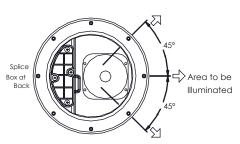

SL-42 Aiming Direction




Paver/Marble



SL-42 In Concrete With Trim Ring

Note: due to the \$1-42's shallow profile it must be anchored to rebar, (connect to three anchor points provided on fixture housing) or held in place with a 21 lbs. min. weight, to keep it from floating out of the concrete during installation.

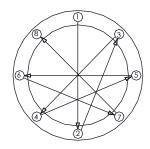

Use several rotations of the following sequence to tighten the lens ring socket head cap screws, to 50 in/lbs.

32A49138, revision B page 1 of 1