


FlexCove G3/LED 柔性灯带


Mounting instruction/ 安装说明



Type 型号	Lamp/M 光源/米	Voltage 电压	Power/M 功率/米	M/per roll 米/卷	Appearance 外观	kg
LSI60S LED4 824 IP20 L5000	48xSMD2835LED	24VDC	4W/M	5M(米)	A	0.07
LSI60S LED4 827 IP20 L5000	48xSMD2835LED	24VDC	3.8W/M	5M(米)	A	0.07
LSI60S LED4 840 IP20 L5000	48xSMD2835LED	24VDC	3.4W/M	5M(米)	A	0.07
LSI60S LED4 857 IP20 L5000	48xSMD2835LED	24VDC	3.4W/M	5M(米)	A	0.07
LSI61S LED8 824 IP20 L5000	60xSMD2835LED	24VDC	8.4W/M	5M(米)	B	0.07
LSI61S LED8 827 IP20 L5000	60xSMD2835LED	24VDC	8.3W/M	5M(米)	B	0.07
LSI61S LED8 840 IP20 L5000	60xSMD2835LED	24VDC	7.2W/M	5M(米)	B	0.07
LSI61S LED8 857 IP20 L5000	60xSMD2835LED	24VDC	7.2W/M	5M(米)	B	0.07
LSI62S LED12 824 IP20 L5000	60xSMD2835LED	24VDC	13.2W/M	5M(米)	B	0.07
LSI62S LED12 827 IP20 L5000	60xSMD2835LED	24VDC	12.8W/M	5M(米)	B	0.07
LSI62S LED12 840 IP20 L5000	60xSMD2835LED	24VDC	11.6W/M	5M(米)	B	0.07
LSI62S LED12 857 IP20 L5000	60xSMD2835LED	24VDC	11.6W/M	5M(米)	B	0.07
LSI60S LED4 927 IP20 L5000	48xSMD2835LED	24VDC	4.6W/M	5M(米)	A	0.07
LSI61S LED8 927 IP20 L5000	60xSMD2835LED	24VDC	9.7W/M	5M(米)	B	0.07
LSI62S LED12 927 IP20 L5000	60xSMD2835LED	24VDC	14.4W/M	5M(米)	B	0.07

可选附件：

- 1.AC160Z connector with leader cable
外观如C所示;
- 2.AC160Z connector
外观如D所示;
- 3.AC160Z mounting clip
外观如E所示;

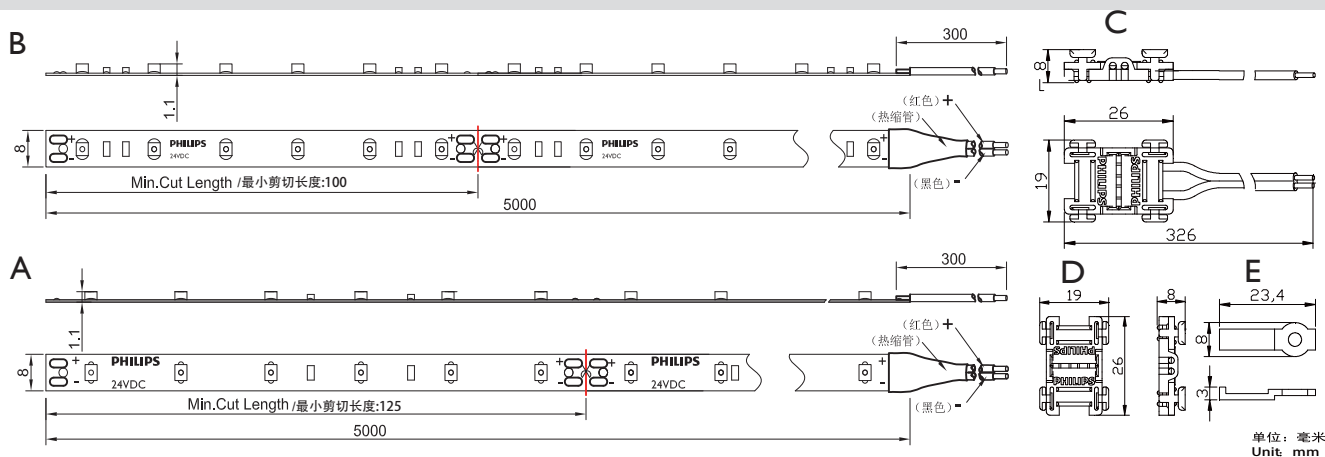

Please read this manual carefully before using the product

使用本产品前，请先仔细阅读本手册

The manufacturer will not be held responsible for improper usage or modifications of the product.

所有不当使用或自行更改产品结构而导致损坏，生产商不负任何责任。

This product must be used together with the driver appointed by Philips. The power supply must accord with independent driver requirements of IEC 61347-2-13/GB19510.14.

此灯带要和指定的飞利浦电源驱动器配套使用。电源驱动器必须符合IEC61347-2-13/GB19510.14的独立式要求。

This product must be used together with the connector appointed by Philips. The connector must in accordance with IEC 60838-2-2/GB19651.3.

此灯带要和指定的飞利浦连接器配套使用，连接器必须符合 IEC 60838-2-2/GB19651.3标准。

Indoor use only.

仅限室内使用。

Indirect illumination use only

仅限用于间接照明。

The part of Lighting strip cannot be replaced; if it is damaged, the product shall be destroyed.

灯带的电器元件不可替换，如果损坏请废弃整个灯带。

Operation instruction 使用操作说明:

Pls take staticproof measure when installing and maintaining the luminaires.

安装和维护灯具时，请做好防静电措施。

In case of operation failure, please switch off the power and contact your nearest Philips dealer.

如发现异常或操作有任何问题，请务必先切断电源，然后与飞利浦经销商联系。

Maintenance 保养方法：

In order to ensure optimum performance, please clean the product regularly (recommended twice a year). When cleaning the product, please use soft dry cottoncloth only.

为了保持灯带明亮效果，请定期（半年一次）进行清洁。

灯带不洁处需擦拭时，请用柔软干燥的布料擦拭。

Do not use chemical solvents to clean the lighting strip, it might damage the surface.

请不要用香蕉水等挥发性物质擦拭灯带表面，请不要对灯具喷洒任何化学药剂，否则灯具可能会变色或损坏。

Attention 注意：

Please shut off the power supply before mounting and maintaining lighting strip!

安装和维护灯带时请务必先关闭电源！

The lighting strip shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.

灯带应由有资格的电工安装，接线要符合IEE电气标准或国家标准。

The lighting strip shall not be covered with thermal insulation or similar material under any circumstance,

灯带不允许被隔热或类似材料覆盖。

1 Detach the tape on the head
剥离头部的胶带

2 How to use the connector-AC160Z connector
LED柔性灯带配件AC160Z connector的使用方法

3 Correctly connect the electrodes
正确连接电极

-Black (黑色)
+Red (红色)

b. The soldering point must be under the springs
此焊点必须在弹片以下

c. Close the connector
扣上连接器

a. The hole must be hitched on the pole
此孔必须套在所示的柱子上

4 How to use the connector-AC160Z connector
LED柔性灯带配件AC160Z connector的使用方法

5 How to use AC160Z mounting clip
LED柔性灯带配件AC160Z mounting 的使用方法

ST 2.9*10

6 Detach the entire tape and paste
剥离掉所有的胶带并粘贴

7

并联使用示意图

100-240VAC~
50/60Hz

24V DC
Power Supply
电源

Luminaire
灯具

Luminaire
灯具

电源可支持灯带长度

TYPE 型号	30W can support luminaires' length 30W电源可支持灯带长度	60W can support luminaires' length 60W电源可支持灯带长度	120W can support luminaires' length 120W电源可支持灯带长度
LS160S	5M(米)	10M(米)	21M(米)
LS161S	2M(米)	5M(米)	10M(米)
LS162S	1M(米)	3M(米)	6M(米)

8 Max length control/灯带串接长度控制

TYPE 型号	Max length A/最大长度A	Max length B/最大长度B	Max length C/最大长度C
LS160S	10M(米)	9M(米)	9M(米)
LS161S	6M(米)	5M(米)	5M(米)
LS162S	5M(米)	3M(米)	3M(米)

Note: The power supply and other cable be bought by end users; the wires must be at least 0.75mm².
注意：电源及其它连接线由客户自行购买；电线至少为0.75mm²。

9

为获得最佳混光效果，灯带距可见被照射面距离应大于10厘米
To achieve optimized lighting effect, the distance between the luminaire and the visible illuminated surface should be over 100mm.

可见被照射面
Visible illuminated surfaces

Min. 100mm

Min. 100mm

用户资料

用户姓名：_____ 身份证号码：_____

地址：_____

联系电话：_____ 邮政编码：_____

产品名称：_____ 产品型号：_____

出售单位及地址：_____

购买日期：_____年_____月_____日 发票号码：_____

飞利浦照明

<p>上海办事处 上海市闵行区虹梅路1535号 1号楼11F 电话：021-53898000 邮政编码：200233</p> <p>南京办事处 南京市汉中门2号金陵饭店 世界贸易中心6楼 电话：025-86556588 邮政编码：210005</p> <p>武汉办事处 湖北省武汉市汉口建设大道568 号新世界国贸大厦4708室 电话：027-85565999 邮政编码：430022</p> <p>广州办事处 广州市越秀区中山三路33号 中华国际中心B座18楼 电话：020-83141888 邮政编码：510055</p>	<p>北京办事处 北京市朝阳区光华路9号世 贸天阶大厦10层 电话：010-85273888 邮政编码：100020</p> <p>西安办事处 西安市南二环西段88号老三 届世纪星大厦30层 电话：029-88360546 邮政编码：710065</p> <p>成都办事处 成都市高新区天府大道中段 1268号天府软件园E3座10层 电话：028-62727666/7888 邮政编码：610041</p> <p>沈阳办事处 沈阳市沈河区北站路59号财 富中心E座11层 电话：024-31286092 邮政编码：110013</p>
---	---

仅限中国大陆地区

**飞利浦灯具产品
专用说明书
保修条例**

本公司保证该产品在正常使用及保养下能发挥其优越性能，同时本公司将为持证用户提供一年之保修服务（不含光源）。

1. 自购买日起一年内，凡经本公司维修人员确认为正常使用情况下因制造工艺或材料而导致的故障及损坏，您都将获得免费门市保修服务；

2. 此免费保修服务包括附件、辅助装置、运输费；

3. 维修时，保修证及发票正本或其他有效凭证同时使用方为有效；

4. 以下情况将不能享受免费服务：

1) 接不适当电源，使用不适当之安装而造成的损坏；

2) 非经本公司认可之维修和改装而造成的损坏；

3) 错误或疏忽使用或不适当配件而造成的损坏；

4) 因运输及其他意外而造成的损坏；

5. 此证若经涂改即作废；

6. 此证仅限在中国境内使用有效。

顾客热线：8008201201

飞利浦灯具（上海）有限公司

仅限中国大陆地区