
-		4				
#	Disassemble/dismantle steps	Tools needed				
а	Remove the deco part (1) by turning it counterclockwise.	-				
b	Remove the glass (2).	_				
С	Remove the deco ring (3).	-				
d	Disconnect the earthing wire by loosening the screw (4).	TORXHEAD SCREW DRIVER T10				
е	Remove the pull relief (5) by unscrewing the screws (6).	TORXHEAD SCREW DRIVER T10				
f	Unclamp 2 close end connectors and loosen wires from CONTROL GEAR-PSU [9] and power supply cord.	PINCER				
g	Remove flat cable from the LIGHT SOURCE - LED STRIP [14] and LIGHT SOURCE - HUE CONNECT [7]	-				
h	Remove the CONTROL GEAR – PSU (9) from the heat sink (11) by unscrewing nuts (10)	SOCKET WRENCH				
i	Remove the LIGHT SOURCE - HUE CONNECT (7) from the heat sink (11) by unscrewing screws (5)	TORXHEAD SCREW DRIVER T10				
j	Remove low voltage wires of the cable of LIGHT SOURCE - HUE CONNECT (7)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065				
k	Remove HEAT SINK by unscrewing nuts (12).	SOCKET WRENCH				
I	Remove light strip (14) acc. to instruction: 442295215544_L2 Removal and Test Instruction Flex LED strip	See instruction.				

- A specific Wago tool #2065 can be ordered separately for wire insertion and release tool:



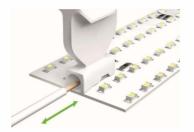

SKU	Color	Country
929003054401	WHITE	EU
929003054501	BLACK	EU

#	COMPONENT	QTY			
1	DECO PART	1			
2	GLASS	1			
3	DECO RING	1			
4	SCREW				
5	PULL RELIEF				
6	SCREW				
7	LIGHT SOURCE - HUE CONNECT	1			
8	SCREW				
9	CONTROL GEAR - PSU				
10	NUT	2			
11	HEAT SINK	1			
12	NUT	4			
13	WASHER	4			
14	LIGHT SOURCE - LED STRIP	1			

												1
STA	TUS	DESCRIPTION			DESIGN ID 01			2021-07-23	ı			
										F		
		Fair Hue pendant Disassembly instruction										ľ
		Tan Trae periaant Bisassemisty mistraetien										ı
AME	He Go		LOCAL	PART ID		sh. 1					A3-L	İ
	CHECKED		DATE	2021-07-23								i
_						7			_			5