
PHILIPS

hue

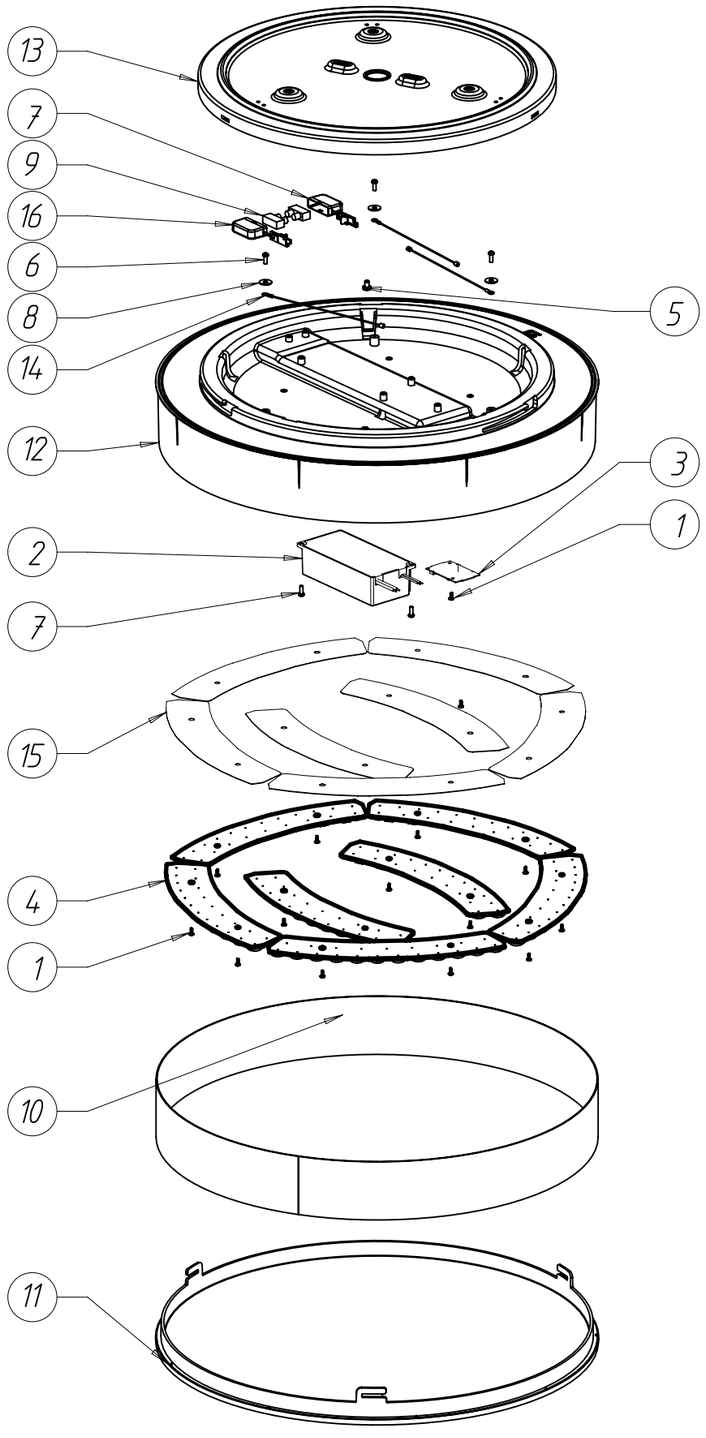

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Press and rotate diffuser [11] by hand counter clockwise until it unsnap.Lift the diffuser up to remove it from base [12]	-
b	Remove deco ring [10] by lifting up from the base [12]	-
c	Unplug wires from light source-led modules [4]	WAGO TOOL #2060
d	Remove low voltage wires of Control gear - psu [2] from Light source - hue connect [3]	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
e	Unplug wires from the light source - hue connect [3] and light source - led module [4]	-
f	Unscrew 1 screw [1] and remove light source-hue connect [3]	TORXHEAD SCREW DRIVER T10
g	Unscrew 14 screws [1] and remove light source -led modules [4] and plates [15]	TORXHEAD SCREW DRIVER T10
h	Rotate bracket [13] by hand counter clockwise until it unsnap.Lift bracket up to remove it from base [12]	
i	Remove terminal blocks [9] by unscrewing wires of the control gear - psu [2],remove cover N [7] and cover L [16]	FLATHEAD SCREWDRIVER
j	Unscrew 3 screws [6] and remove suspension cables [14] and washers [8] from base [12]	TORXHEAD SCREW DRIVER T10
k	Unscrew 1 screw [5] and remove it from bracket [13]	CROSSHEAD SCREWDRIVER PZ
l	Unscrew 2 screws [6] and remove control gear [2] from base [12]	TORXHEAD SCREW DRIVER T10

#	COMPONENT	QTY
1	Screw	15
2	Control gear - psu	1
3	Light source - hue connect	1
4	Light source -led module	7
5	Screw	1
6	Screw	5
7	Cover N	1
8	Washer	3
9	Terminal block	2
10	Deco ring	1
11	Diffuser	1
12	Base	1
13	Bracket	1
14	Suspension cable	3
15	Plate	7
16	Cover L	1

SKU	Color	Country
915005996801	White	EU/UK
915005996901	Black	EU/UK
915005997701	White	EU/UK

STATUS	DESCRIPTION			DESIGN ID 02	2025-04-10
	Enrave L lamp disassembly instruction			DOC 12NC	
NAME Kudlaty, Pawel		LOCAL PART ID	SH. 1	SH.	A3-L
CHECKED		DATE 2021-06-10		CONFIDENTIAL, PROPERTY OF: © 2020 Signify Holding	