
PHILIPS


hue

Warnings
Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	Remove the screw (2)	ALLEN KEY
b	Remove the glass (1) by turning counter clockwise	-
c	Remove cover (12) by removing screws (9)	-
d	Slide LIGHT SOURCE - HUE CONNECT (11) out of connection box (8)	-
e	Remove low voltage wires of the cable of LIGHT SOURCE - HUE CONNECT (11)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
f	Rermove diffuser (3) by unclicking from the inside	FLATHEAD SCREWDRIVER
g	Remove heat sink (7) by unscrewing screws (10)	TORXHEAD SCREW DRIVER T10
h	Remove LIGHT SOURCE - LED MODULE (5) by unscrewing screws (4)	TORXHEAD SCREW DRIVER T10
i	Remove low voltage wires of the LIGHT SOURCE - LED STRIP (6) and LIGHT SOURCE - LED MODULE (5)	-
j	Remove the bracket (17) from the base (13) by unscrewing screws (16)	CROSSHEAD SCREWDRIVER PZ
k	Remove the CONTROL GEAR - PSU (14) from the base (13) by unscrewing screws (15)	TORXHEAD SCREW DRIVER T10
l	Unclamp 2 close end connectors from the low voltage wires from CONTROL GEAR - PSU (14)	PINCER
m	Remove LIGHT SOURCE-LIGHT STRIP (8)	See document: 200604 - Instruction LED Strip Removal Procedure

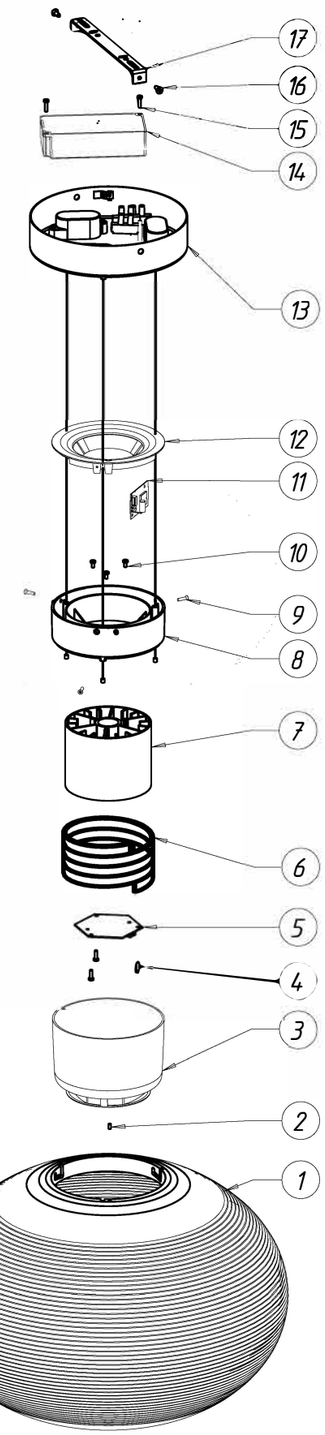

- A specific Wago tool #2065 can be ordered separately for wire insertion and release tool:

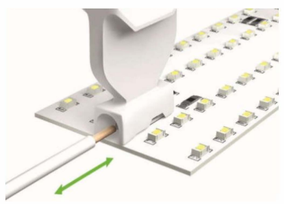




#	COMPONENT	QTY
1	GLASS	1
2	SCREW	1
3	DIFFUSER	1
4	SCREW	3
5	LIGHT SOURCE - LED MODULE	1
6	LIGHT SOURCE - LED STRIP	1
7	HEAT SINK	1
8	CONNECTION BOX	1
9	SCREW	3
10	SCREW	3
11	LIGHT SOURCE - HUE CONNECT	1
12	COVER	3
13	BASE	1
14	CONTROL GEAR - PSU	1
15	SCREW	2
16	SCREW	2
17	BRACKET	1

SKU	Color	Country
929003053601	White	EU/UK

STATUS	DESCRIPTION	DESIGN ID 01	2021-07-09
	FLOURISH Hue pendant 31W 24V Disassembly instruction	DOC 12NC	
NAME He Go	LOCAL PART ID	SH. 3	A3-L
CHECKED	DATE 2021-07-09		

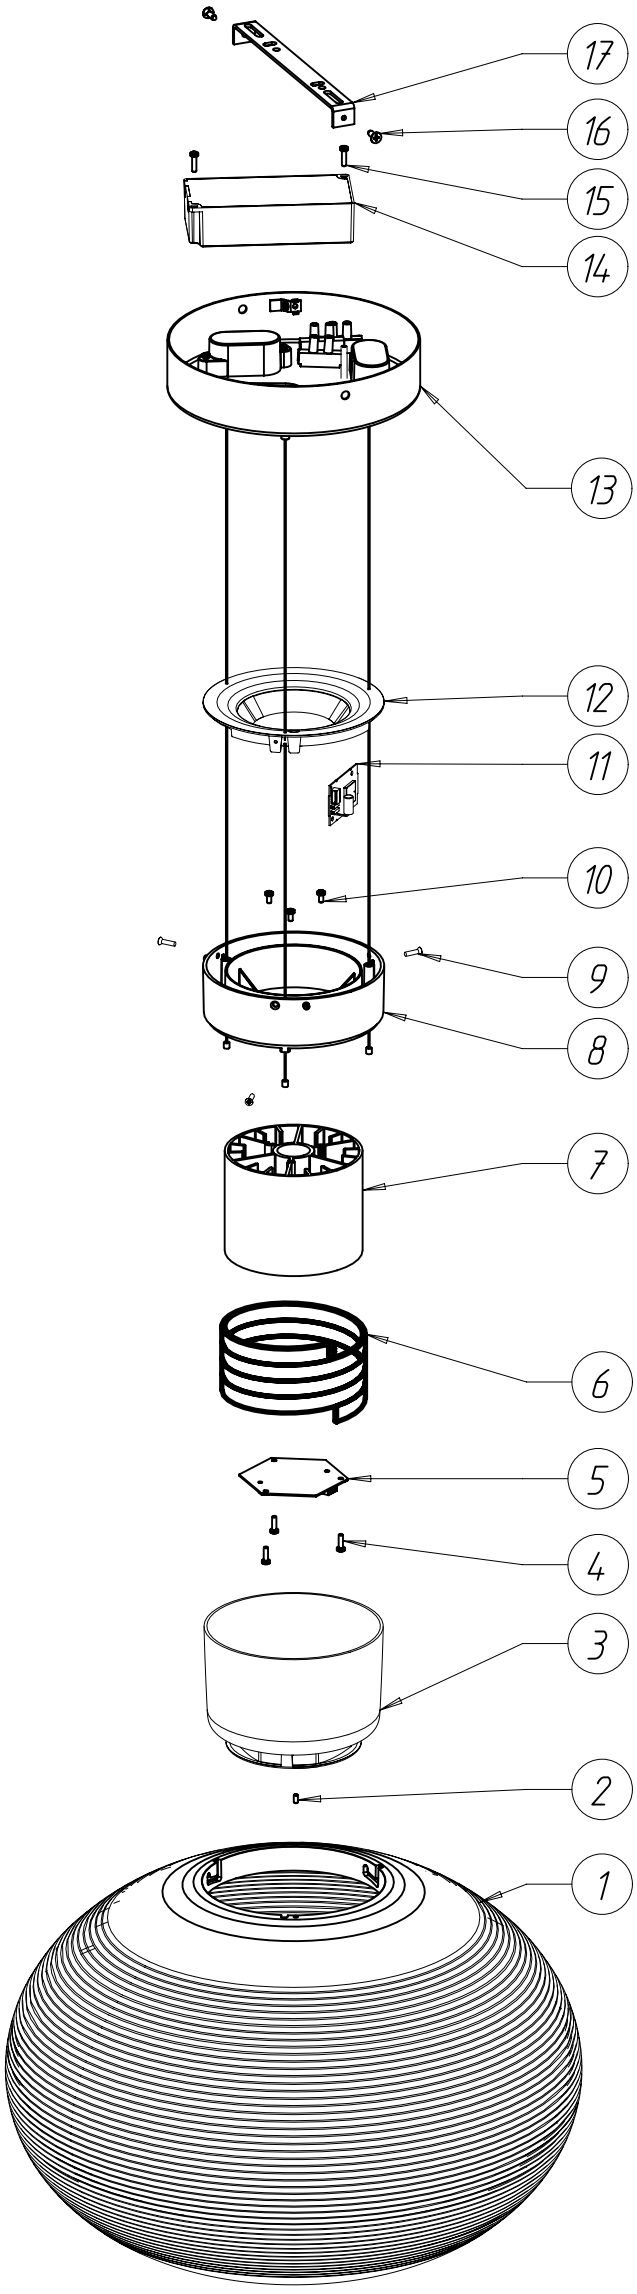
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1