


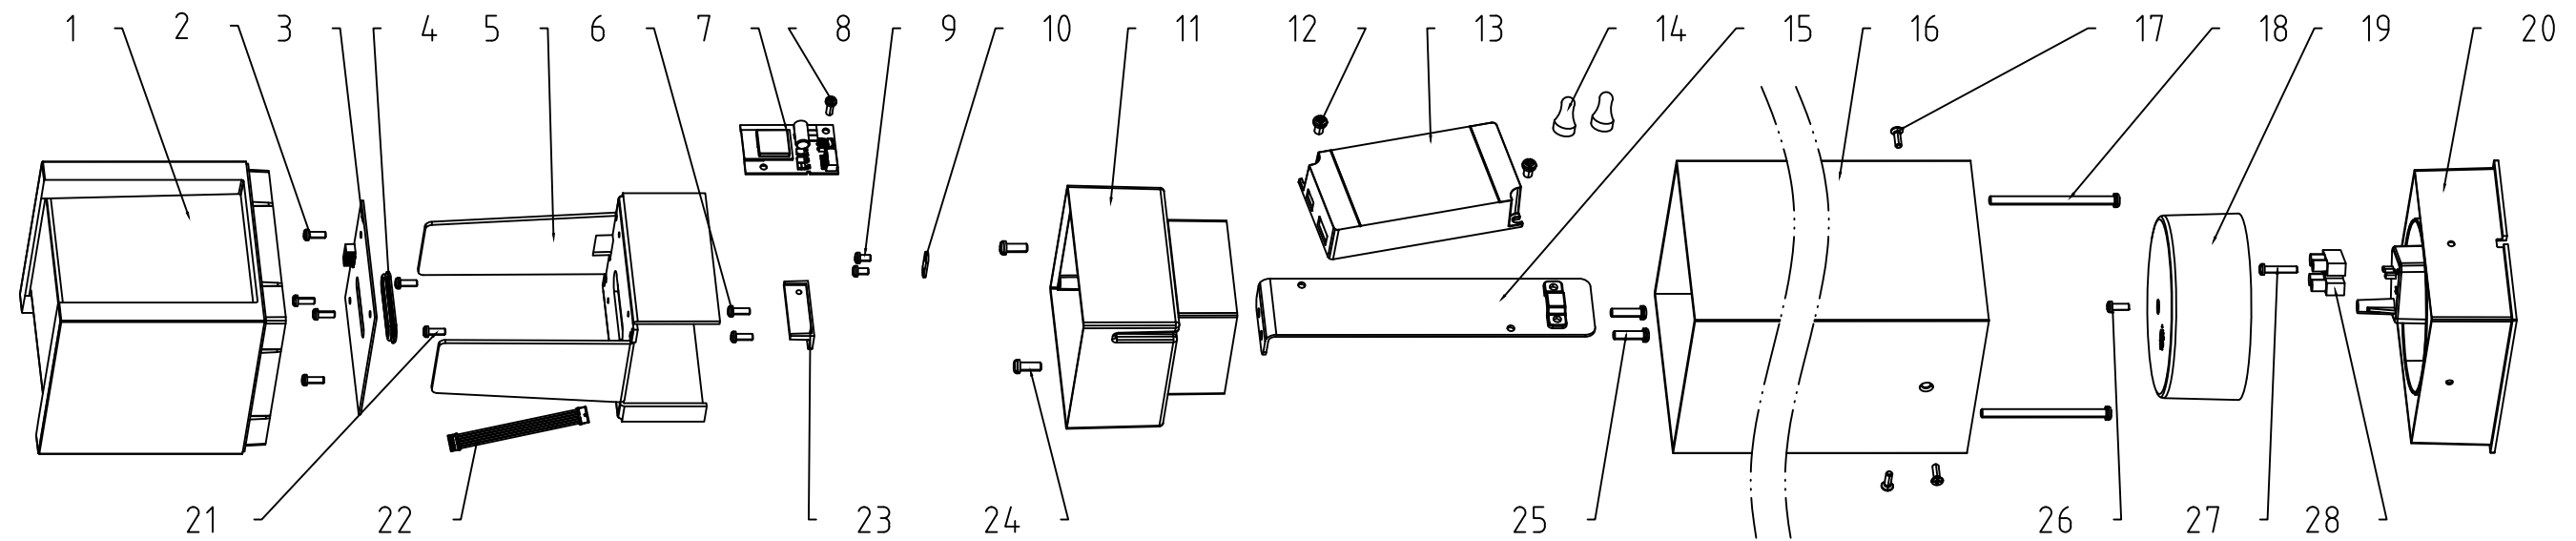

SKU	Color	Country
915005733201	BLACK	EU
915005733301	BLACK	EU

#	COMPONENT	QTY
1	HEAD	1
2	SCREW	4
3	LIGHT SOURCE - LED MODULE	1
4	GASKET	1
5	HEAT SINK	1
6	SCREW	2
7	LIGHT SOURCE - HUE CONNECT	1
8	SCREW	1
9	SCREW	2
10	CLAMPER	1
11	BOX	1
12	SCREW	2
13	CONTROL GEAR - PSU	1
14	CLOSED END CONNECTOR	2
15	SHEET BRACKET	1
16	PROFILE	1
17	SCREW	3
18	SCREW	2
19	COVER	1
20	BASE	1
21	SCREW	2
22	FLAT CABLE	1
23	BRACKET	1
24	SCREW	2
25	SCREW	2
26	SCREW	1
27	SCREW	1
28	TERMINAL BLOCK	1

Warnings

Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

#	Disassemble/dismantle steps	Tools needed
a	PULL OUT THE BASE (20) BY UNSCREWING THE SCREWS (17)	CROSS HEAD SCREW DRIVER
b	REMOVE COVER (19) BY UNSCREWING THE SCREW (26)	CROSS HEAD SCREW DRIVER
c	REMOVE TERMINAL BLOCK (28) FROM THE BASE (20) BY UNSCREWING THE SCREW (27)	CROSS HEAD SCREW DRIVER
d	REMOVE HEAD (1) BY UNSCREWING THE SCREWS (18)	CROSS HEAD SCREW DRIVER
e	REMOVE FLAT CABLE (22) FROM THE LIGHT SOURCE - LED MODULE (3)	-
f	REMOVE LIGHT SOURCE - LED MODULE (3) BY UNSCREWING THE SCREWS (2)	CROSS HEAD SCREW DRIVER
g	REMOVE GASKET (4) FROM THE LIGHT SOURCE - LED MODULE (3)	-
h	REMOVE HEAT SINK (5) BY UNSCREWING THE SCREWS (21)	CROSS HEAD SCREW DRIVER
i	REMOVE CLAMPER (10) BY UNSCREWING THE SCREWS (9)	CROSS HEAD SCREW DRIVER
j	REMOVE BRACKET (23) FROM THE BOX (11) BY UNSCREWING THE SCREWS (6)	CROSS HEAD SCREW DRIVER
k	REMOVE FLAT CABLE (22) FROM THE LIGHT SOURCE - HUE CONNECT (7)	CROSS HEAD SCREW DRIVER
l	REMOVE WIRES OF THE CONTROL GEAR - PSU (13) FROM THE LIGHT SOURCE - HUE CONNECT (7)	FLATHEAD SCREWDRIVER OR WAGO TOOL #2065
m	REMOVE LIGHT SOURCE - HUE CONNECT (7) BY UNSCREWING THE SCREW (8)	CROSS HEAD SCREW DRIVER
n	REMOVE PROFILE (16) BY UNSCREWING THE SCREWS (24)	CROSS HEAD SCREW DRIVER
o	REMOVE THE CLOSED END CONNECTORS (14)	PINCER
p	REMOVE SHEET BRACKET (15) FROM THE BOX (11) BY UNSCREW THE SCREWS (25)	CROSS HEAD SCREW DRIVER
q	REMOVE THE CONTROL GEAR - PSU (13) BY UNSCREWING THE SCREWS (12)	CROSS HEAD SCREW DRIVER

STATUS	DESCRIPTION	DESIGN ID	
2021-04-12	Fuzo Hue White EU pedestal black 1x15W Fuzo Hue White EU post black 1x15W 24V	DOC 12NC	
NAME JZ	LOCAL PART ID	SH. 1	SH.
CHECKED	DATE		A3-P