


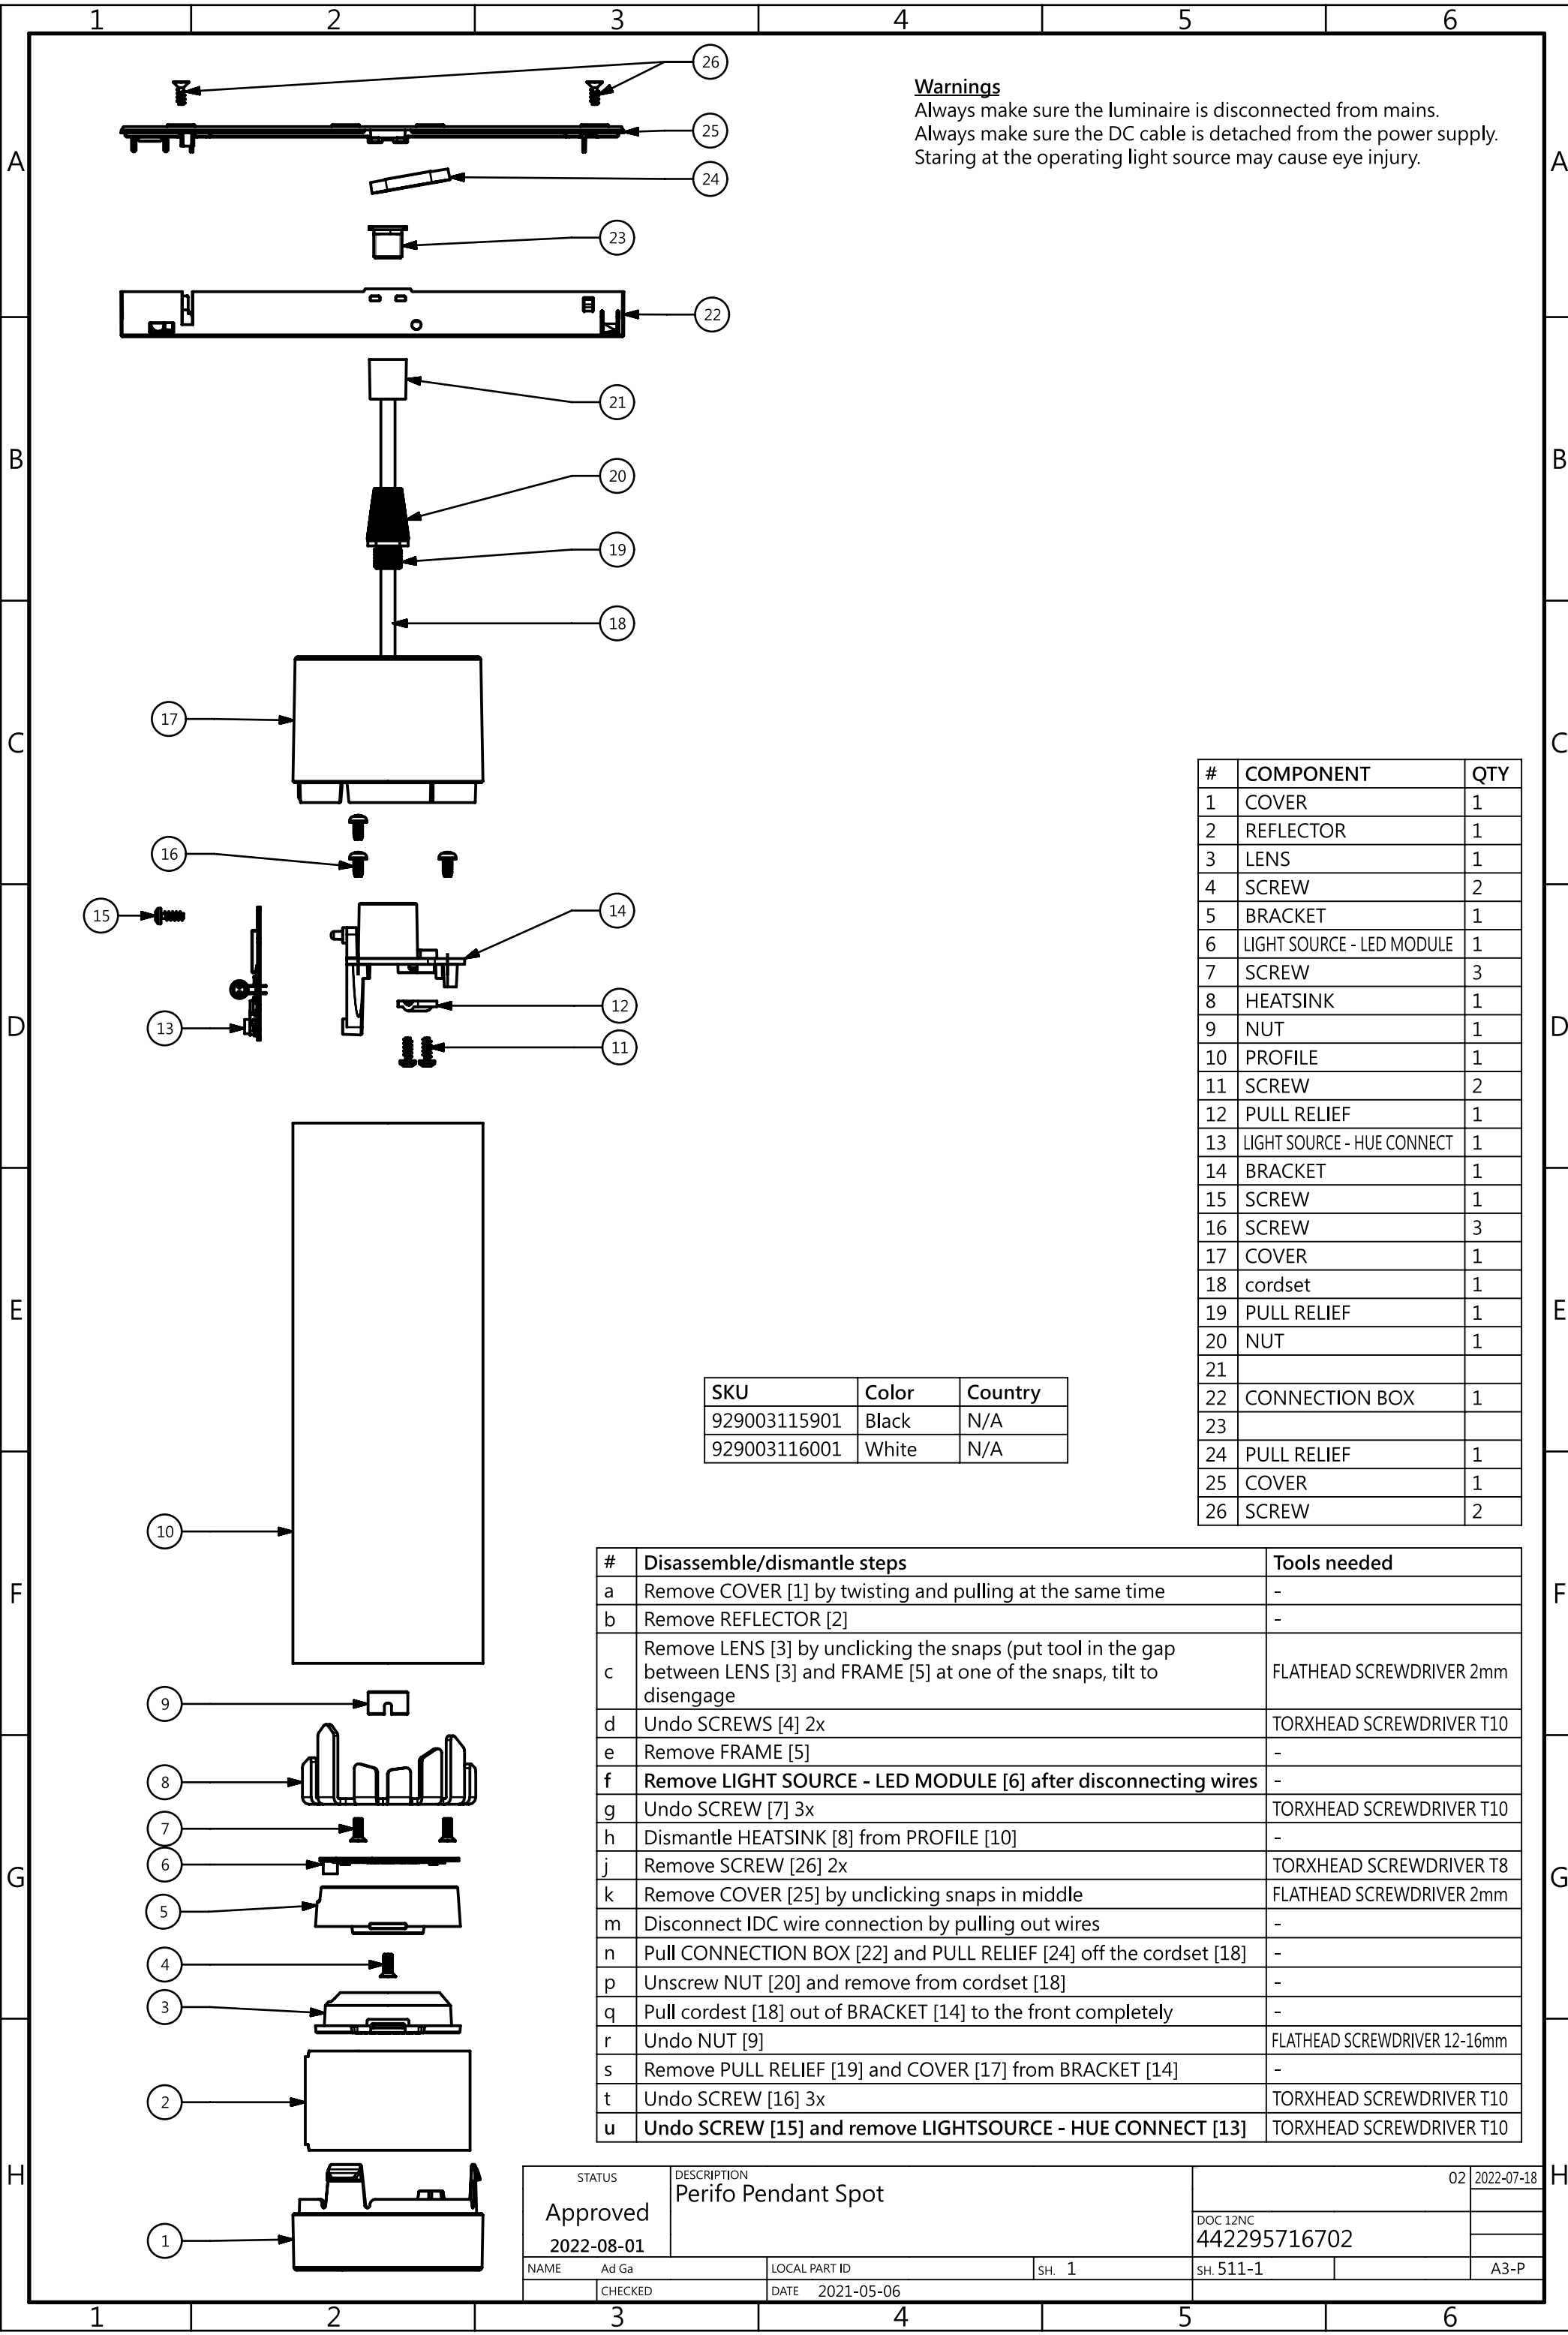

Warnings
Always make sure the luminaire is disconnected from mains.
Always make sure the DC cable is detached from the power supply.
Staring at the operating light source may cause eye injury.

#	COMPONENT	QTY
1	COVER	1
2	REFLECTOR	1
3	LENS	1
4	SCREW	2
5	BRACKET	1
6	LIGHT SOURCE - LED MODULE	1
7	SCREW	3
8	HEATSINK	1
9	NUT	1
10	PROFILE	1
11	SCREW	2
12	PULL RELIEF	1
13	LIGHT SOURCE - HUE CONNECT	1
14	BRACKET	1
15	SCREW	1
16	SCREW	3
17	COVER	1
18	cordset	1
19	PULL RELIEF	1
20	NUT	1
21		
22	CONNECTION BOX	1
23		
24	PULL RELIEF	1
25	COVER	1
26	SCREW	2

SKU	Color	Country
929003115901	Black	N/A
929003116001	White	N/A

#	Disassemble/dismantle steps	Tools needed
a	Remove COVER [1] by twisting and pulling at the same time	-
b	Remove REFLECTOR [2]	-
c	Remove LENS [3] by undocking the snaps (put tool in the gap between LENS [3] and FRAME [5] at one of the snaps, tilt to disengage)	FLATHEAD SCREWDRIVER 2mm
d	Undo SCREWS [4] 2x	TORXHEAD SCREWDRIVER T10
e	Remove FRAME [5]	-
f	Remove LIGHT SOURCE - LED MODULE [6] after disconnecting wires	-
g	Undo SCREW [7] 3x	TORXHEAD SCREWDRIVER T10
h	Dismantle HEATSINK [8] from PROFILE [10]	-
j	Remove SCREW [26] 2x	TORXHEAD SCREWDRIVER T8
k	Remove COVER [25] by undocking snaps in middle	FLATHEAD SCREWDRIVER 2mm
m	Disconnect IDC wire connection by pulling out wires	-
n	Pull CONNECTION BOX [22] and PULL RELIEF [24] off the cordset [18]	-
p	Unscrew NUT [20] and remove from cordset [18]	-
q	Pull cordset [18] out of BRACKET [14] to the front completely	-
r	Undo NUT [9]	FLATHEAD SCREWDRIVER 12-16mm
s	Remove PULL RELIEF [19] and COVER [17] from BRACKET [14]	-
t	Undo SCREW [16] 3x	TORXHEAD SCREWDRIVER T10
u	Undo SCREW [15] and remove LIGHTSOURCE - HUE CONNECT [13]	TORXHEAD SCREWDRIVER T10

STATUS		DESCRIPTION		02 2022-07-18	
Approved		Perifo Pendant Spot			
2022-08-01				DOC 12NC	
				442295716702	
NAME	Ad Ga	LOCAL PART ID	SH. 1	SH. 511-1	A3-P
	CHECKED	DATE	2021-05-06		