


PHILIPS
hue



#	COMPONENT	QTY
1	Foot	3
2	Screw	2
3	Screw	2
4	DC Cable	1
5	Housing	1
6	Screw	2
7	Pull relief	1
8	Frame	1
9	LIGHT SOURCE - LED MODULE	3
10	Lens B	1
11	Lens M	1
12	Lens T	1
13	Screw	6
14	Screw	1
15	Spring washer	1
16	LIGHT SOURCE - HUE CONNECT	1
17	Connection Power cable	1
18	Shield	1
19	Window	1

#	Disassembly/dismantle steps	Tools needed
a	Release Cable (4) from the notch	-
b	Remove all Feet (1) and unscrew both Fasteners (2)	TORXHEAD SCREW DRIVER T8
c	Pierce the label where it is marked with (X) and unscrew both Fasteners (3)	TORXHEAD SCREW DRIVER T8
d	Slide the Window (19) off from the Housing (3)	-
e	Remove the Shield (18) from the Frame (8)	-
f	Unscrew the Fastener (14), unplug both Cables (4 and 17) from HUE Connect (16)	TORXHEAD SCREW DRIVER T10 and WAGO 2065
g	Unscrew all six Fasteners (13), unplug the Cable (17) from all three LED moduls (9)	TORXHEAD SCREW DRIVER T10

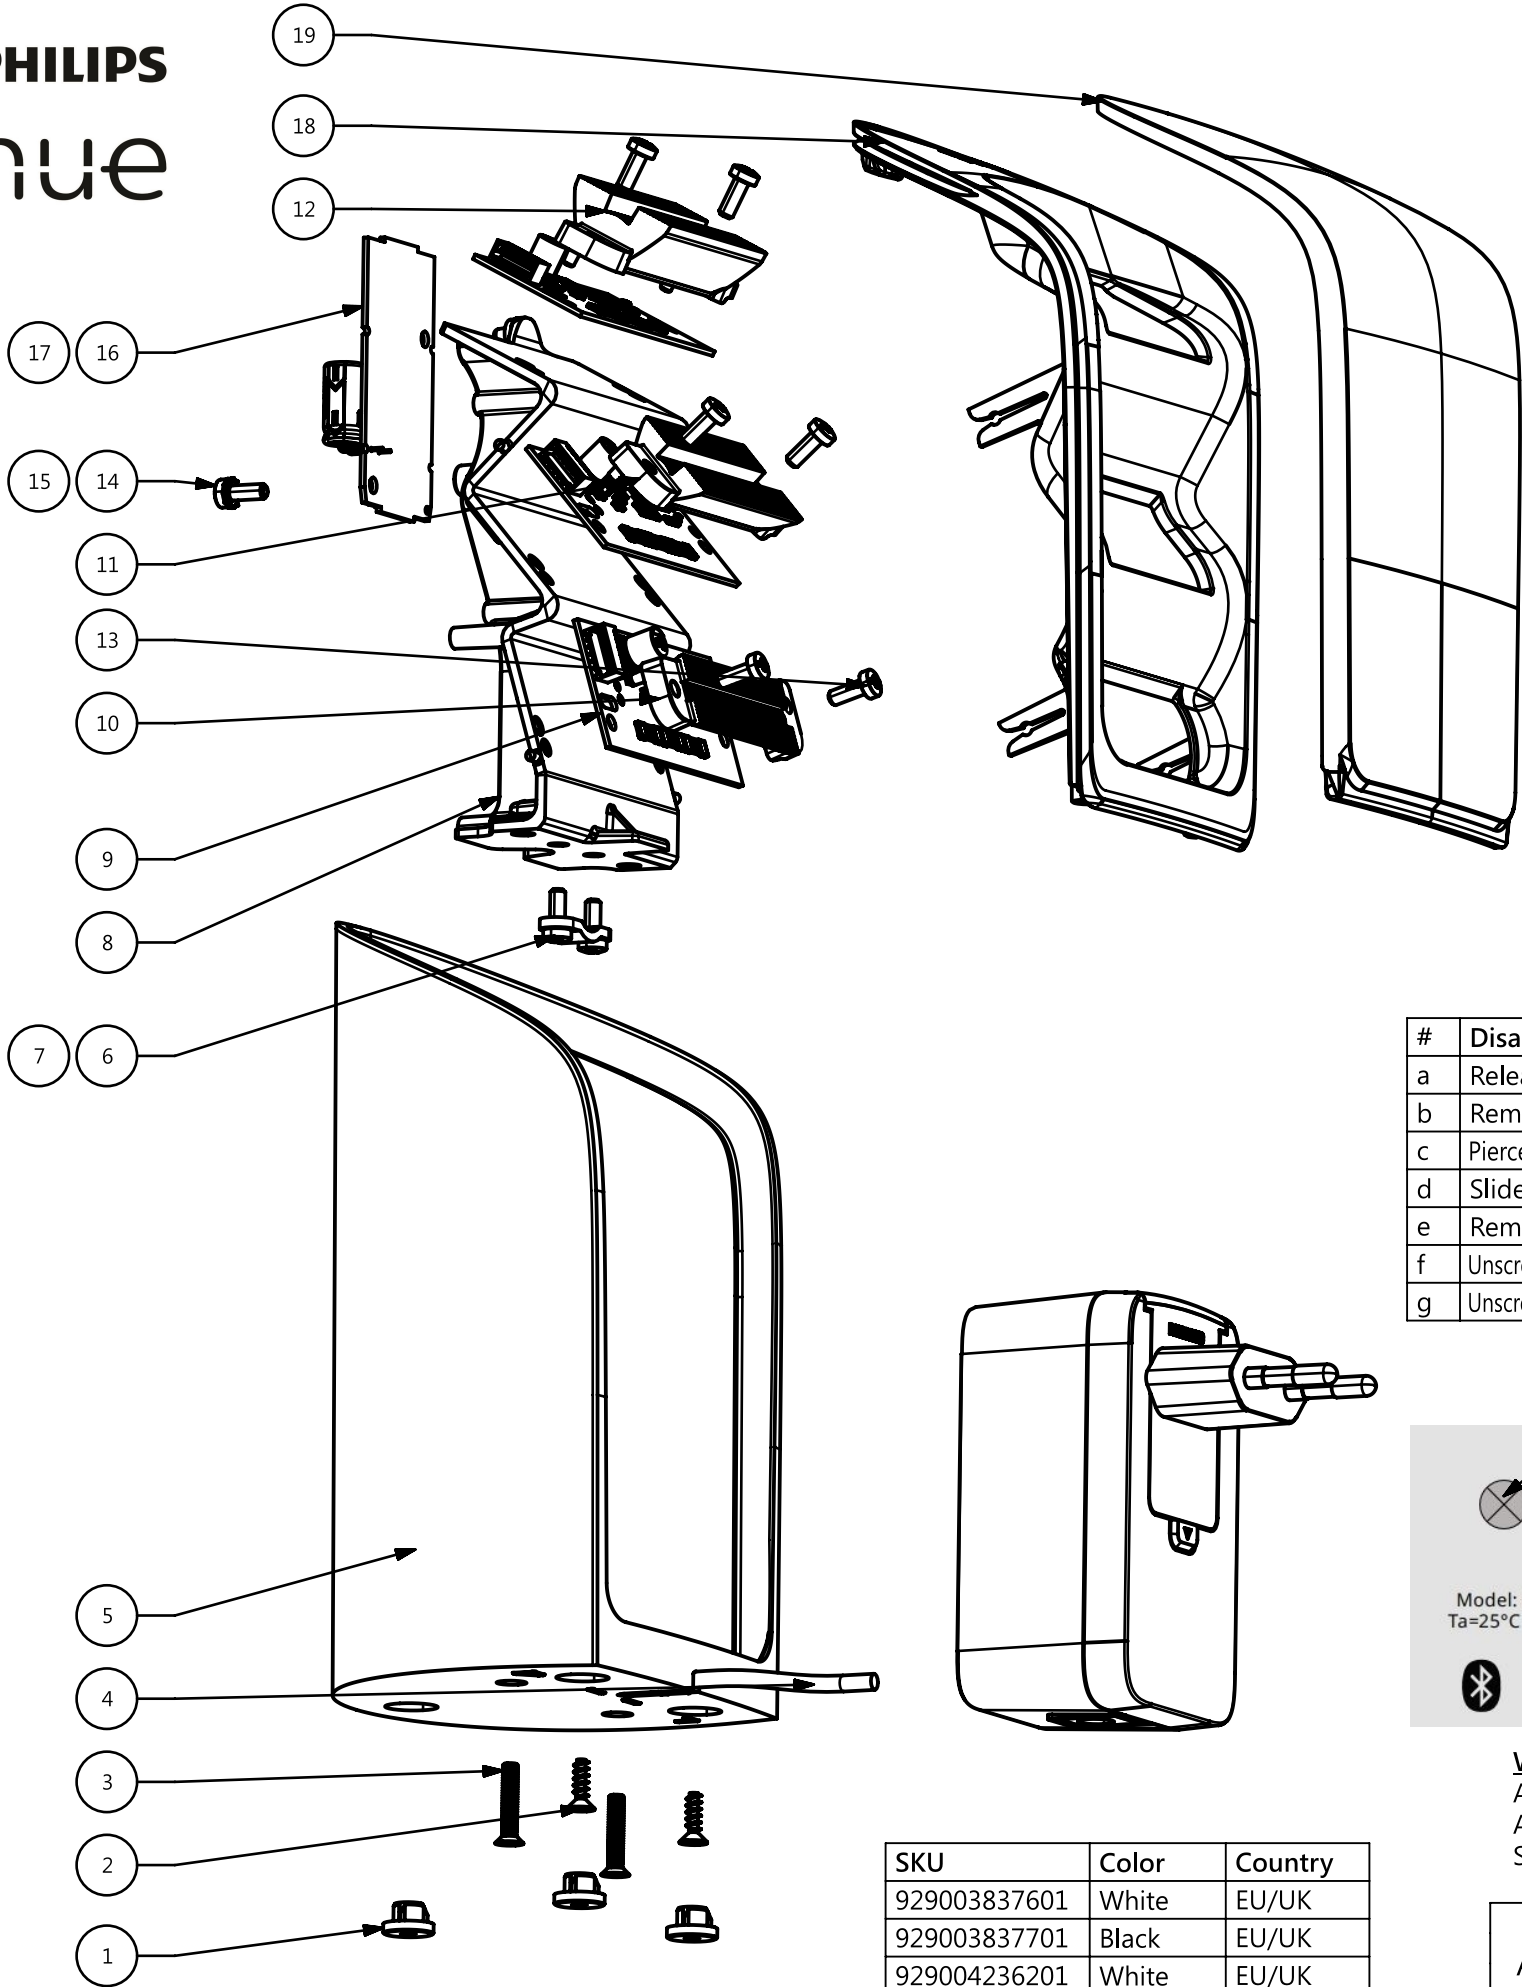

- A specific Wago tool #2065 can be ordered separately for wire insertion and release tool:



Warnings

Always make sure the luminaire is detached from the mains socket
Always make sure the DC cable is detached from the power supply
Staring at the operating light source may cause eye injury

SKU	Color	Country
929003837601	White	EU/UK
929003837701	Black	EU/UK
929004236201	White	EU/UK
929004236301	Black	EU/UK

STATUS Approved 2025-01-22	DESCRIPTION SLR Hue Play wall washer white	DESIGN ID D0156218	01	2025-01-14
		DOC 12NC 929003837601		
NAME Tom Ob	LOCAL PART ID	SH. 1	SH. 511-1	A3-L
CHECKED	DATE 2025-01-14	CONFIDENTIAL, PROPERTY OF: © 2024 Signify Holding		