


ALKCO

Germicidal UV

Louvered wall mount

1 lamp T5 Philips TUV

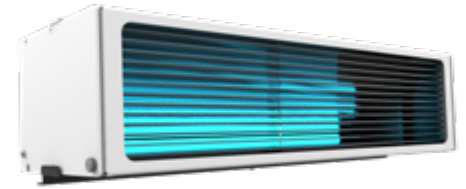

The ALKCO germicidal UV louvered wall mount utilizes Philips UV-C technology to offer one layer of disinfection measures against bacteria, viruses, and fungal spores. Air disinfection can play an important role in a broad range of applications such as schools, offices, industry, (food) retail and museums.

Project: _____
 Location: _____
 Cat.No: _____
 Type: _____
 Lamps: _____ Qty: _____
 Notes: _____

Ordering guide


Example: UWL120-UNV-1/1-EB

| Family | Lamp Quantity | Lamp Type/Wattage | Voltage | Ballast | Options |
|---------------------------------------|---------------|-----------------------|--------------------------------|--------------------------------------|---|
| UWL | 1 | 20 - | UNV - | 1/1-EB - | |
| UWL Germicidal UV louvered wall mount | 1 One lamp | 20 20W T5 Philips TUV | UNV Universal voltage 120-277V | 1/1-EB One 1 lamp electronic ballast | blank White external housing BK Black external housing |

General Notes

- All options factory installed.
- All accessories are field installed.
- Lamps are included with luminaire but shipped separately.

Dimensions

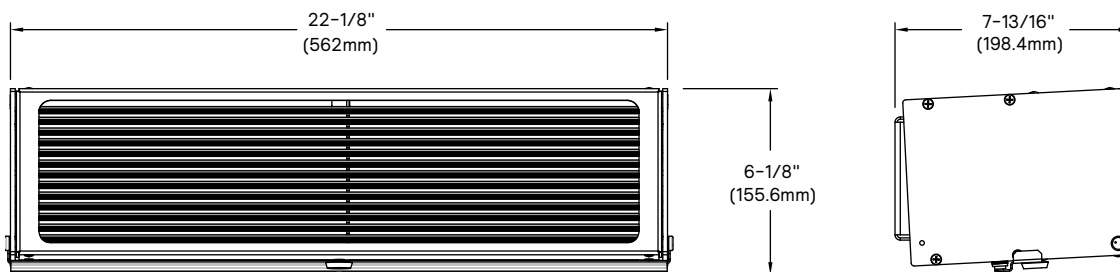

Mounting height

8'3" mounting to bottom of fixture.



UWL Germicidal UV louvered wall mount

1 lamp T5 Philips TUV

Germicidal UV

- UV-C radiation can inactivate bacteria, viruses, and spores, which can leave them harmless.¹
- UV-C technology has been used effectively in buildings for more than 35 years.²
- This UV-C product is intended to be used for the disinfection of air except for in medical locations.
- Philips TUV germicidal T5 lamps produce a peak output at 253.7nm.

Construction/Finish

- White polyester powder coated housing and end caps.
- Electronic ballast(s).
- Locking lampholders provide positive contact and secure retention of lamps.
- Specular aluminum reflector.
- Optional black external housing (BK option).
- Wall mounting plate provided.
- Lamps are included with luminaire but shipped separately.

Disclaimer

This product's effectiveness in the inactivation of certain viruses, bacteria, protozoa, fungi or other harmful micro-organisms is as described in the product documentation. Signify and its group of companies do not promise or warrant that the use of the products will protect or prevent any user from infection and/or contamination with any viruses, bacteria, protozoa, fungi, illness or disease. The products are not approved for, are not intended and must not be used as medical devices. In addition to and without limitation of any exclusions or limitations of liability of Signify and its group of companies as set forth in any agreement for the sale, distribution or otherwise making available of the products, Signify and its group of companies shall have no responsibility or liability whatsoever for any claim or damage that may arise from or relate to any use of the products outside of their intended use.

Warnings and Cautions

- This UV-C product is not approved and/or certified as a medical device.
- This UV-C product cannot be used to disinfect the surfaces of medical devices (such as medical


devices in a room, surgical masks and/or surgical respirators). The device cannot be used in medical settings. The device cannot be used for disinfection of human skin.

- UV-C radiation can damage the human eye and can cause severe sunburn-like reaction to human skin.
- UV-C can have adverse effects on organics such as plants and animals.
- UV-C radiation may damage or discolor materials such as plastics and rubber, among others.
- UV-C products should be installed and maintained by a trained technician following installation instructions and user manual.
- UL 1598 listed GUV fixture
- UL1598 annex L states it is the responsibility of the installer to ensure that persons will not be exposed to excessive UV or optical radiation during equipment operation. This will require the installer to conduct an assessment of irradiance levels in the surrounding occupied spaces prior to occupancy.

Warranty

- 1 year limited warranty (signify.com/warranties)

Performance

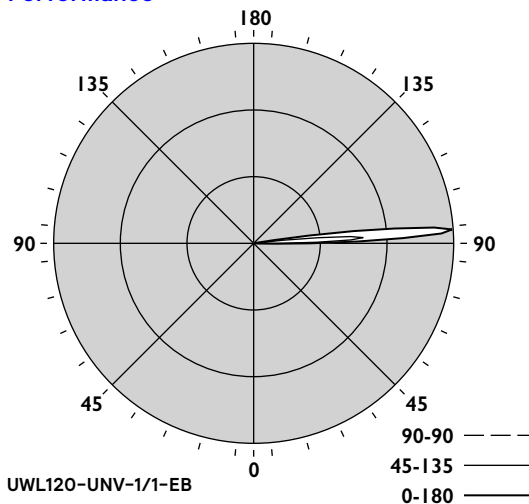

UWL120-UNV-1/1-EB
 Lamp Type 20W T5 TUV
 Input Watts 19.0
 Irradiance (mW) 556.5

1. Fluence (UV Dose) Required to Achieve Incremental Log Inactivation of Bacteria, Protozoa, Viruses and Algae Revised, updated and expanded by Adel Haji Malayeri, Madjid Mohseni, Bill Cairns and James R. Bolton. With earlier contributions by Gabriel Chevretil (2006) and Eric Caron (2006) With peer review by Benoit Barbeau, Harold Wright (1999) and Karl G. Linden
2. EPA Report, "Building Retrofits for Increased Protection Against Airborne Chemical and Biological Releases" Pg. 56

Louvered Wall Mount

General Design Guidelines*

- Minimum 8' 3" mounting height to bottom of fixture
- Minimum spacing between fixtures is 8'
- Recommended to not have obstructions or walls less than 20' in front of fixture
- Minimum distance from the ceiling to the top of the fixture 9"
- Estimate of minimum 325sqft area of disinfection per fixture

* For specific application design support, please contact Signify directly. Above estimates are based on a UV-C radiation ceiling reflectance of 15% and 8 hour maximum exposure time. If ceiling reflectance is above 15%, please contact Signify for application design support. A list of common ceiling finish reflectances can be found in the Appendix section of the Commission Guidelines.

Contaminant Removal Efficiency**

| Room Size Examples | Dimensions (WxL) | Min Ceiling Height | Fixture Qty | Log1: 90% | Log2: 99% | Log3: 99.9% |
|--------------------|------------------|--------------------|-------------|-----------|-----------|-------------|
| Hallway*** | 4'x43' | 9' | 1 | 31 min | 61 min | 92 min |
| Medium Room | 24'x28' | 9' 6" | 2 | 21 min | 41 min | 62 min |
| Large Room | 30'x57' | 9' 6" | 4 | 28 min | 56 min | 83 min |

** Adapted from CDC (1994). Guidelines for preventing the transmission of Mycobacterium tuberculosis in health care facilities.

*** 2 hour maximum exposure time in Hallway example (other room examples are for 8 hour maximum exposure time).

