



# TUV Amalgam XPT- Maximum efficiency, independent of temperature

## TUV Amalgam XPT systems

Philips TUV Amalgam XPT system consists of an electronic driver that operates one TUV Amalgam XPT lamp, mounted in a sleeve. The electrical specifications are tailored to the lamp, ensuring an optimized performance of the Philips TUV Amalgam XPT system. Thanks to extensive testing before a lamp system is released, we can ensure maximum reliability and long lifetime. Signify offers the XPT system solution for the TUV 130W XPT, TUV 180W XPT, TUV 200W XPT and TUV 325W XPT lamps. For the other lamp types we support in advising the correct drivers available in the market.

### Benefits

- Security of strong UV-C output over the useful lifetime of the lamp
- Extreme reliability of driver; with annual failure rate of less than 1%
- Approximately 10% energy savings, because lamps can be dimmed to reach the same UV output compared to similar lamps on the market
- High system efficacy because it is not required to over-design the purification system to maintain effectiveness of disinfection
- Best environmental choice because of long reliable life, less waste and industry leading low amount of mercury
- High efficiency during dimming thanks to unique amalgam temperature control of the 800W lamps

# TUV Amalgam XPT systems

## Features

- Short-wave UV radiation with a peak at 253.7 nm (UVC)
- Special amalgam used for highest efficiency over wide temperature range
- Protective inside coating ensures constant UV output over the complete lifetime of the lamp
- Philips electronic driver available for a perfect interface
- Minimized amount of mercury
- Universal burning position possible for the T6 range, depending on lamp type and sleeve dimensions
- Tailor-made solutions possible

## Application

- Municipal drinking water treatment equipment
- Process water treatment equipment
- Swimming pool units

## Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.
- DANGER: Risk Group 3 Ultra Violet product. These lamps emit high-power UV radiation that can cause severe injury to skin and eyes. Avoid eye and skin exposure to unshielded product. Use only in an enclosed environment which shields users from the radiation.
- Plants and/or materials that are exposed to UV-C and/or ozone for a long time may become damaged and/or discolored.


## Versions



XPPR XDTUVXPT 0008

TUV Amalgam XPT systems

Dimensional drawing

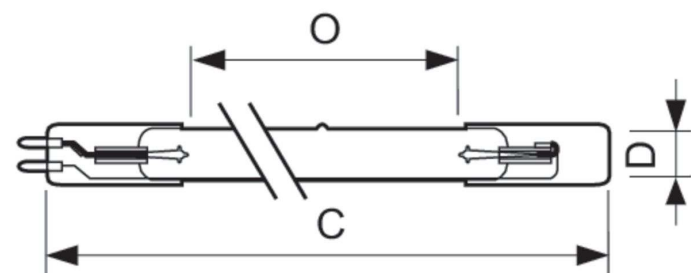

Product	D	O	C (max)
TUV 130W XPT SE UNP/20	19 mm	740 mm	842 mm

